

eureka!

 
Invented for the way you clean™

150 Series

OWNER'S GUIDE

Guía del Propietario

Le Guide du Propriétaire

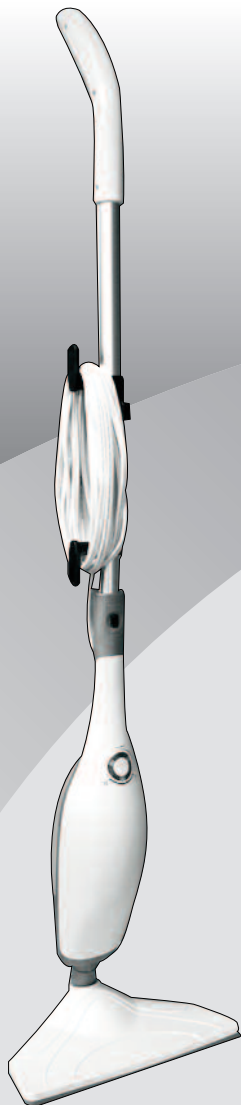

Thank you for purchasing your new Eureka Steam Cleaner!
¡Gracias por la compra de su nuevo limpiador a vapor Eureka!
Merci d'avoir acheté votre nettoyeur à vapeur Eureka!

Before returning, call
Eureka customer service

Antes de enviar de regreso, llame al servicio al cliente de Eureka

Avant de le retourner, appelez le service à la clientèle Eureka

HELPLINE LÍNEA DE AYUDA LIGNE D'AIDE

1-800-282-2886

8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

8 a.m. a 7:30 p.m. (CST), de lunes a viernes
10 a.m. a 6:30 p.m. (CST), sábado y domingo

8 h à 19 h 30 (CST), lundi au vendredi
10 h à 18 h 30 (CST), samedi et dimanche



Promotional code: eurekaad13

Special Offer – receive 15% off parts and accessories when ordering online. Promotion excludes cleaners.

Oferta especial – descuento de 15% cuando compre partes y accesorios por internet. La promoción no incluye a los limpiadores.

Offre spéciale – recevez 15% de réduction sur les pièces et les accessoires lorsque vous commandez en ligne. La promotion exclut les nettoyeurs.

www.eureka.com

Multi-surface handheld
and floor steamer

Limpiador a vapor portátil y para pisos,
para superficies múltiples

Nettoyeur à vapeur de plancher et
manuel multi-surfaces

Where to find important information

Keep this information

Write the model, type and serial number here:

Date of purchase (keep your receipt) _____

Model number and type _____

Serial number _____

Find these numbers on a label on the lower back side of the steam cleaner. Refer to these numbers when ordering parts and accessories or if service is needed.



Before you start your steam cleaner

Read these instructions for assembly and use. This Owner's Guide provides important instructions to prolong the life of your Eureka steam cleaner.

Inspection

Carefully unpack and inspect your new Eureka steam cleaner for shipping damage. Each unit is tested and thoroughly inspected before shipping. For instructions regarding any shipping damage, call Eureka Customer Service **HELPLINE 1-800-282-2886** immediately.

Table of Contents

Important safeguards	1-2
What's in the carton	3
How to identify parts of steam cleaner	4
Easy assembly	4
How to use floor steamer	5
How to use handheld steamer	6
Window squeegee, jet nozzle and brush	
Problem solving	7
Eureka limited warranty information	7
Spanish owner's guide	8-15
French owner's guide	16-23
Order forms and parts list	24-25



Follow caution information wherever you see this symbol.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER

WARNING



- Do not use outdoors.
- Do not leave steam cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended accessories.
- Do not use with damaged cord or plug. If steam cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord. Do not use cord as a handle. Do not close a door on cord or pull cord around sharp edges or corners. Do not run steam cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or steam cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked.
- Store your steam cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Do not use without floor pad in place.
- Use extra care when cleaning stairs.
- Never direct steam towards people, animals or plants.
- Do not immerse the steam cleaner into water or other liquids. Always unplug the power cord from the electrical socket when filling the steam cleaner.
- Never put the descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe or use.
- Before filling with water, proceed as follows; (1) turn off the steam cleaner, (2) unplug the power supply, (3) slowly lift up cap and wait 5 seconds before refilling.
- Do not leave steam cleaner unattended.
- Do not put hands or feet under steam cleaner.

SAVE THESE INSTRUCTIONS

GENERAL INFORMATION

The steam cleaner is designed as a complete change from old methods of manual floor cleaning. This appliance is designed to obtain excellent floor cleaning and effective sanitation of these areas.

Grounding instructions

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

This appliance is equipped with a cord having an equipment grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Figure A. A temporary adapter which looks like the adapter illustrated in Figure B may be used to connect this plug to a two-pole receptacle, as shown, if a properly grounded outlet is not available.

The temporary adapter should be used only until a properly grounded outlet, Figure A, can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

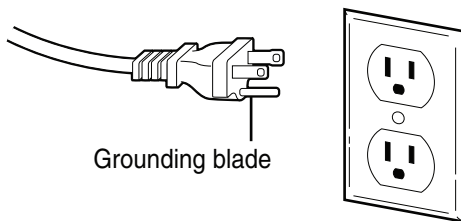 


Fig. A


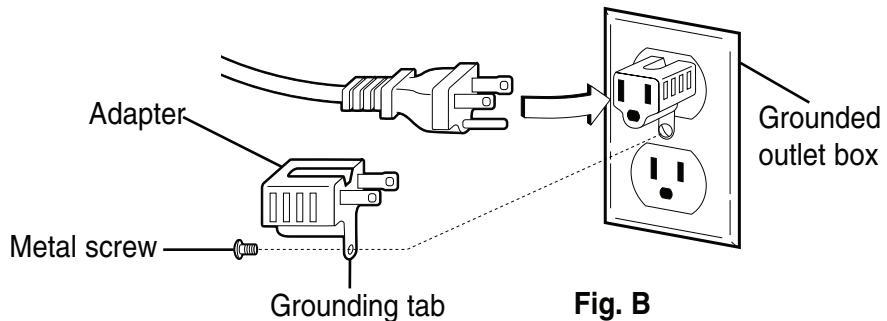 



Fig. B

 What's in the carton

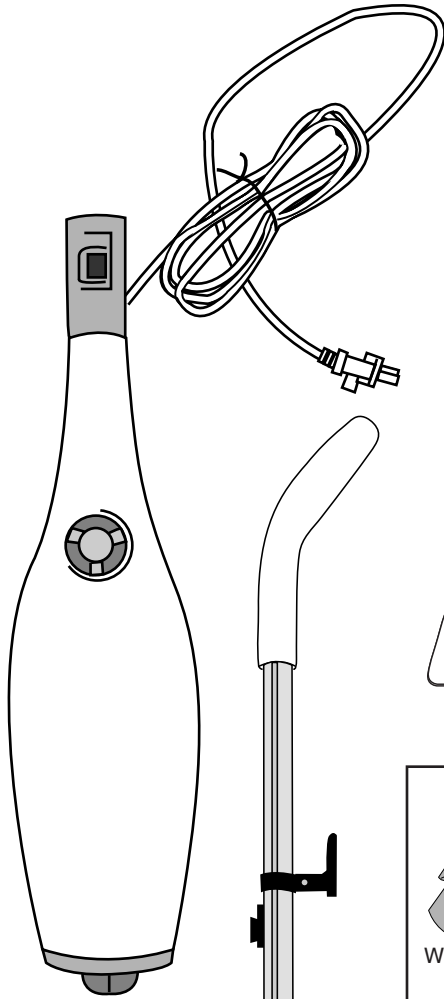

Steam cleaner

 
Telescoping handle

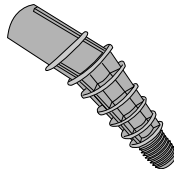


Jet nozzle



 
Important safeguards

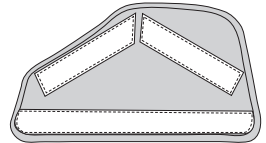


Microfiber floor pad (blue)

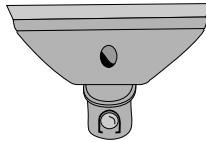 


Window squeegee

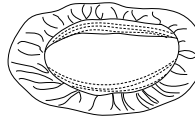 

Squeegee cover

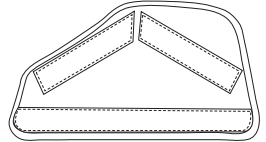 


Cotton floor pad (white)

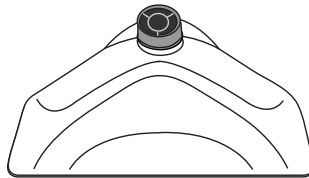 

Floor nozzle



 
Brush

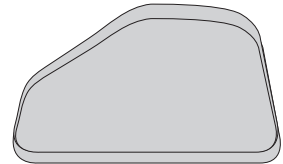


Storage tray

SPECIAL FEATURES

 
Available on some models




Wire brush

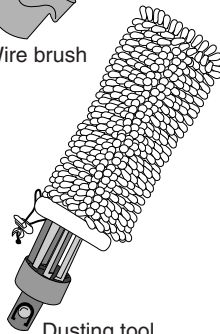 


Dusting tool and microfiber cover

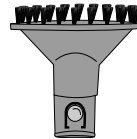 

Large scrubber brush

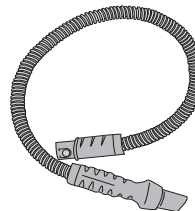 


Extension hose

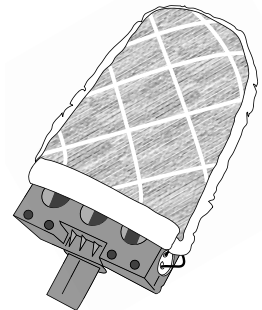 





Wedge cleaning tool and cover

 How to identify parts of steam cleaner

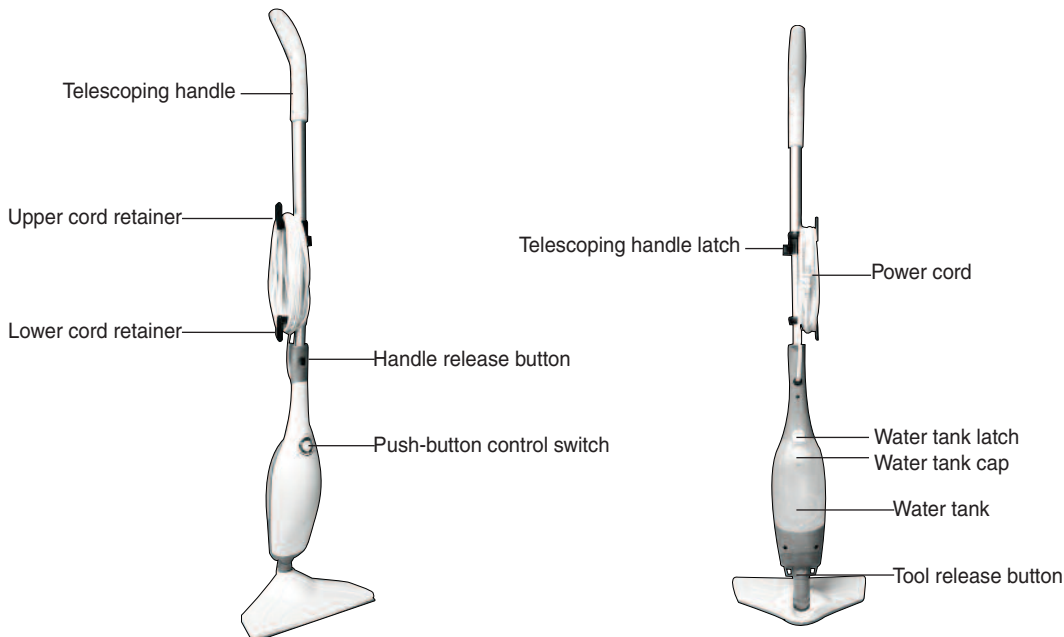


Easy assembly

    - 1) Align button on floor nozzle with bottom of steamer. Push to attach (Fig. 1).
- 2) Lift handle latch (Fig. 2) and extend telescoping handle. Close latch to lock handle.
- 3) Push handle onto steamer until release button snaps into opening (Fig.3).
- 4) Lift handle latch and adjust handle height to comfortable position (Fig. 2).
- 5) Wrap power cord around upper and lower cord retainers (Fig. 4).

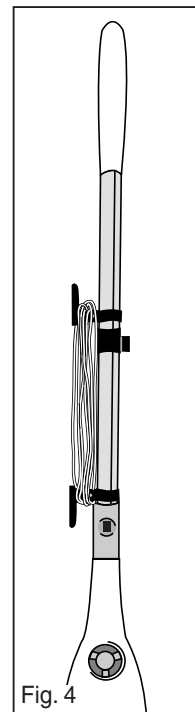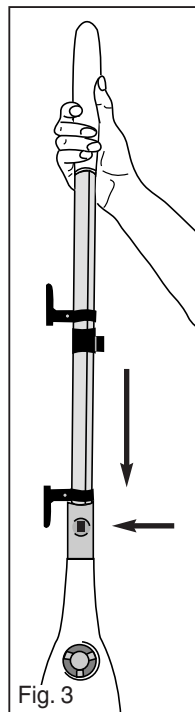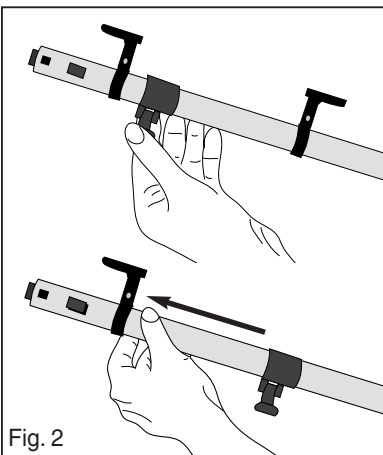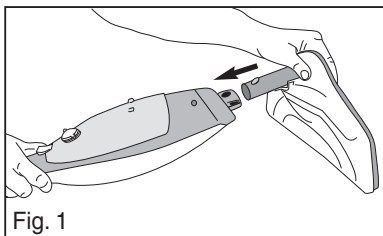

How to use floor steamer

The Eureka steam cleaner is designed for use on hard-surface floors such as ceramic, stone, marble, vinyl, linoleum, and sealed hardwood. Do not use on unsealed wood floors. If uncertain, test in an isolated area such as a closet. NOTE: Heat and steam may remove the sheen on waxed floors or on some no-wax floors. Check use and care instructions from flooring manufacturer.

-  • **Be sure steamer is turned off and unplugged before filling water tank.**
- **Fill steamer with clear water only. Do not use chemicals, soap or detergent.**
- **Never use floor steamer without floor pad.**
- **Always direct steam away from yourself. Never direct steam toward people, animals or plants.**

Using your steamer

- 1) Sweep or vacuum floor before using steamer.
- 2) Push up latch and remove water tank (Fig. 1).
- 3) Lift cap and fill tank with clean tap water. Do not exceed maximum fill line (Fig. 2). In areas with hard water, use distilled water for better performance.
- 4) Put water tank back in place.
- 5) Place pad on floor with Velcro loop strips facing up. Set floor nozzle onto pad (Fig. 3).
- 6) Plug in. Push button once for low steam; twice for high steam. Push third time to turn off (Fig. 4).
- 7) Hold down floor nozzle and pull handle back to comfortable angle (Fig. 5).
- 8) To refill steamer, turn off and unplug. Allow water tank to cool before removing.
- 9) To remove pad, step on pad lip and lift off steamer (Fig. 6).

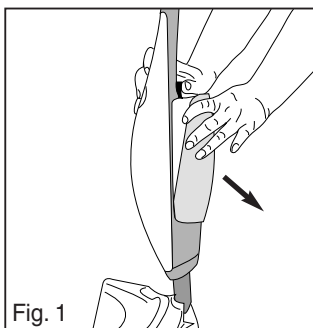 


Fig. 1

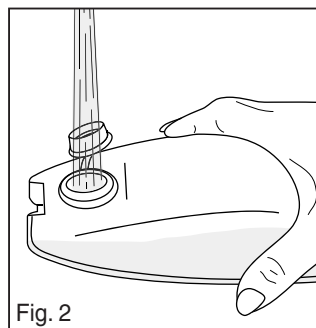 


Fig. 2

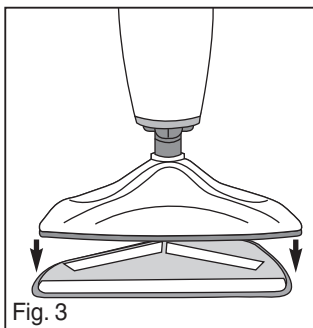 


Fig. 3

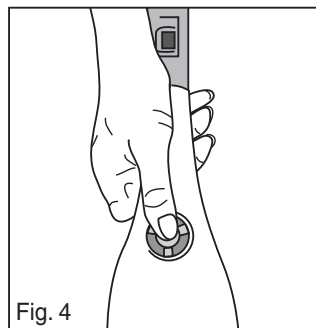 


Fig. 4

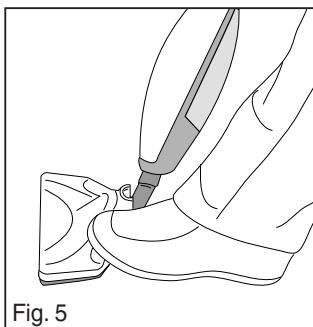 


Fig. 5

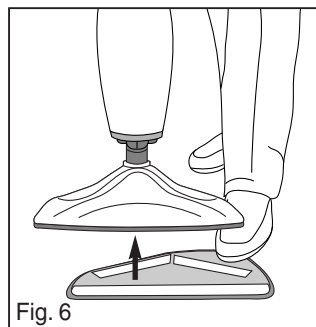 



Fig. 6

The steamer can kill dust mites and some types of bacteria when used properly. To disinfect a specific area, position steamer over the area for minimum of eight seconds. This allows the floor under the steamer to reach approximately 170°F. Use this procedure to disinfect floors in bathrooms, pet sleeping quarters, etc.

-  **Do not leave cleaner standing on the floor. If you notice a whitish 'halo,' remove it with a few drops of vinegar.**

How to use handheld steamer



Be sure steamer is turned off and unplugged before attaching tools.

To use steamer in handheld position:

- 1) **Remove handle.** Push handle release button and pull handle off steamer (Fig. 1).
- 2) **Remove floor nozzle.** Push tool release button and pull off floor nozzle (Fig. 2).
- 3) **Attach tool.** Align button with bottom of steamer. Push to attach (Fig. 3).
- 4) **Remove tool.** Push release button and pull off (Fig. 2).

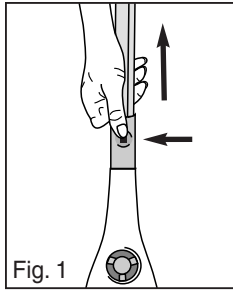 


Fig. 1

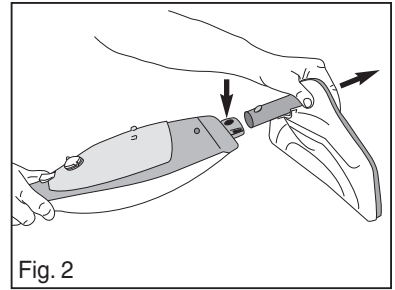 


Fig. 2

Window Squeegee

- Use for windows and mirrors (Fig. 4).
- Use squeegee cover to scrub surfaces (Fig. 5).



Squeegee cover will be hot after use. Turn steamer off and allow to cool before removing cover.

Jet nozzle

- Align button with bottom of steamer. Push to attach.
- Use around stove burners, faucets, toilet base – anywhere you need a concentrated jet of steam (Fig. 6).

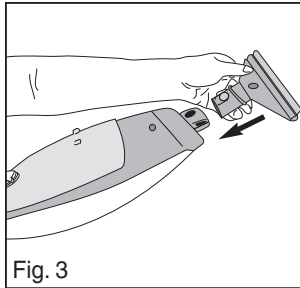 


Fig. 3

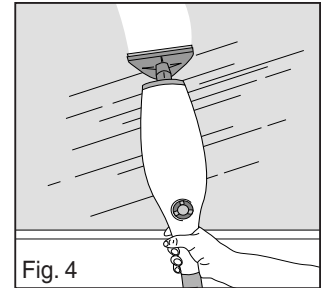 


Fig. 4

Brush

- Screw onto jet nozzle (Fig. 7).
- Use to scrub grout lines and other small places (Fig. 8).

Caring for your steam cleaner

- Unplug and allow steamer to cool before storing.
- Always empty water tank after use.
- To store, attach handle and floor nozzle. (see page 4, 'easy assembly.'). Store steamer upright in storage tray.
- Wash floor pad in warm water. Use only liquid soap; do not use fabric softener. Dry on low setting or dry flat.

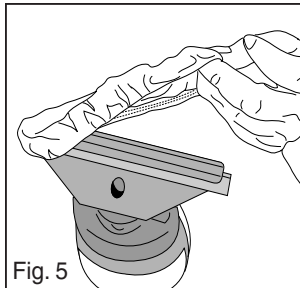 


Fig. 5

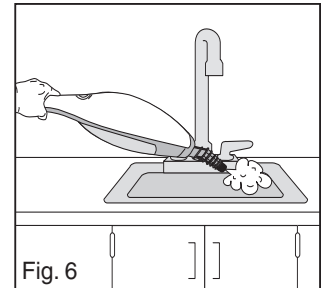 


Fig. 6

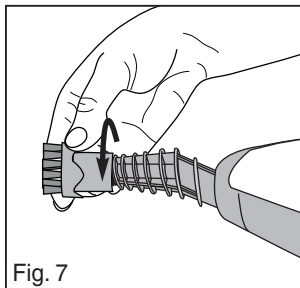 


Fig. 7

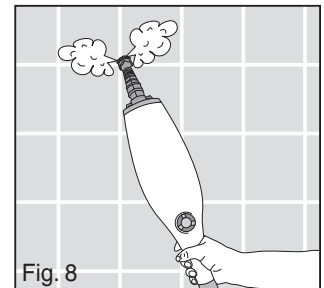 


Fig. 8

Problem solving

Problem	Cause	Solution
Steamer will not start.	Power plug	Push plug securely into outlet, try another outlet, or check circuit breaker.
	Control button in 'off' position	Push button once for low steam; twice for high steam.
	No water in tank	Fill water tank. See page 5, Using your steamer.
Steamer will not make steam.	No water in tank	Fill water tank. See page 5, Using your steamer.
Steamer leaves water on floor.	Floor pad too wet	Change floor pad. If wood floor, dry the floor before proceeding.
Steamer leaves whitish halo on vinyl floor.	Steamer left standing in one spot too long	Remove halo with a few drops of vinegar.

The Eureka limited warranty

What this warranty covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions:

What this warranty does not cover

- Parts of the cleaner that require replacement under normal use.
- Damages or malfunctions caused by negligence, abuse, or use not in accordance the the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What Eureka will do

Eureka will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. **As a matter of warranty policy, Eureka will not refund the consumer's purchase price.**

Warranty registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining warranty service

To obtain warranty service you must return the cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station. For the location of the nearest Eureka Authorized Warranty Station or for service information visit www.eureka.com, write or telephone toll free:

USA: 1-800-282-2886

Electrolux Home Care
North America Service Division
P.O. Box 3900
Peoria, IL 61612

Mexico: (55) 5343-4384

Electrolux Home Care

Canada: 1-800-282-2886

Electrolux Home Care
North America Service Division
5855 Terry Fox Way
Mississauga, Ontario L5V 3E4

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station. Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

Further limitations and exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall the manufacturer be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which may vary by state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>