

# CASIO Electronic Dictionary Quick Guide

The contents of this Quick Guide apply to the CASIO XD-SP and XD-GP Series Electronic Dictionaries. Most illustrations and screen shots show the XD-SP6600.

## Loading Batteries for the First Time

Before using your electronic dictionary, load two LR03 AAA-size alkaline batteries.

- Remove the battery cover.**
  - Pressing at the two points shown in the illustration, slide the cover in the direction indicated by the arrows.

- Load two batteries.**
  - Press the springs with the (+) ends.
  - Press the (+) ends down so the batteries are above the ribbons.
  - Make sure the (+) and (-) ends are facing correctly and that the springs are pressed straight down.

- Pull the stylus out of the battery cover and then replace the battery cover.**

- Use the stylus to press the RESET button on the back of the dictionary.**
  - Do not use a toothpick, lead pencil, or other breakable object.

- Unfold the electronic dictionary.**

- On the メインパネルコントラスト設定 (Main Panel Contrast Adjustment) screen, use [Left] and [Right] to adjust display contrast. Press [Enter/Decision] (Set).**

- On the メインパネル調整 (Main Panel Adjustment) screen, use the stylus to touch the centers of the four cross marks.**
  - Touching the center of the fourth cross displays the handwriting panel contrast adjustment screen.

- On the 手書きパネルコントラスト設定 (Handwriting Panel Contrast Adjustment) screen, use [Left] and [Right] to adjust handwriting panel contrast. Press [Enter/Decision] (Set).**

- On the handwriting panel, use the stylus to touch the centers of the four cross marks.**

 
- Touching the center of the fourth cross displays the メニュー (MENU) screen.**

## Turning Power On and Off

- Press the ON/OFF key to turn on power.**
  - Power also turns on when you press a dictionary/mode key.
- Press ON/OFF again to turn off power.**
  - Power also turns on and off when you open and close the electronic dictionary's panels.

## General Guide

**Handwriting Panel**  
For handwriting of characters for input. This panel also displays buttons that you can tap to perform various operations.

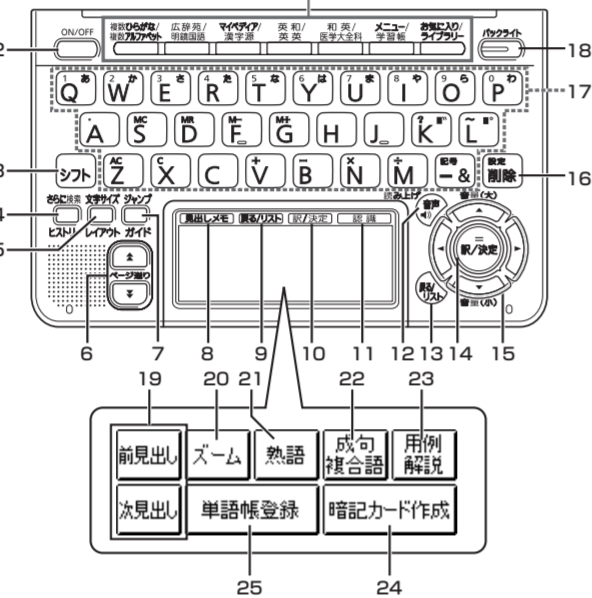

- Dictionary/mode keys**  
Toggle between the initial screens of the two dictionaries/modes assigned to each key.
- ON/OFF Key**  
Toggles power on and off.
- シフト (Shift) Key**  
Shifts the keyboard. To use [シフト], press and release it and then press the next key.
- 履歴 (Additional Search) (History) Key**  
Performs additional search. Press after [シフト] to access history data.
- 文字 (Text Size) (Layout) Key**  
Cycles through available screen text sizes. Press after [シフト] to change the screen layout.
- スクロール (Scroll) Keys**  
Scroll screen contents up and down. Press after [シフト] to jump back or forward between definitions.
- ジャンプ (Jump) (Guide) Key**  
Enables look up of a term on the currently displayed definition or explanation screen. Press after [シフト] to view guide information.
- 見出しメモ (Headword Memo) Icon**  
Touch to affix a *midashi memo* (headword memo) to a definition or explanation produced by a search.
- 戻る / リスト (Back/List) Icon**  
Touch to back-step through previous operations.
  - Touch while a dictionary's initial screen is on the display to return to the メニュー screen.
  - Touch while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
- 訳 / 決定 (Translate/Select) Icon**  
Touch to execute a function or to select an on-screen item.
- 認識 (Confirm) Icon**  
Touch after inputting a character when inputting individual characters on the handwriting panel.
- 音声 (Audio) (Read) Key**  
Press to hear a reading by the voice of a native speaker of the applicable language. Press after shift [シフト] to hear a reading by synthesized voice.
- 戻るリスト (Back/List) Key**
  - Press to back-step through previous operations.
  - Press while a dictionary's initial screen is displayed to return to the メニュー screen.
  - Press while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
- 訳 / 決定 (Translate/Select) Key**  
Executes a function or selects an on-screen item.
- Arrow Keys**
  - Move the selection highlighting or cursor up, down, left, or right.
  - The left and right arrow keys move the cursor.
  - To adjust the audio volume, press [シフト] and then the [Increase] or [Decrease] arrow key.


- 設定 / 削除 (Setup/Delete) Key**
  - Deletes the character at the current cursor location.
  - Press after [シフト] to display a screen for changing the setup of the electronic dictionary.
- Letter Keys**  
Use these keys to enter letters and numbers.
- バックライト (Backlight) Key**  
Toggles the backlight on and off.
- 前見出し / 次見出し (Previous Headword/Next Headword) Icon**  
Tap to jump from the current term to the previous or next term. The same result can be achieved by pressing [シフト] and then [Up] or [Down].
- ズーム (Zoom) Icon**  
Tap to enlarge the characters of a definition or explanation screen.
- 熟語 (Compound Terms) Icon**  
Tap to view compound terms that use the kanji you are currently viewing in the 漢字源 (Japanese kanji) dictionary.
- 成句複合語 (Idioms and Compound Expressions) Icon**  
Tap to view idioms and compound expressions that use the term you are currently viewing.
- 用例解説 (Samples and Explanations) Icon**  
Tap to view samples and explanations in dictionaries that include such information.
- 暗記カード作成 (Create Flash Card) Icon**  
Tap to create a flash card.
- 単語帳登録 (Add to Word List) Icon**  
Display a term, sample sentence or idiom screen and then tap this icon to add the term, sample sentence or idiom to the word list.

## Display Indicators

 The following explains the meanings of display indicators.

This indicator:	Means this:
<b>解説 (Explanation)</b>	There is an explanation for the word where the indicator is located.
<b>熟語 (Compound Term)</b>	The 漢字源 (Japanese kanji) dictionary contains a compound term that includes the kanji character you are looking up.
<b>成句 (Idioms/Compound Expression)</b>	There is an idiom or compound term that uses the term you are looking up.
<b>用例 (Sample)</b>	There is a sample sentence that uses the term you are looking up in an English dictionary.
<b>発音 (Native Speaker Pronunciation)</b>	Native speaker pronunciation is available for the contents to the right or below this indicator.
<b>真音 (True Voice)</b>	Native speaker pronunciation is available.
<b>読み上げ (Reading)</b>	Synthetic voice reading is available.
<b>音声読み (Reading Search)</b>	Readings are available for the English on the screen.
<b>英語 (English)</b>	The language whose pronunciation is applied for readings.
<b>見出し (Term)</b>	There is a term that contains the term you are viewing or there is related information about the term in the dictionary you are currently accessing.
<b>ジャンプ (Jump)</b>	Jump function in use
<b>履歴 (History)</b>	History function in use
<b>ズーム (Zoom)</b>	Display zoom in use
<b>ガイド (Guide)</b>	Guide function in use
<b>全表示 (Display All)</b>	Indicates the display method when using search within results and world order search.
<b>語順 (Word Order)</b>	
<b>連続 (Continuous)</b>	

## Keyboard Input

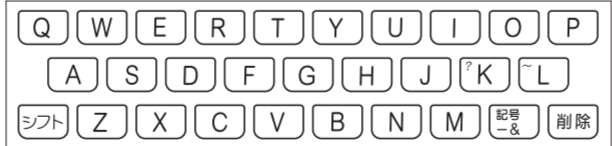

Use English input for unaccented alphabetic characters.  
 ● See the following notes about other languages for other characters.


To input this:	Type this:
internet	I N T E R N E T
?	シフト [Q]
~	シフト [Z]

## Hangul



 
To input this:	Type this:
ㅁ	[ㅁ] [ㅁ]

## Chinese (Pinyin)

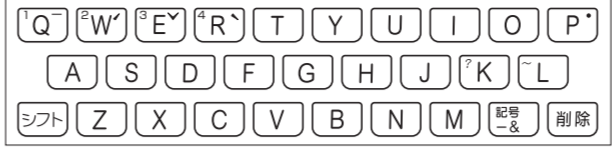

To input this:	Perform this operation:
ü	Type (keyboard): [V] Tap (Handwriting Panel): [一 ー]
—	Type (Keyboard): [シフト] [Q] (Displayed as 1.) Tap (Handwriting Panel): [二 声 一]
✓	Type (Keyboard): [シフト] [W] (Displayed as 2.) Tap (Handwriting Panel): [三 声 一]
√	Type (Keyboard): [シフト] [E] (Displayed as 3.) Tap (Handwriting Panel): [四 声 一]
∧	Type (Keyboard): [シフト] [R] (Displayed as 4.) Tap (Handwriting Panel): [輕 聲 一]
•	Type (Keyboard): [シフト] [P] (Displayed as 0.)
ming2tian1 (明天)	MING [二 声 一] TIAN [一 声 一] MINGシフト TIANシフト

## Japanese

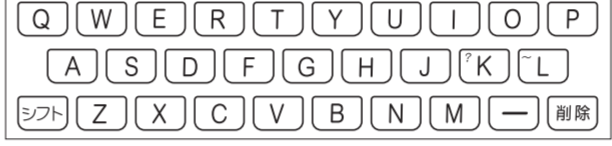 

To input this:	Type this:
いんこ	I N K O
みかん	M I K A N N
さんぽ	S A N N P O or S I A M P O
きょう	K Y O U
らっこ	R A K K O or R A X T U R O
えーる	E R U
とーるーず	T W U R U Z U

## German, French, Spanish and Italian

All alphabetic characters are input in lower case, regardless of their normal capitalization.

- For the German "ß", input "ss".
- For other characters that normally include a diacritic, input the character without the diacritic. Example: "ä" -> "a", "ë" -> "e", etc.
- For the French "ç" input "c", and for "œ", input "oe".
- Input hyphenated terms as single words, without a hyphen. To look up "peut-être", for example, input "peutetre".
- When inputting a term that consists of multiple words, input the words without any spaces. To look up "die Elbe", for example, input "dieElbe".

## Handwriting Input

Use the stylus to write characters on the handwriting panel and then tap [認識].

 
## Character Input Mode

The indicators described below appear on the main panel to show the current input mode. Also note that the handwriting panel changes to two characters per screen or five characters per screen in accordance with the input mode.

## Two Characters Per screen

Indicator	Supported Input Characters
[あ]	Hiragana
[か]	Katakana
[漢]	Kanji
[簡]	Simplified Chinese
[한]	Hangul


## Two-character Handwriting Panel

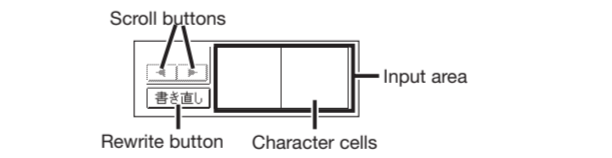

## Five Characters Per screen

Indicator	Supported Input Characters
[あ]	Alphabetic
[ã]	Accented alphabetic
[1]	Numbers

 
## Five-character Handwriting Panel

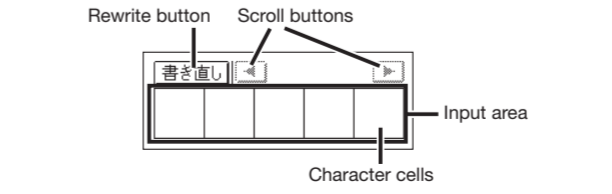

- Simplified Chinese, Hangul, and accented characters cannot be input on a model that does not include a dictionary that requires such characters. Input of the applicable characters becomes possible when optional software is installed.
- Handwriting input of Russian characters becomes enabled when the optional Russian dictionary software is installed.
- You can specify use of handwriting input on the initial screen of some dictionaries.

## Correcting Kanji Character Input

 Example: After mistakenly inputting 喜怒哀楽 instead of 喜怒哀衰

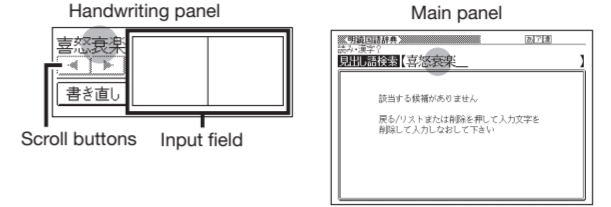


- On the handwriting panel or in the input field on the main panel, tap a character (衰).**
  - This displays up to 10 possible candidates for the character.
  - If there are too many characters to fit, tap the scroll buttons to scroll.

- If you find the correct character among the candidates, tap it.**

- If you do not find the correct character, tap [書き直し] (rewrite), rewrite the character on the handwriting panel and then tap [認識].**

## Stylus Basics

 - When using the stylus to perform operations on the main panel, avoid applying excess pressure. Excess pressure can crack the main panel.
- When using the stylus to perform an operation on the main panel, support the main panel from behind with your hand.

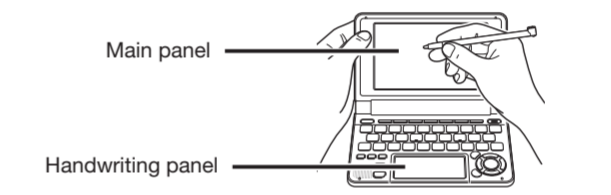

## To select a category and initial screen items

- Press [メニュー] to display the メニュー screen.**
- With the stylus, tap a category tab and then the dictionary/mode you want. This will highlight the dictionary/mode.**

- Tap the highlighted dictionary/mode again to display its initial screen.**
  - Instead of step 3, you also could tap [訳 / 決定] on the handwriting panel.
  - Other operations you can perform on the main panel by tapping with the stylus are selecting a search option, selecting a term, and selecting a headword.

## Search Functions

The following is an overview of some of the search functions.

### Headword Search

This is the most basic type of search. Use it when you want to look up a term in a dictionary.

- Display the initial screen of a dictionary/mode.**
- Use [Left] and [Right] to select 見出し語検索 (Headword Search).**
- Enter the term you want.**
  - As you enter each character, the list of terms on the main panel is updated accordingly.
  - When entering a headword, you can use the following wildcard characters.

Character	Represents
?	A single unknown character
~	A series of multiple unknown characters of unknown length

- Use [Left] and [Right] to move the highlighting to a term and then press [訳 / 決定] to display its definition screen.**

### Sample Sentence Search

You can use the following procedure to search for sample sentences containing a specific term when the initial screen of the mode you are in has a 例文検索 (sample sentence search) option.

- Display the initial screen of a dictionary/mode.**
- Use [Left] and [Right] to select 例文検索.**
- Enter the term.**
  - When inputting multiple words, separate them using the ampersand character (&), not spaces. Example: return to → return&to
- Press [訳 / 決定].**
  - This displays a list of all sample sentences that contain the term.
- Use [Left] and [Right] to move the highlighting to a sample sentence and then press [訳 / 決定] to display detailed information.**

**Jump Search**  
You can use jump search to jump to another location in the same dictionary or to another dictionary.

## Jumping in the Same Dictionary

- When search results show items with a large arrow (→) or small arrow (↵) jump symbol, press the ジャンプ key.**
  - The ジャンプ indicator appears and the first character on the screen becomes highlighted.

- Use [Left] and [Right] to move the highlighting to the item you want and then press [訳 / 決定] to jump.**

## Jumping to Additional Information

The following indicators on a definition screen indicate additional information is available. Press [辞書] , use the [Left] , [Right] , [Up] , and [Down] keys to move the highlighting to the indicator and then press [訳 / 決定] to view the information.

Indicator	Applicable Model and Dictionary	Available Information
⇄ 変化	XD-GP7150 クラウン独和辞典 (German-Japanese Dictionary) XD-SP7400 伊和辞典 (Italian-Japanese Dictionary)	Conjugation
⇄ 活用	XD-GP7250 仏和大辞典 (French-Japanese Dictionary)	Usage
⇄ 変化表	XD-GP7150 独和大辞典 (German-Japanese Dictionary)	Conjugation table
⇄ 活用表	XD-SP7500 現代スペイン語辞典 (Spanish Dictionary) XD-GP7250 ブチロワイヤル仏和辞典 (French-Japanese Dictionary) ブチロワイヤル和仏辞典 (Japanese-French Dictionary)	Usage table

## Jumping to another Dictionary

- While the results of a search are displayed, press the 辞書 key.**
  - The ジャンプ indicator appears and the first character on the screen becomes highlighted.
- Use the arrow keys to move the highlighting to a term and then press [訳 / 決定].**
  - This displays a dictionary menu.

- Use [Left] and [Right] to select a dictionary and then press [訳 / 決定].**
  - This jumps to the applicable dictionary and searches for the term.

## Multi-dictionary Search

Use the following procedure to search for a term across multiple dictionaries.

 
- On the メニュー screen, select the 便利な機能 (Useful Functions) tab and then select 複数辞書アルファベットで検索 (Alphabetic Multi-dictionary Search).**
  - You also could select 複数辞書ひらがなで検索 (Hiragana Multi-dictionary Search) or 複数辞書漢字で検索 (Kanji Multi-dictionary Search).
- On the search screen that appears, enter a term.**
  - Terms starting with the characters you have entered appear in a list on the display.
  - Each term also includes an indicator showing its dictionary.
- Use [Left] and [Right] to move the highlighting to a term and then press [訳 / 決定] to display its definition screen.**

## History

The History feature remembers up to 1,000 terms you have looked up in each dictionary.

### Viewing History Contents

- While the initial screen of a dictionary/mode is displayed, press **[シフト]** and then **[履歴]**.

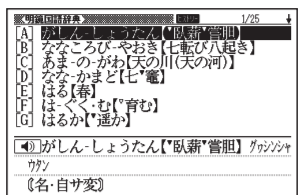

- Use **[上]** and **[下]**, and the **[左]** and **[右]** keys to move the highlighting to a term and then press **[訳/決定]**.

### Deleting History Data

- While the initial screen of a dictionary/mode is displayed, press **[シフト]** and then **[履歴]**.
  - This displays the history screen of the dictionary/mode.
  - The dictionary/mode does not make any difference if you are planning to delete all history data in all dictionaries/modes.

- If you are deleting one specific history entry, use **[上]** and **[下]** to move the highlighting to the entry you want to delete.

- Press **[削除]**.

- Select an option.

To do this:	Select this option:
Exit the delete menu without deleting anything.	削除しない
Delete only the currently highlighted item.	反転中のヒストリーを削除 (1 件)
Delete all history data in the current dictionary/mode.	モード内のヒストリーを削除
Delete all history data in all dictionaries/modes.	全てのモードのヒストリーを削除

- Press **[訳/決定]**.
  - This performs the operation you selected.

 
## Useful Functions

Powerful features and functions help make dictionary look ups quicker and easier.

### Viewing Idioms and Compound Expressions


**熟語** indicates there is idiom and compound expression information available. On the handwriting panel, tap **[成句複合語]** to display it.

On the main panel, tap the idiom or compound expression you want to view and then tap **[訳/決定]** on the handwriting panel. This will display the meaning of the idiom or compound expression that you selected.

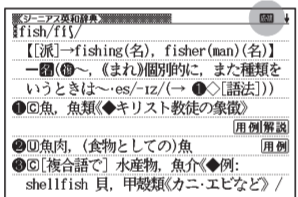


### Viewing Compound Terms

 **熟語** indicates there is compound term information available. On the handwriting panel, tap **[熟語]** to display it. On the main panel, tap the compound term you want to view and then tap **[訳/決定]** on the handwriting panel. This will display the meaning of the compound term that you selected.

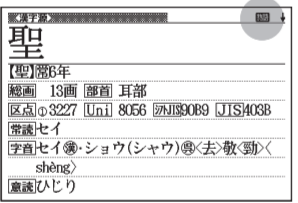

### Viewing Sample Sentences or Explanations

 **用例** or **解説** indicates there is sample sentence information or an explanation available. On the handwriting panel, tap **[用例解説]** to display it. Use the arrow keys to move the highlighting to the icon you want to view and then tap **[訳/決定]** on the handwriting panel. This will display the sample sentence or explanation.

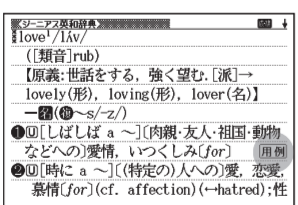


## Reading

Your electronic dictionary can produce native speaker and simulated voice readings of terms and sample sentences.


### To use the built-in speaker

 On the side of the electronic dictionary, slide the pronunciation output switch to SPEAKER.

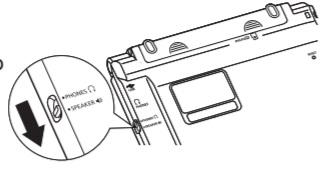


### To use earphones

 - Connect the supplied earphones to the terminal on the right side of the electronic dictionary.
  - Use only the supplied earphones.

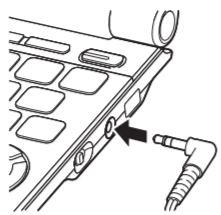


 - On the side of the electronic dictionary, slide the pronunciation output switch to PHONES.

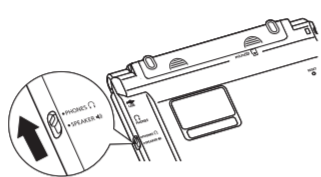

### To adjust the volume

 - While any screen is displayed, press **[シフト]** **[音量]**.

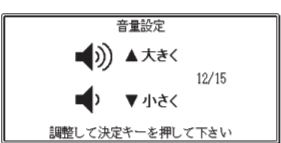

- Press the **音量(大)** **[上]** (increase volume) and **音量(小)** **[下]** (decrease volume) arrow keys to adjust the volume level.

- Press **[訳/決定]**.
  - While audio output is in progress, you can adjust its volume by pressing **[上]** or **[下]**.


### Using TRUE VOICE® for Native Speaker Pronunciation

 TRUE VOICE® capabilities let you hear native speaker readings of terms and sample sentences.

### Playing TRUE VOICE® Pronunciation while a Definition Screen is Displayed

Use the following steps to listen to a TRUE VOICE® reading of an item that has a **[TRUE VOICE]** icon next to it.

- Press **[音声]**.
  - The **[TRUE VOICE]** icon becomes highlighted and the **[TRUE VOICE]** icon appears on the display.

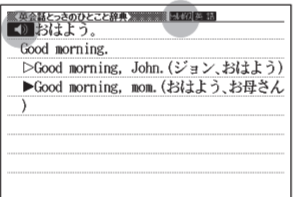


- Press **[訳/決定]**.
  - This reads the item next to or below the highlighted **[TRUE VOICE]** icon.
  - If there are multiple **[TRUE VOICE]** icons, use **[上]** and **[下]** to select one.

- After you are finished using TRUE VOICE®, press **[戻る/リスト]** so the **[TRUE VOICE]** icon disappears from the display.

### Playing TRUE VOICE® Pronunciation while an English Term Displayed

 Use the following steps to listen to a TRUE VOICE® reading of an English term.

- Press **[音声]**.
  - The **[TRUE VOICE]** and **音声リレー** icons appears on the display.

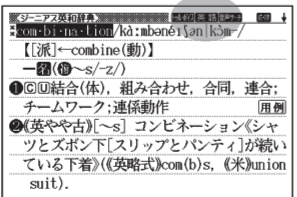

- Use the arrow keys to move the highlighting to an English term.

- Press **[訳/決定]**.
  - If there is only one pronunciation, it plays immediately.
  - If there are multiple pronunciations, a list of candidates appears.

- If native speaker pronunciation is not available, a message appears asking if you want to hear a simulated voice reading.

- After you are finished, press **[戻る/リスト]**.
  - Note that pronunciation may not be correct if a non-English term is selected.
  - Pronunciation may not be correct in cases that two terms have the same spelling but different pronunciations.


## Synthesized Voice Readings

 A synthesized voice can be used to check the readings of terms in seven languages: English, Spanish, German, French, Italian, Chinese, and Korean.

- Some dictionaries/modes do not support synthetic voice readings.
- Chinese reading can be selected for a Chinese model electronic dictionary and Korean for a Korean model electronic dictionary only. For other models, these languages can be selected after the applicable optional software is installed.
- For Chinese, pinyin and alphabetic terms, and some kanji terms cannot be read by the synthetic voice.
- For Korean, only hangul terms can be read.

### To play readings on a definition and explanation screen

- Press **[シフト]** and then **[音声]**.
  - The **[TRUE VOICE]** icon appears and the first term or sample sentences that can be read by the synthesized voice becomes highlighted on the display.

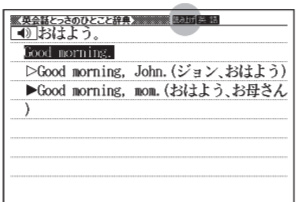

- Use **[上]** and **[下]** to move the highlighting to the term, idiom, or sample sentence you want to have read.

- Press **[訳/決定]** to produce the reading of the term or sample sentence.


- After you are finished, press **[戻る/リスト]**.

## Configuring Audio Settings

 Use the procedures below to configure audio settings.

### To display the 音声設定 (Audio Settings) Screen


- Press **[シフト]** and then **[設定]**.

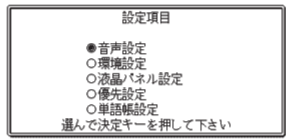

- Use **[上]** and **[下]** to select **音声設定** and then press **[訳/決定]**.

### To adjust the reading speed

 - On the **音声設定** screen, use **[上]** and **[下]** to select **音声速度設定 (Reading Speed)** and then press **[訳/決定]**.

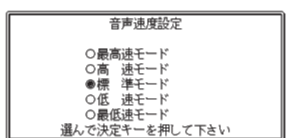


- Use **[上]** and **[下]** to select a speed and then press **[訳/決定]**.
  - You can set one of five speeds: Approximately 130%, 120%, 100% 85%, or 75% of normal speed.

### To specify the pronunciation language to use for a specific dictionary/mode

 - Access a dictionary/mode.

- Perform the steps under "To display the **音声設定** Screen".


- Use **[上]** and **[下]** to select **音声言語設定 (Reading Language)** and then press **[訳/決定]**.

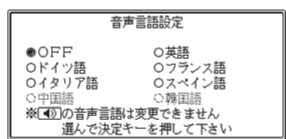

- Use the arrow keys to select a language setting and then press **[訳/決定]**.

### To adjust the reading volume level

 - On the **音声設定** screen, use **[上]** and **[下]** to select **音量設定 (Reading Volume)** and then press **[訳/決定]**.

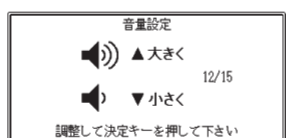

- Use **[上]** and **[下]** to select a volume level and then press **[訳/決定]**.

## Flash Cards

Your electronic dictionary lets you create up to six stacks of flash cards, with up to 100 cards in each stack. You can create flashcards from the **学習帳 (Exercise Book)** mode or from a meaning/explanation screen.

 
### To create a flash card from the 学習帳 (Exercise Book) mode

- Press **[学習帳]** twice.

- Use **[上]** and **[下]** to select **暗記カード (Flash Card)** and then press **[訳/決定]**.
  - This displays the flash card menu screen.

- Use the arrow keys to select **暗記カードを作成する (Create flash card)** and then press **[訳/決定]**.

- Use the arrow keys to select a flash card stack and then press **[訳/決定]**.

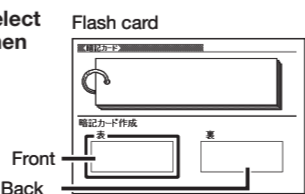

- Write something on the front of the flash card and then tap **[訳/決定]** on the handwriting panel.
  - You can use the following tools when writing on the handwriting panel.

To do this:	Tap this tool:
Toggle the pencil between thick line and thin line	
Cycle the eraser between: thick, thin, and garbage can	

- Tapping the input area of the handwriting panel while the garbage can icon is highlighted **[NG]** will cause the current contents of the handwriting panel to be deleted.


- Write something on the back of the flash card and then tap **[訳/決定]** on the handwriting panel.

- Check the contents of the flash card and then tap **[訳/決定]** on the handwriting panel to store it.

### To create a flash card from a meaning/explanation screen

 - While the meaning/explanation screen for a term is displayed, tap **[暗記カード作成]** on the handwriting panel.

- Use the arrow keys to select a flash card stack and then press **[訳/決定]**.

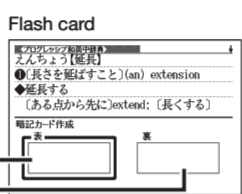

- Write something on the front of the flash card, and then tap **[訳/決定]** on the handwriting panel.
  - If you make a mistake, you can tap the eraser tool and then erase. Then to go back to input, tap the pen tool.

- Write something on the back of the flash card, and then tap **[訳/決定]** on the handwriting panel.

- Check the contents of the flash card and then tap **[訳/決定]** on the handwriting panel to store it.

### To use flash card for memorization

 
- While the flash card menu is displayed, use the arrow keys to select **暗記カードを見る (View flash cards)** and then press **[訳/決定]**.

- Use the arrow keys to select a stack of flash cards.

- On the handwriting panel, specify the display sequence and the cards to be displayed.

To do this:	Select this option:
Display the front of the card first (problem), and then the back (answer)	表から表示
Display the back of the card first (problem), and then the front (answer)	裏から表示
Display all cards in the stack	全ての語を表示
Display only the cards in the stack for which you gave wrong answers (NG) when using the procedure under "To use flash cards for writing practice"	NGの語のみ表示

- On the handwriting panel, tap **[訳/決定]** to start.
  - To view the reverse side of the card, tap **[訳/決定]**.
  - You can use the **[右]** and **[左]** arrow keys to scroll through the flash cards.

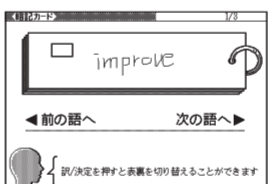

- To exit the flash card stack, tap **[戻る/リスト]** on the handwriting panel.

### To use flash card for writing practice

- While the flash card menu is displayed, use the arrow keys to select **暗記カードで書き取り (Use flash cards for writing practice)** and then press **[訳/決定]**.
  - This displays a menu of flash card stacks.

 
- Use the arrow keys to select a stack of flash cards.

- On the handwriting panel, specify the display sequence and the cards to be displayed.

To do this:	Select this option:
Display the front of the card first (problem), and then the back (answer)	表から表示
Display the back of the card first (problem), and then the front (answer)	裏から表示
Display all cards in the stack	全ての語を表示
Display only the cards in the stack for which you gave wrong answers (NG) when using the procedure under "To use flash cards for writing practice"	NGの語のみ表示

- On the handwriting panel, tap **[訳/決定]**.

- On the handwriting panel, write the meaning of the term that's displayed on the main panel.



- After you are finished, tap **[訳/決定]** on the handwriting panel.

- If what you wrote in step 5 is correct, tap **[OK]** on the handwriting panel. If it is not, tap **[NG]**.
  - If you tap **[OK]**, the screen advances to the next flash card.
  - If you tap **[NG]**, write the correct answer as shown in the main panel into the handwriting panel, and then tap **[訳/決定]**. Repeat this operation six times for practice. When you press **[訳/決定]** after writing the correct answer six times, the screen advances to the next flash card.



- To exit the flash card stack, tap **[戻る/リスト]** on the handwriting panel.

## Managing Flash Cards

Use the following procedure to delete and edit flash cards.

### To delete flash cards

- Display a flash card.
  - To delete a specific flash card, display that card.
  - To delete all of the flash cards in a specific stack, display a card in that stack.
  - To delete all flash cards, display any card.

- Press **[削除]**.

- Select an option.

To do this:	Select this option:
Exit the delete menu without deleting anything.	削除しない
Delete only the currently displayed flash card.	表示中のデータを削除 (1 件)
Delete all of the flash cards in the currently displayed stack.	表示中の暗記カードの全てのデータを削除
Delete all flash cards in all of the stacks.	全ての暗記カードのデータを削除

- After selecting an option, press **[訳/決定]**.
  - This performs the operation you selected.

 
## Renaming a Flash Card Stack

You can use the following procedure to change the default name of any of the six flash card stacks.

- While the flash card menu is displayed, use the arrow keys to select **登録先名称を変更する (Rename flash card stack)** and then press **[訳/決定]**.

- Use the arrow keys to select a stack of flash cards and then press **[訳/決定]**.

- On the handwriting panel, delete the name currently assigned to the stack and then write a new name.



- After you are finished, tap **[訳/決定]** on the handwriting panel.

## Headword Memos

You can create up to 100 handwritten "headword memos" and attach them to headwords.

### Where you can use headword memos

- You can attach a headword memo to a headword for a term, idiom, compound term, compound expression, or phrase.
- Use of the headword memos is not support in certain contents.
- Only one headword memo is allowed per screen.

 
### To create a headword memo

- Display the screen that contains the headword to which you want to attach the headword memo.

- On the handwriting panel, tap **[見出しメモ]**.

- On the handwriting panel, write the memo text.


- After you are finished writing the memo text, tap **[訳/決定]** on the handwriting panel to attach the headword memo.
  - The **[TRUE VOICE]** icon appears on the display.

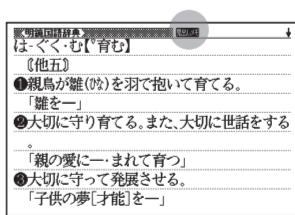

### To view a headword memo

- Press **[学習帳]** twice.

 - Use **[上]** and **[下]** to select **見出しメモ** and then press **[訳/決定]**.

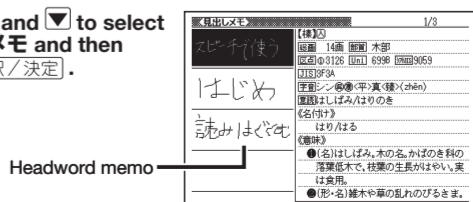

- Use **[上]** and **[下]** to select a headword memo and then press **[訳/決定]**.
  - This displays the screen to which the headword memo is attached.
  - To return to the headword memo menu, press **[戻る/リスト]**.

### To edit a headword memo

- Display the screen to which the headword memo you want to edit is attached.

 
- On the handwriting panel, tap **[見出しメモ]**.
  - This displays the current headword memo contents on the handwriting panel.

- On the handwriting panel, edit the headword memo contents and then tap **[訳/決定]**.

### To delete headword memos

- Press **[学習帳]** twice.

- Use **[上]** and **[下]** to select **見出しメモ** and then press **[訳/決定]**.
  - This displays a menu of currently stored headword memos.

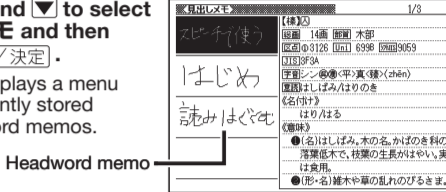

- To delete a specific headword memo, select the memo.

- Press **[削除]**.

- Select an option.

To do this:	Select this option:
Exit the delete menu without deleting anything.	削除しない
Delete only the currently displayed headword memo.	表示中の見出しメモを削除 (1 件)
Delete all of the headword memos.	全ての見出しメモを削除

- Press **[訳/決定]**.

## Free Memos

You can create up to 30 handwritten "free memos."

### To create a free memo

- On the **メニュー** screen's **便利な機能 (Useful Functions)** tab, select **フリーメモ** and then press **[訳/決定]**.

- Use the arrow keys and the **[上]** and **[下]** keys to select a blank memo and then press **[訳/決定]**.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>