 
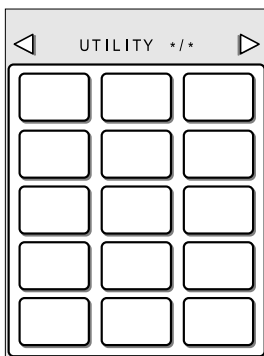 


■ TAPE (tape deck) system buttons

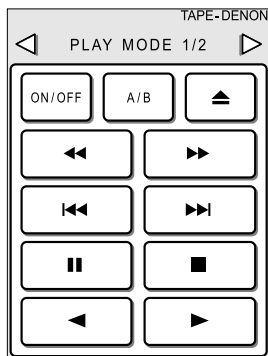

The last page of the page display section for the various devices is a "UTILITY" page. Function buttons you want to register specially can be added to this UTILITY page.

For instructions, refer to "Learning Function" on page 18.

- There is no "UTILITY" page for "AV AMP".

The transmission codes of independent buttons are the same as for "CD".

■ **SYSTEM CALL button** : Refer to "System Call Function (page 20).

■ **SETUP button** : Refer to "Preset Memory" (see below) and "Making the Various Settings" (page 23).

- * If your device is not one of the devices set in the default settings, make the necessary changes in the preset memory before using that device.
- * Some devices have multiple Denon codes (DENON 2, etc.). If the device does not operate with the DENON 1 codes, try changing the codes to DENON 2 or DENON 3 using the preset memory.
- * The names of buttons on the devices you are operating with the RC-8000 may differ from the names of the buttons on the RC-8000. If so, the names can be changed for greater ease using the procedure described in section "Customizing the Buttons" (see page 29).

Preset Memory

Various remote control codes are preset in the RC-8000.

If your device is one that is preset in the RC-8000, it can be operated from the RC-8000 using the preset memory. Note that some devices and some buttons may not be operable. If this is not the case, use the learning function (see page 18) to store the device's remote control signals in the RC-8000.

Depending on the product, response may be slow. If this is the case, buttons may operate if they are pressed for a little longer than usual.

NOTE

There are no preset memory (other manufacturer) settings for the devices listed below.

For these, use the learning function to store the remote control codes of your components in the RC-8000.

① to ⑥ are supplied with Denon codes. By default, no remote control codes are set for ⑦ to ⑪.

- | | | |
|-------------------------|-------------------------|---------|
| ① AV AMP (AV amplifier) | ⑤ MD (MD player) | ⑨ HOME |
| ② TUNER (AM/FM) | ⑥ DAT (DAT recorder) | ⑩ OTHER |
| ③ RCVR (receiver) | ⑦ PROJ. (projector) | ⑪ USER |
| ④ TAPE (tape deck) | ⑧ AIR (air-conditioner) | |




 
















The devices and brands preset in the RC-8000 are listed on the next page (page 11).

These device types feature preset memory settings (other manufacturers codes):

- | | | |
|---------------------------------|--------------------------------------|---------------------------|
| ① TV | ⑤ CDR (CD recorder) | ⑨ LIGHT (lighting device) |
| ② DVD (DVD player) | ⑥ VDP (video disc player/LD player) | |
| ③ VCR (video cassette recorder) | ⑦ DBS (satellite broadcast receiver) | |
| ④ CD (CD player) | ⑧ CABLE (cable TV) | |

DVD, CD, CDR and VDP are provided with Denon codes in addition to other manufacturers codes.

The devices and brands indicated in half-tone dot mesh on the table are preset in the RC-8000.

Device icon	Equipment	Manufacturer (codes)	Device icon	Equipment	Manufacturer (codes)
	AVAMP	DENON (1)		CD	DENON (1)
	TUNER	DENON (1)			JVC (1 to 4)
	TV	HITACHI (1 to 4)			KENWOOD (1 to 5)
		JVC (1 to 5)			MARANTZ (1)
		MAGNAVOX (1 to 4)	ONKYO (1, 2)		
		MITSUBISHI (1 to 6)	PANASONIC (1, 2)		
		PANASONIC (1 to 5)	PIONEER (1, 2)		
		PHILIPS (1 to 4)	SONY (1)		
GE (1, 2)	TECHNICS (1 to 4)				
PIONEER (1 to 4)	YAMAHA (1, 2)				
PROSCAN (1)					
RCA (1 to 7)					
SANYO (1, 2)					
SHARP (1 to 4)					
SONY (1)					
TOSHIBA (1 to 4)					
	DVD	DENON (1, 2)		CDR	DENON (1)
	VCR	PANASONIC (1)	DENON (2)		
		PIONEER (1 to 3)	DENON (1)		
		RCA (1)	PHILIPS (1)		
		SONY (1)	PIONEER (1)		
		TOSHIBA (1 to 4)			
	MD	DENON (1)		TAPE	DENON (1)
	DAT	DENON (1)		SETUP	
	RCVR	DENON (1)		SYSTEM CALL	
	AIR			VDP	DENON (1 to 3)
	OTHER			DBS	PIONEER (1 to 3)
				CABLE	SONY (1)
				PROJ.	DENON (1 to 3)
				LIGHT	PIONEER (1 to 3)
				HOME	PIONEER (1 to 2)
				USER	RADIO SHAK (1)
					ZENITH (1, 2)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>