



marantz®

Model CC4300 User Guide

5 Disc CD Changer

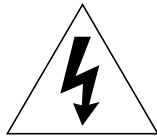

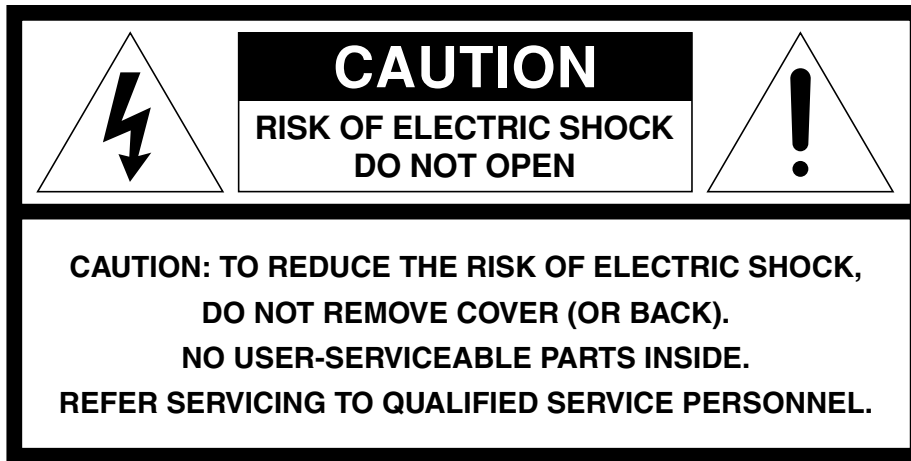

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV (Cable-TV) system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications may cause this unit to fail to comply with Part 15 of the FCC Rules and may void the user's authority to operate the equipment.

LASER SAFETY

This unit employs a LASER. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

CAUTION-USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURE OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.


This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

IMPORTANT SAFETY INSTRUCTIONS

 
READ BEFORE OPERATING EQUIPMENT

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

- 1. Read Instructions** – All the safety and operating instructions should be read before the product is operated.
- 2. Retain Instructions** – The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** – All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow Instructions** – All operating and use instructions should be followed.
- 5. Cleaning** – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6. Attachments** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. Water and Moisture** – Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8. Accessories** – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9. A product and cart combination should be moved with care.** Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. 
- 10. Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.




13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14. Protective Attachment Plug – The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.

**FIGURE 1
EXAMPLE OF ANTENNA GROUNDING AS PER
NATIONAL ELECTRICAL CODE, ANSI/NFPA 70**

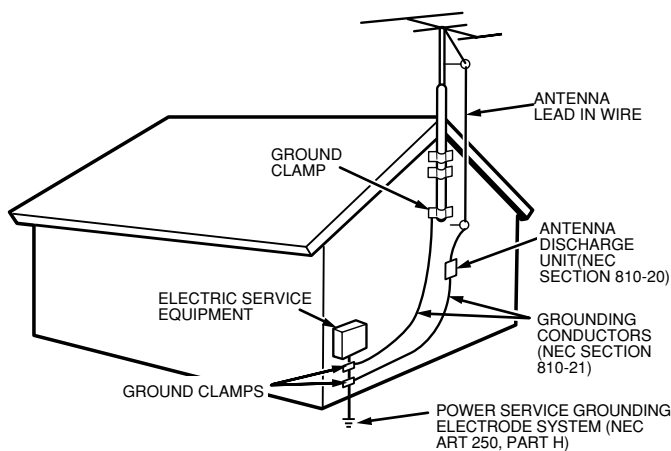

NEC - NATIONAL ELECTRICAL CODE

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

- 16. Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 17. Power Lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18. Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 19. Object and Liquid Entry** – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20. Servicing** – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 21. Damage Requiring Service** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way, and
 - f. When the product exhibits a distinct change in performance – this indicates a need for service.
- 22. Replacement Parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 23. Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 24. Wall or Ceiling Mounting** – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 25. Heat** – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Contents

General Information	2
Unpacking	2
For Your Safety	2
Compact Discs	3
Placement	3
Functional Overview	4
Front Panel Controls	4
Rear Panel Controls	6
Remote Control Unit (RC4300CC)	7
Connections	9
Connecting other Audio Equipment	9
Connecting the Remote Control	10
Operations	11
Playing CDs	11
Changing Discs during Play	12
Skip and Search Play	12
Playing Tracks in Random Sequence (Random Play)	13
Playing the First 10 Seconds of Each Track (Introsan Play)	13
Repeat Play	14
Playing Tracks in Any Sequence (Programmed Play)	14
Editing for Recording	18
Deleted Play	22
Selecting a Brightness of the Display	24
Selecting a Time Display	25
Using the Headphones	25
External Control (Serial Interface) RS232C	26
Troubleshooting	28
Specifications	29

General Information

Unpacking

First check the contents of the packaging. It should contain the following:

- CD-Player CC4300
- Remote control unit (RC4300CC)
- Batteries (AA size) x 2
- Audio cable (1 - with red and white plugs)
- Remote control cable (with orange plugs)
- Instructions
- Guarantee

If one of these components is missing, please inform your supplier immediately. Save the packaging material it may come in handy if you move the appliance.

For Your Safety

Units shipped to the U.S.A. and Canada are designed for operation on 120 V AC only.
Safety precaution with use of a polarized AC plug. However, some products may be supplied with a nonpolarized plug.

CAUTION :

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Compact Discs

The glossy side shining like a rainbow is the front side of the disc, and the side on which the label is printed is the back.

Unlike conventional turntables for playing analog discs, the CC4300 reads the information recorded on the disc from underneath without contacting it using a beam of laser light. Therefore, the performance of a compact disc will not degrade like conventional analog records.


Handle discs carefully so as not to damage or scratch the front side.

To protect the disc, avoid placing it in the following locations:


- In direct sunlight or near a source of heat like a heater.
- In a place which is damp or dirty.
- In a place which could be exposed to rain, such as near a window.

Always keep the disc surface clean.


Up to six billion data units are recorded on the front side of the disc. When cleaning the disc surface, always be sure to use a special compact disc cleaner and wipe as shown below.

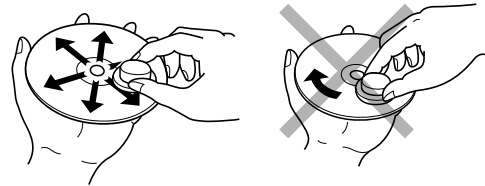

- Do not use conventional record cleaner for analog records, as this will adversely affect the disc surface. Store discs properly by placing them in their disc cases.
- Do not attach a piece of paper or sticker on the label side of disc. When a disc has a piece of plastic tape or rental CD label with paste protruded from the edge or when a disc has a trace of such a sticky object, do not attempt to play the disc. If such a disc is played on the CD player, impossibility of taking out the disc or other malfunction may result.

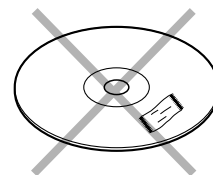

- Write only on the printed side of a CD-R or CD-RW, and only with a soft felt-tipped pen.
- Do not use a disc with a special shape. Do not attempt to play a disc with a special shape such as a heart-shaped disc or octagonal disc. Otherwise the equipment malfunction may result.

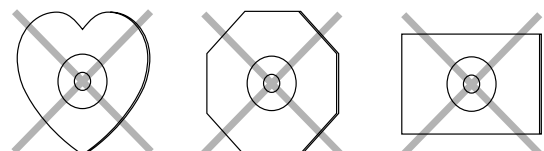


❖ Playing CD-RW discs

This unit can play back the CD-RW (ReWritable) discs as well as ordinary music CD and CD-R (Recordable) discs.

- The CD-R and CD-RW discs should contain properly-recorded TOC information so that they can be played back. With the CD recorder system, writing the TOC information in a disc is referred to as finalizing the disc. A disc cannot be recognized as a CD disc and played back unless it has been finalized properly. For details, please read the instruction manual provided with a CD recorder.
- TOC stands for Table Of Contents and contains information such as the total number of tracks and total playing time of the disc.
- This unit can play only the discs recorded in the CD-DA format designed for music reproduction. Do not attempt to play a disc containing other data, such as a CD-ROM for PCs, on this unit.
- As the playback of a CD-RW disc necessitates partial change of the player setup, it may take longer time for reading the TOC information than when a music CD or CD-R disc is played.
- A few CD-RW discs may not be played in some reason. Please use another disc to play.

Placement

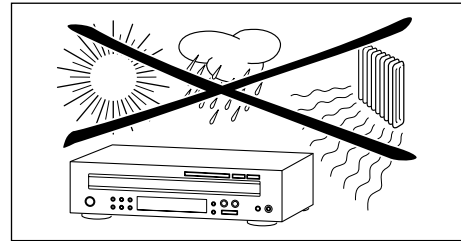

- Place the CD player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- In a cabinet, allow about 2 inches of free space all around the player for adequate ventilation.
- If the CD player cannot read CDs correctly, use a commonly-available cleaning CD to clean the lens before taking the CD-player to be repaired. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.
- When it is moved from a cold to a warm environment, allow the CD player to acclimatize for at least 2 hours in order to avoid damage. When suddenly placed in a warm environment, the lens may cloud over. Playing an CD will not be possible then. Wait until the moisture evaporates.
- Do not use the CD player under extremely damp conditions.
- Do not expose discs to direct sunlight, high humidity or high temperature for a long time.


Attention!

If the appliance is not used or operated in accordance with the instructions, this may result in exposure to dangerous radiation or other risks.

Only authorized technicians are allowed to open the appliance casing or to perform repairs or maintenance.

Functional Overview

Front Panel Controls

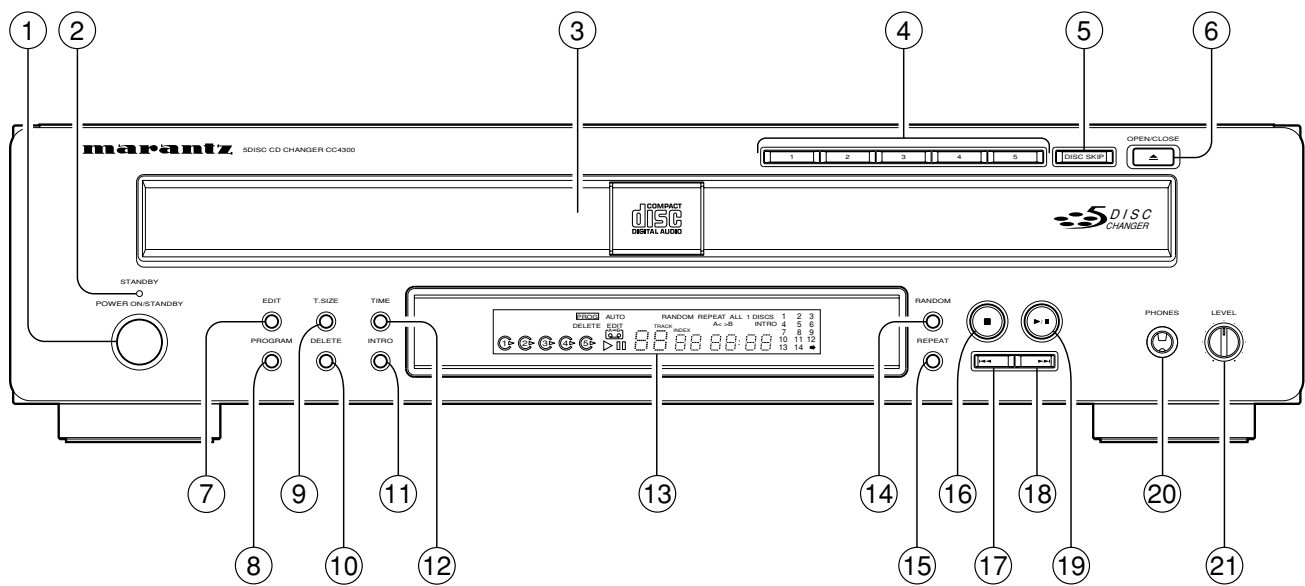

① POWER ON/STANDBY button

Press this switch to turn the power on and press again to turn to stand by.

② STANDBY indicator

Lights up red when the CD player is in Stand-by mode.

③ Disc tray

Load a compact disc on the disc tray.

④ Disc selector buttons

Use these buttons to select the disc to be played.

⑤ DISC SKIP button

For loading or unloading discs, press this button to rotate clockwise to the next disc position.

⑥ OPEN/CLOSE button (▲)

Press this button to open or close the disc tray.

⑦ EDIT button

Press this button to edit the tracks to be recorded onto the tape.

⑧ PROGRAM button

Press this button to program your favorite tracks, disc or review the programmed selections.

⑨ T. SIZE (Tape size) button

Use this button to select the tape length in edit recording.

⑩ DELETE button

Press this button to delete the undesired tracks, discs or review the deleted selections.

⑪ INTRO (Introscan) button

Press this button to play the first 10 seconds of each track on CDs.

⑫ TIME button

Press this button to display the elapsed or remaining playing time of the current track or remaining playing time of the disc.

⑬ Fluorescent display

For details, refer to the next page.

⑭ RANDOM button

Press this button to play tracks on CDs in random sequence.

⑮ REPEAT button

Press this button to play a track, a disc or all discs repeatedly.

⑯ (Stop/Clear) button

Press this button to stop play, clear the programmed selections or recover the deleted selections.

⑰ (Backward skip/Search) button

- Press this button to replay from the beginning of the current track or return to a previous track.
- Press and hold down this button to search for a specific passage in fast backward.

18 **▶▶ (Forward skip/Search) button**

- Press this button to play from the beginning of a next track.
- Press and hold down this button to search for a specific passage in fast forward.

19 **▶ / II (Play/Pause) button**

- Press this button to start playing in the stop or pause mode.
- Press this button to interrupt play temporarily and press again to restart play.


20 **PHONES jack**

Stereo headphones can be plugged into this jack for private listening.

21 **LEVEL knob**

Turning the control clockwise increases the headphone level. Turning the control counterclockwise decreases the headphone level.

❖ Fluorescent Display

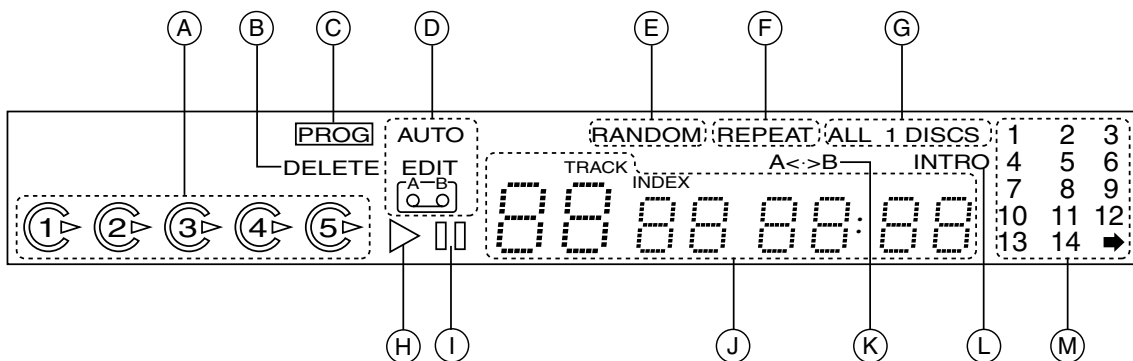

A Disc number display

B DELETE indicator

C PROGRAM indicator

D EDIT display

E RANDOM PLAY indicator

F REPEAT indicator

G Indicators for Repeat, Introskan and Random play mode

H PLAY indicator

I PAUSE indicator


J Track number and Time display

K REPEAT A<->B indicator

L INTROSCAN indicator

M Music calendar display

Rear Panel Controls

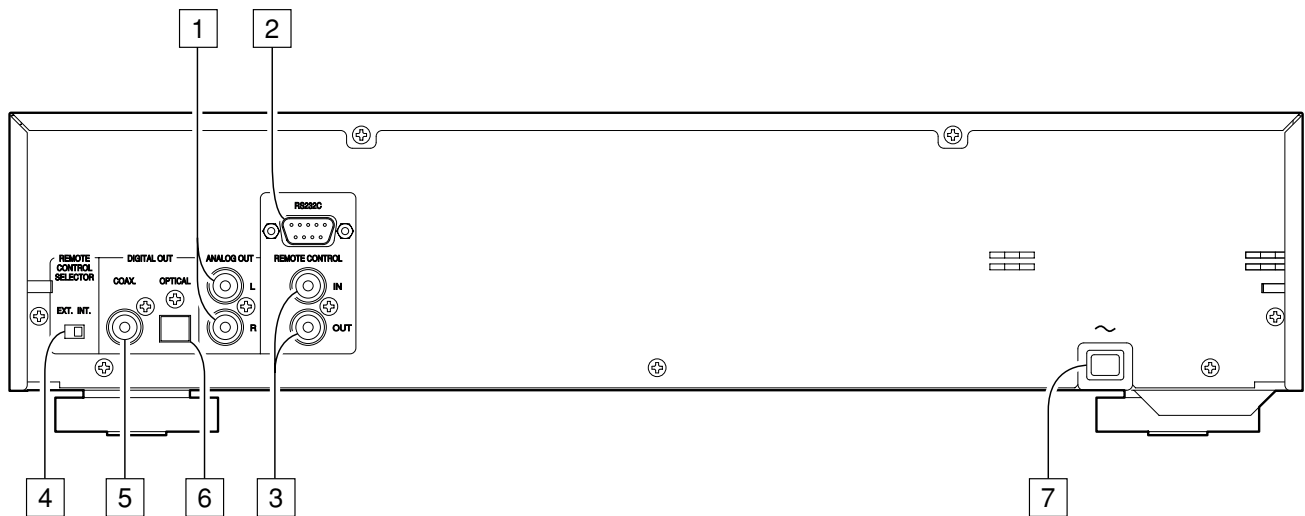

1 ANALOG output jacks

Connect these jacks to the CD(or AUX) input jacks of your amplifier or receiver.

2 RS232C

The RS232C port is to be used in conjunction with an external controller to control the operation of the CD player by using an external device. (See also page 26.)

3 REMOTE CONTROL IN/OUT jacks

By connecting this CD player to another Marantz audio component using a D-BUS remote control cable, you can operate the components remotely as a single system.

- When connecting to a component with a remote sensor, connect the REMOTE CONTROL IN jack of this unit to the REMOTE CONTROL OUT jack of the component with the remote sensor.
- When connecting to a component which is not equipped with a remote sensor, connect the component to the REMOTE CONTROL OUT jack of this unit. For the D-BUS cable connection, use supplied remote control cable or a commercially available RCA-type pin lead.
- By connecting this CD player to a Marantz auto reverse cassette deck (such as the SD4050), automatic recording from the CD player to the cassette deck can be carried out.

4 REMOTE CONTROL SELECTOR switch

When using this unit independently, set this switch to INTERNAL. When using this unit in a system incorporating a Marantz other equipments with a remote sensor, set the switch to EXTERNAL.

Note :

- Always set this switch to INTERNAL unless the unit is connected with other MARANTZ equipment through a system connection. When this switch is set to EXTERNAL, the main unit cannot be controlled from the provided remote control unit.

5 DIGITAL output (COAX.) jack

- Connect this jack to the COAXIAL DIGITAL input jack of amplifier or receiver to enjoy live digital sound.
- You can record digital sound by connecting the COAXIAL DIGITAL INPUT jack of MD deck or CD recorder to this jack.


6 DIGITAL output (OPTICAL) jack

- Connect this jack to the OPTICAL DIGITAL input jack of amplifier or receiver to enjoy live digital sound.
- You can record digital sound by connecting the OPTICAL DIGITAL INPUT jack of MD deck or CD recorder to this jack.
- Not all of the commercially-available optical fiber cords can be used for audio equipment. If there is an optical fiber cord which cannot be connected to your audio equipments, consult your dealer or nearest service organization.

7 AC input cord

Plug this cord into a wall AC outlet or the switched AC outlet of amplifier or receiver.

Remote Control Unit (RC4300CC)

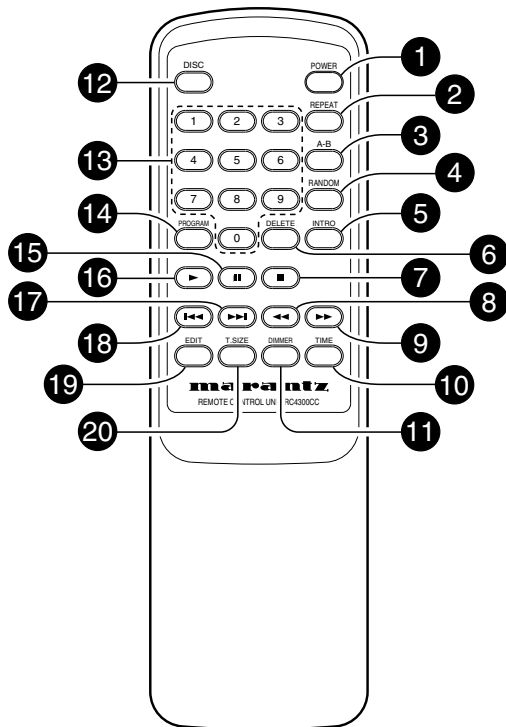

1 POWER button

Press this button to turn the power on and press again to turn to stand by.

2 REPEAT button

Press this button to play a track, a disc or all discs repeatedly.

3 A->B button

Press this button to play a specific passage repeatedly.

4 RANDOM button

Press this button to play tracks on CDs in random sequence.

5 INTRO (Introsan) button

Press this button to play the first 10 seconds of each track on CDs.

6 DELETE button

Press this button to delete the undesired tracks, discs or review the deleted selections.

7 ■ (Stop/Clear) button

Press this button to stop play, clear the programmed selections or recover the deleted selections.

8 ◀◀ (Search) button

Press and hold down this button to search for a specific passage in fast backward.

9 ▶▶ (Search) button

Press and hold down this button to search for a specific passage in fast forward.

10 TIME button

Press this button to display the elapsed or remaining playing time of the current track or remaining playing time of the disc.

11 DIMMER button

Press this button to change the brightness of the display.

12 DISC button

When selecting a disc with this button, press this first and then the desired disc number(1~5) on the numeric buttons within 2 seconds.

13 NUMERIC buttons

Press the corresponding button when selecting tracks or discs for play, programming or deleting, then the selected track is played, programmed or deleted directly without use of the PLAY, PROGRAM/REVIEW or DELETE/REVIEW button.

- When selecting a two digit number, the second digit should be pressed within 2 seconds after the first digit has been pressed

14 PROGRAM button

Press this button to program your favorite tracks, disc or review the programmed selections.

15 || (Pause) button

Press this button to interrupt play temporarily and press again to restart play.

16 ▶ (Play) button

Press this button to start play in the stop or pause mode.

17 ▶▶ (Forward skip) button

Press this button to play from the beginning of a next track.

18 ◀◀ (Backward skip) button

Press this button to replay from the beginning of the current track or return to a previous track.

19 EDIT button

Press this button to edit the tracks to be recorded onto the tape.

20 T. SIZE (Tape size) button


Use this button to select the tape length in edit recording.

❖ Operation of Remote Control Unit

1. Remote control

The distance between the transmitter of the remote control unit and the IR SENSOR of the CC4300 should be less than about 5 meters. If the transmitter is pointed to a direction other than the IR SENSOR or if there is an obstacle between them, remote control may not be possible.


Remote-controllable range

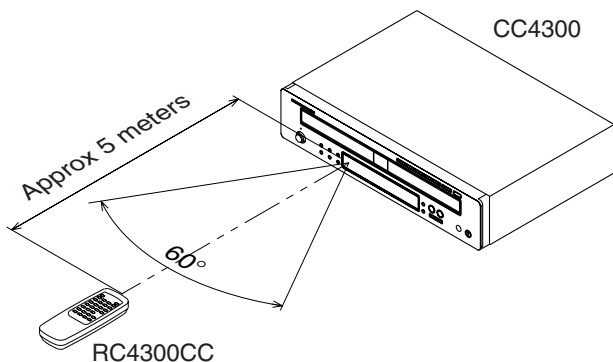

2. Loading batteries

The life of the batteries used with the remote control unit is about 6 months with normal use. Also be sure to replace batteries earlier when you notice that they are getting weak.


1. Remove the back cover.

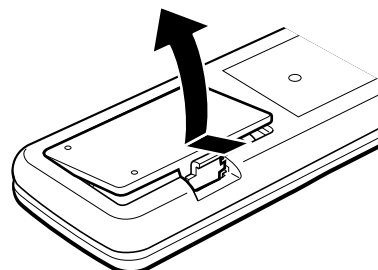


Note :

- Remove the batteries when they are not used for a long time.
- Do not use the rechargeable batteries(Ni-Cd type).

2. Insert the new batteries (AA size) with correct (+) and (-) polarity.

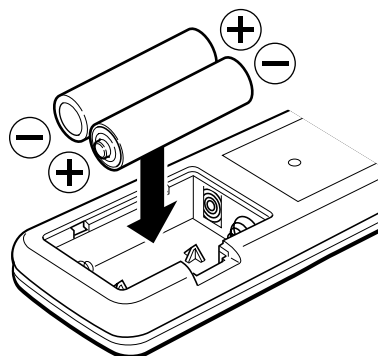

3. Close until it clicks.

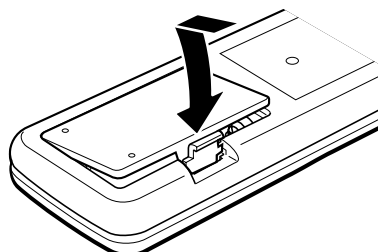


Connections

Precautions concerning connections :

- Do not plug the AC input cord into the AC outlet when plugging and unplugging connection cords.
- Be sure to connect the white plugs to the L(Left) and the red plugs to the R(Right) jacks when making connections with the supplied cords.
- Plug the optical digital cable in securely, as far as it will go.
- Refer to the connecting diagram in the operating instructions of AMPLIFIER/RECEIVER.


Connecting other Audio Equipment

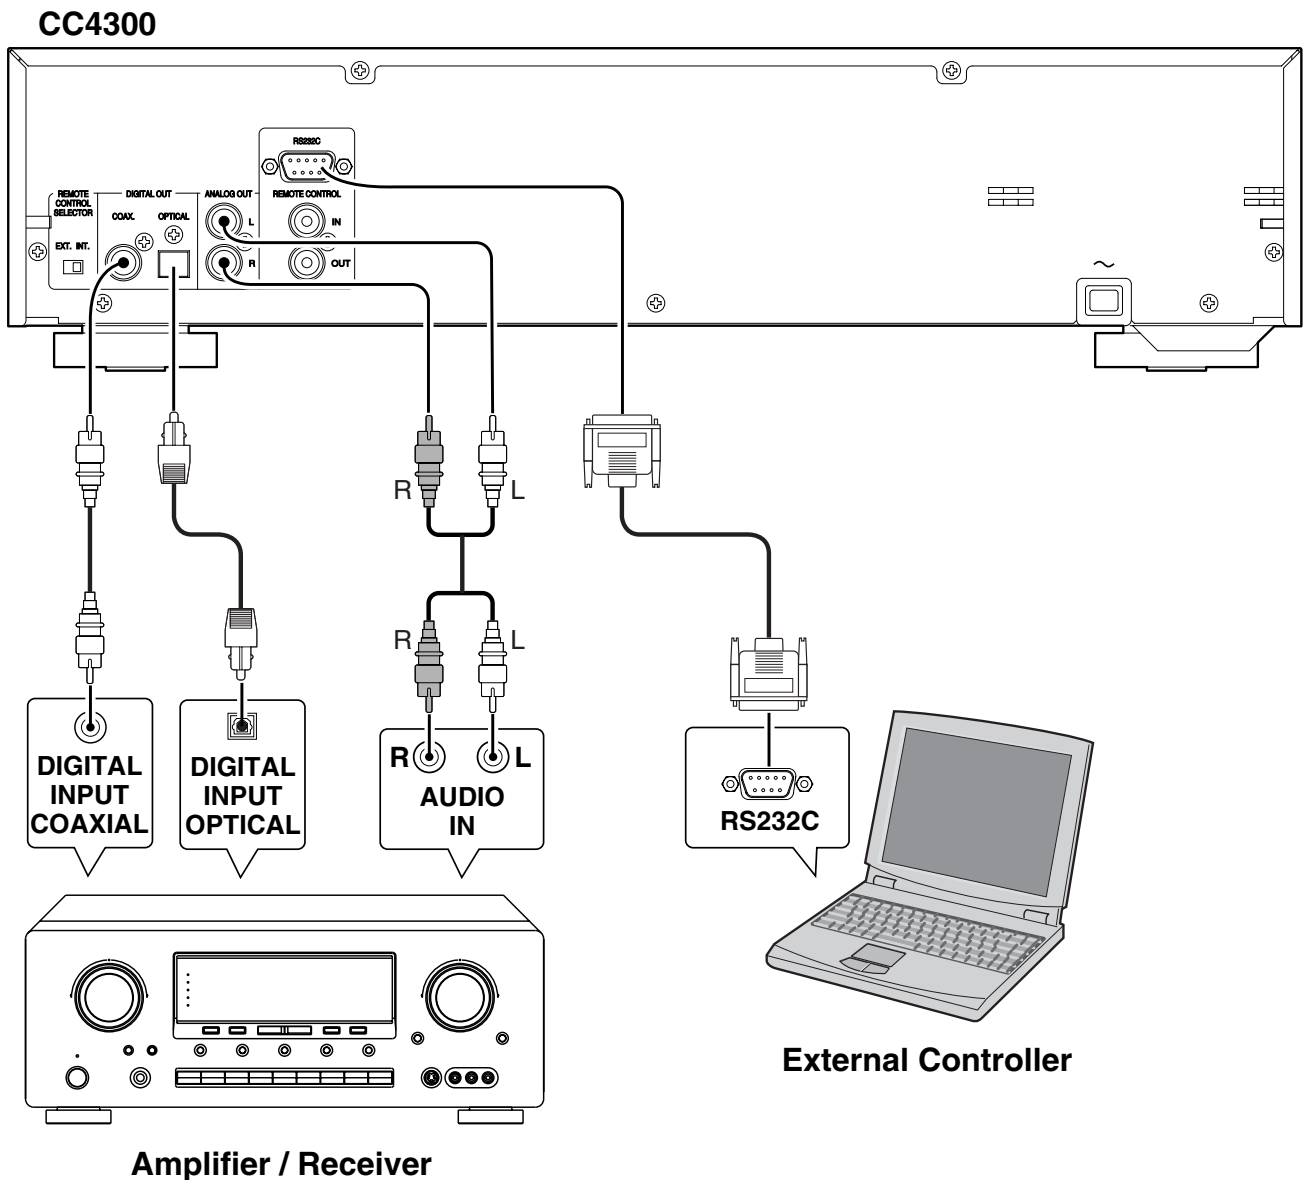

Connecting the Remote Control

English


CC4300

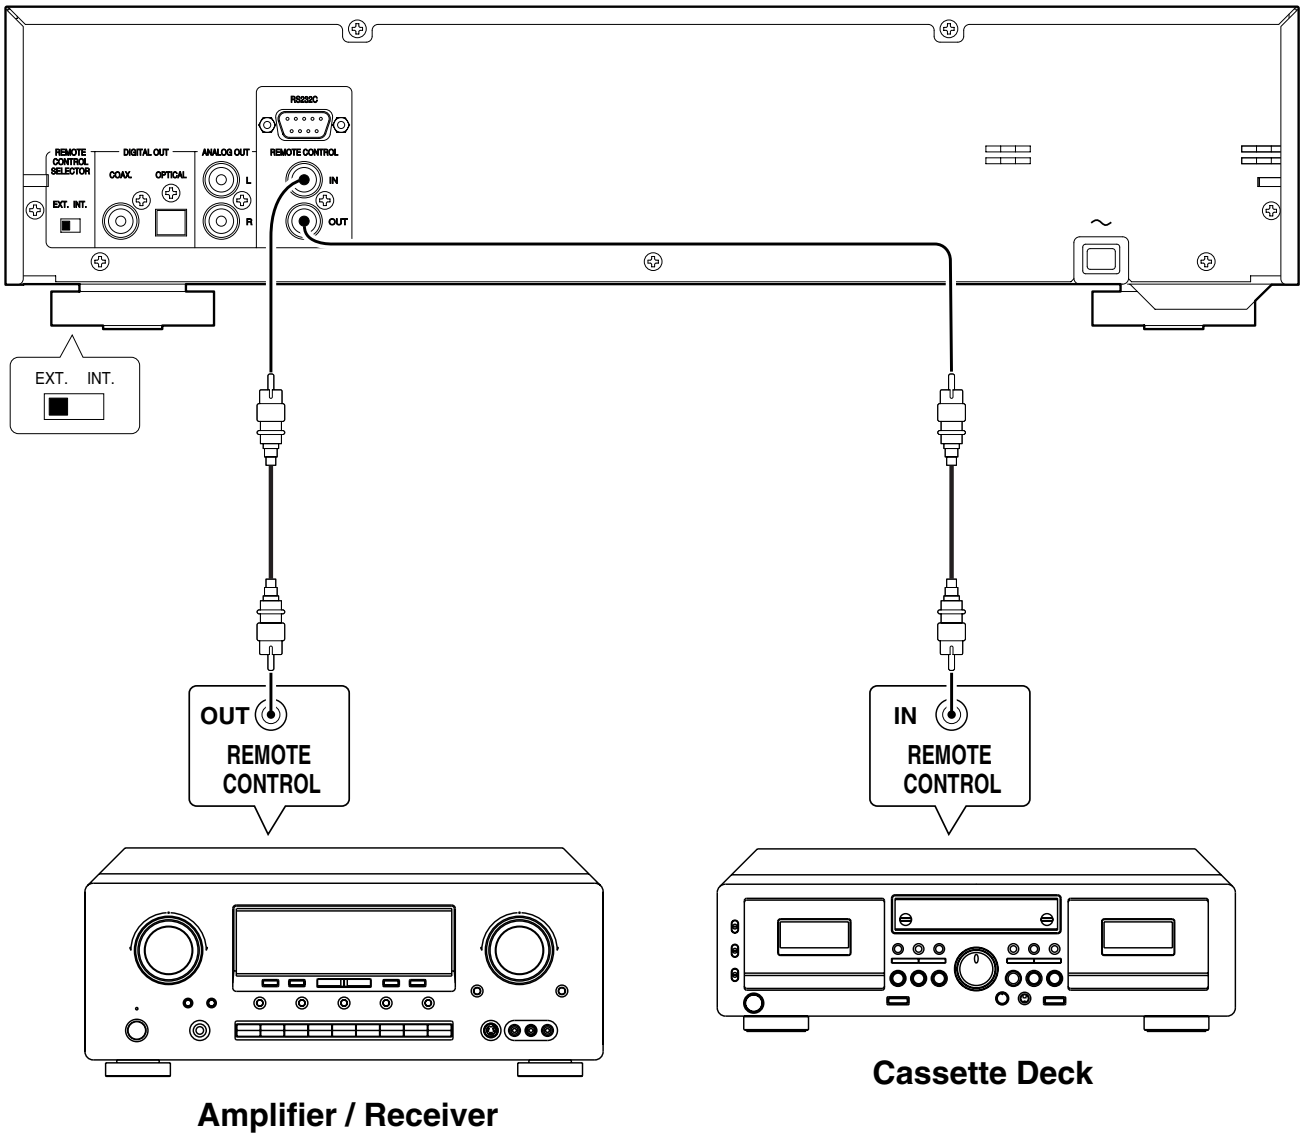

Operations

Playing CDs

1. Press the **POWER ON/STANDBY** button on the unit or the **POWER** button on the remote control to turn on the power.

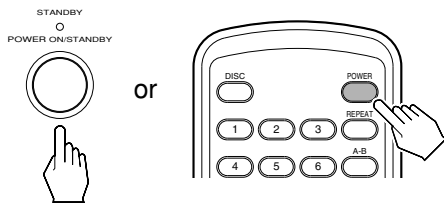

- Each time the **POWER ON/STANDBY** (or **POWER**) button is pressed, this unit is turned on or off.

2. Press the **OPEN/CLOSE** button on the unit to open the disc tray. Load the disc(s) and close the disc tray.




- "➡" indicator lights up when the number of tracks is more than 14.
- For loading discs on other trays each, press the **DISC SKIP** button on the unit.
- 8cm(3 inches) CDs can be loaded on the inside circle of the tray, too.

Note


Do not open or close the tray by force.
Doing so may damage it.

3. Press **Play/Pause** button on the unit or the **Play** button on the remote control to start play.

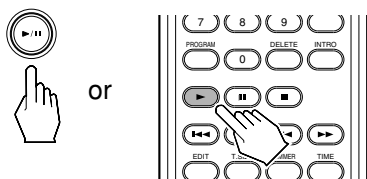


- "▶" indicator lights up.
- The unit plays from the first track on the 1st disc to the last track on the 5th disc.

4. To interrupt play temporarily, press **Play/Pause** button on the unit again or the **Pause** button on the remote control.

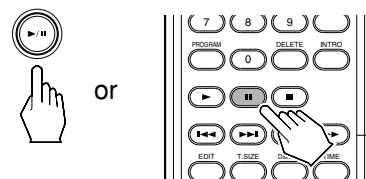


- "||" indicator lights up.
- Press **Play/Pause** button on the unit again or the **Play** button on the remote control to restart play.

5. Press **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control to stop play.

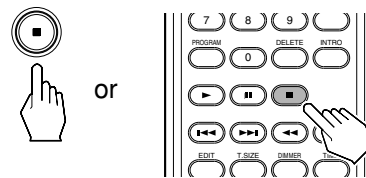

- Display in Stop Mode -

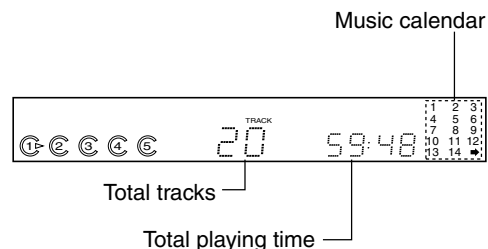


Changing Discs during Play

1. Press the **OPEN/CLOSE** button on the unit to open the disc tray.



2. Change the desired discs.

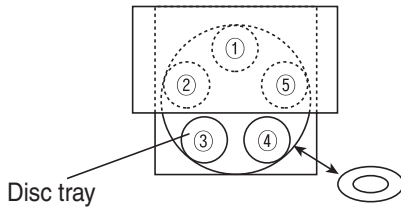


- During playing the disc ①, the discs ③ and ④ can be changed.
- After changing the discs, press the **OPEN/CLOSE** button on the unit to close the disc tray.
- When changing the disc ② or ⑤, press the **DISC SKIP** button on the unit and rotate the disc tray.

Skip and Search Play

❖ Selecting a Disc

- Press the corresponding **Disc selector** button on the unit to start play from the desired disc.
- Press **DISC** button on the remote control first and then the desired disc number(1~5) on the **NUMERIC** buttons within 2 seconds.


(Example) When selecting the disc 3.

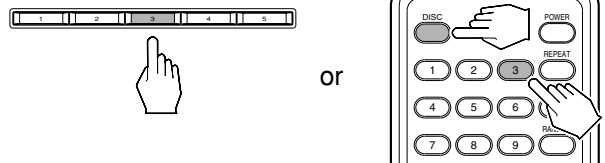

- The first track of selected disc will be played.


❖ Searching for a Passage during Play

- Press and hold down **◀◀ / ▶▶** buttons on the unit or the **◀◀ / ▶▶** button on the remote control until the desired passage is reached.

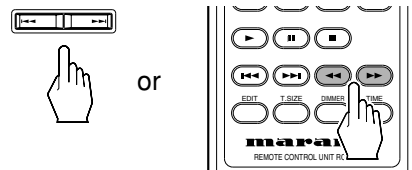

❖ Selecting a Track during Play

- Press **◀◀ / ▶▶** buttons on the unit or the **◀◀ / ▶▶** button on the remote control momentarily and repeatedly until the desired track is selected.

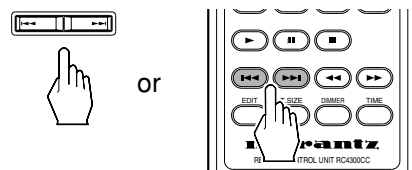

- When using the **NUMERIC** buttons on the remote control.

(Example)


When selecting "9" :

When selecting "22" : → within 2 sec.

Playing Tracks in Random Sequence (Random Play)

❖ 1 Disc Random Play

- Press **RANDOM** button on the unit or the **RANDOM** button on the remote control to play tracks in random sequence.

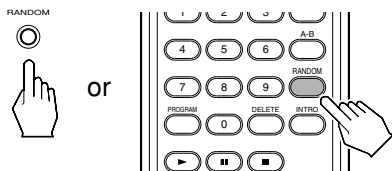

- “RANDOM” indicator lights up.
- The unit automatically selects and plays tracks on the current disc in random sequence.

❖ All Discs Random Play


- In the 1 disc random play mode, press **RANDOM** button again.
- The unit automatically selects a disc among five discs and a track on that disc in random sequence and plays it.
- After that track has been played, the unit continues to select another disc and a track on that disc in random sequence and plays it.
- Press **RANDOM** button again to cancel the random play.
- Each time **RANDOM** button is pressed, the random play mode changes as follows:

→ RANDOM 1 DISC → RANDOM ALL DISCS → OFF

Playing the First 10 Seconds of Each Track (Introscaan Play)

❖ 1 Disc Introscaan Play

- Press **INTRO** button on the unit or the **INTRO** button on the remote control to play the first 10 seconds of each track.

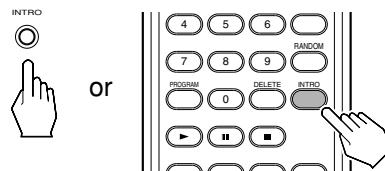

- “INTRO” indicator lights up.
- The unit plays the first 10 seconds of each track from the current disc to the 5th disc.

❖ All Discs Introscaan Play


- In the 1 disc introscaan play mode, press **INTRO** button again.
- The unit plays the first 10 seconds of each first track from the current disc to the last disc.
- Press **INTRO** button again to cancel the introscaan play.
- Each time **INTRO** button is pressed, the introscaan play mode changes as follows:

→ INTRO 1 DISC → INTRO ALL DISCS → OFF

Repeat Play

❖ Repeating a Single Track during Play

- Press **REPEAT** button on the unit or the **REPEAT** button on the remote control after selecting the desired track.

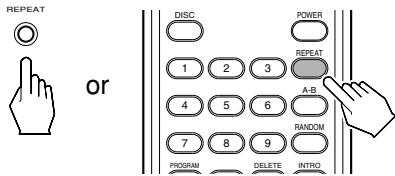

❖ Repeating a Disc during Play

- After selecting the desired disc, press **REPEAT** button again in the 1 track repeat mode.


❖ Repeating a All Discs during Play

- Press **REPEAT** button again in the 1disc repeat mode.
- Each time **REPEAT** button is pressed, the repeat mode changes as follows:



❖ Repeating a Specific Passage during Play

1. At the beginning of the desired passage, press **A<->B** button on the remote control.

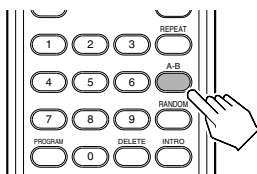

- "REPEAT" indicator lights up and "A<->" indicator is flickering.

2. At the end of the desired passage, press this button again, then "B" indicator lights up and the desired passage is played repeatedly.

- Press **REPEAT** button to cancel the repeat play.


Playing Tracks in Any Sequence (Programmed Play)

Note :


- Up to 32 selections can be programmed to play in any desired sequence.
- The track number greater than 99 can not be memorized.

❖ Programming the Tracks on the CDs

1. In the stop mode, enter the program mode. Press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control.


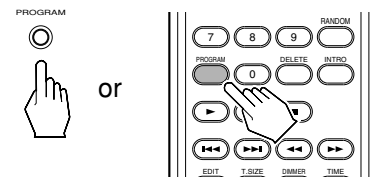


- Display in Program Mode -

 

2. Select the desired disc. Press the corresponding **Disc selector** button or **DISC SKIP** button on the unit. Press **DISC** button on the remote control first and then the desired disc number(1~5) on the **NUMERIC** buttons within 2 seconds.

 
(Example) When selecting the disc 1.

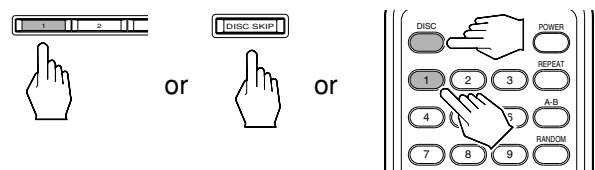


- If the **PROGRAM** button is pressed without selecting a track, the selected disc is programmed as a selection.

3. Select the desired track.
Press **◀◀** / **▶▶** buttons on the unit or the **◀◀** / **▶▶** button or the **NUMERIC** buttons on the remote control.


(Example) When selecting the track 4.

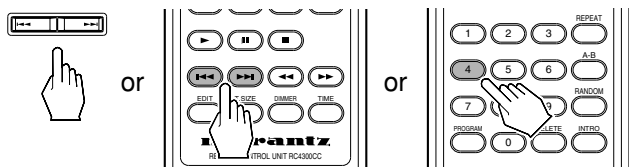

4. Store the selected track in the memory. Press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control.

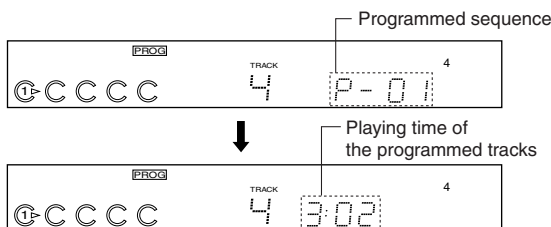

 
- Because it is impossible to know the playing time of each selection from five discs, “--:--” can appear on the time display.



- When selecting a track with the **NUMERIC** buttons, the selected track is stored automatically without pressing the **PROGRAM** button.

5. Repeat the above steps 2, 3 and 4 until the desired program is completed.


6. Start the programmed play.
Press **Play/Pause** button on the unit or the **Play** button on the remote control.

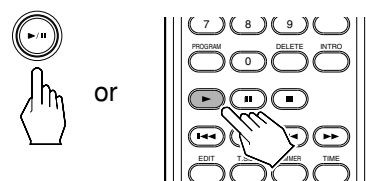

- During the programmed play, when you want normal play without clearing your programmed selections, select the desired disc with the **Disc selector** or **DISC SKIP** button or the desired track on the current disc with the **NUMERIC** buttons, then normal play will start from that disc or that track.
- To return to the program mode (meaning “PROG” lights up in the stop mode), press the **PROGRAM** button in the stop mode.

❖ Checking the Programmed Selections

- Each time the **PROGRAM** button on the unit or the **PROGRAM** button on the remote control is pressed in the program mode (meaning “PROG” lights up in the stop mode), the programmed selections will appear in the programmed sequence.


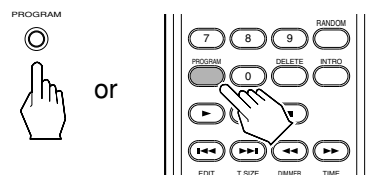


❖ Rectifying Any Wrong Programmed Selection



(Example)

When the track 3, 5 and 7 of the disc 1 are programmed and you want to store the track 7 of the disc 3 instead of the track 5 of the disc 1.

 

1. Find the track 5 of the disc 1 in program checking by press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control.

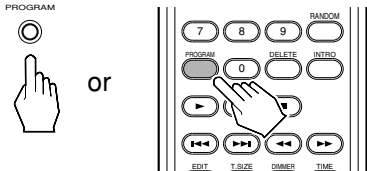

 
2. Select the disc 3.
Press the **Disc selector** button or **DISC SKIP** button on the unit.
Press **DISC** button on the remote control first and then the disc number 3 on the **NUMERIC** buttons within 2 seconds.

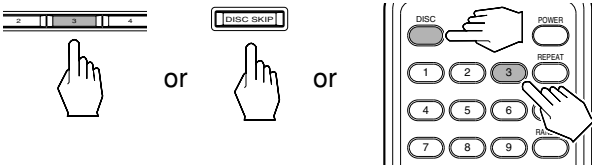

 3. Select the track 7.
Press **◀◀ / ▶▶** buttons on the unit or the **◀◀ / ▶▶** button or the **NUMERIC** buttons on the remote control.

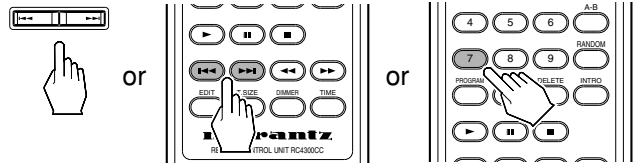

4. Store the selected track in the memory. Press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control.

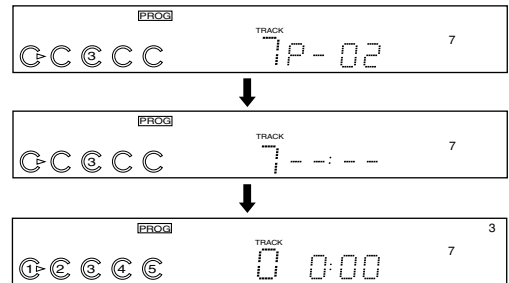


- When selecting a track with the **NUMERIC** buttons, the selected track is stored automatically without the **PROGRAM** button.

❖ Clearing the Programmed Selections


- To Clear One by One

- Each time **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control is pressed in the program mode, the programmed selections are cleared one by one in the opposite sequence.

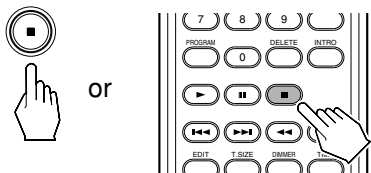

- To Clear All Programmed Selections

- Press **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control for more than 4 seconds in the program mode.

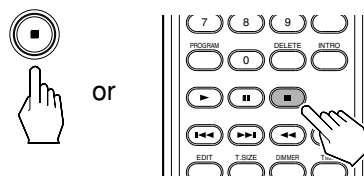


- Opening the disc tray clears all programmed selections, too.




- To Delete a Specific Selection

- Find the desired selection in program checking, and press **Stop/Clear** button to delete.

1. Press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control until the track (or disc) to delete appears on the display.

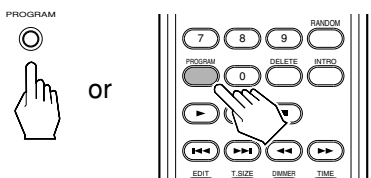

2. Press **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control during the track (or disc) to delete is displayed.

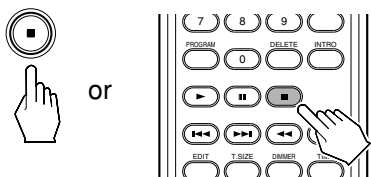



Editing for Recording

Note :

- Up to 30 tracks for auto edit or 32 tracks for manual edit can be edited according to the tape length.
- It is possible only on the current disc.
- Use **Disc selector** or **DISC SKIP** buttons before entering edit mode.

❖ Setting Up Auto Edit

 1. In the stop mode, select the auto edit mode. Press **EDIT** button on the unit or the **EDIT** button on the remote control.

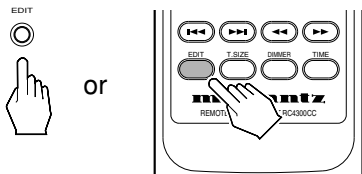


- Each time **EDIT** button is pressed, the edit mode changes as follows:





2. Select the desired tape length. Press **T.SIZE** button on the unit or the **T.SIZE** button on the remote control.

(Example) When the tape length is 46 minutes.

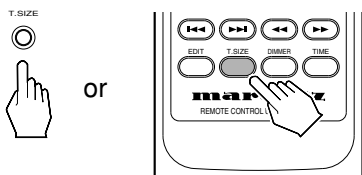

 
- Each time **T.SIZE** button is pressed, the tape length changes as follows:

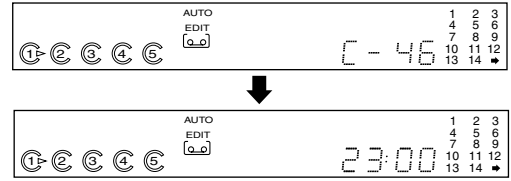



- You can select the tape length at your option with the **NUMERIC** buttons on the remote control.
- By **NUMERIC** buttons, specify tape length of *single way*, although **T.SIZE** stands for tape length of both sides.

(Example)

 When the tape length of each side is 23 minutes.




3. Press the **EDIT** button on the unit or the **EDIT** button on the remote control to automatically edit the tracks to be recorded.

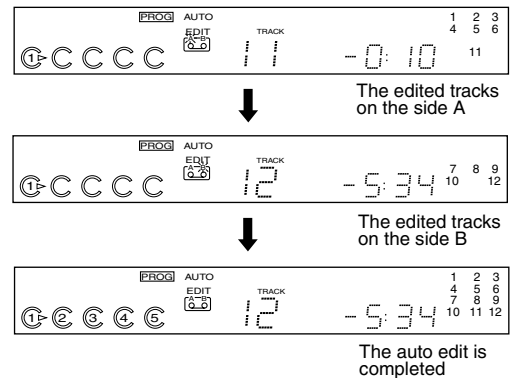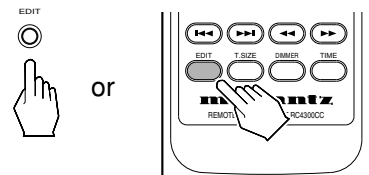


❖ Setting Up Manual Edit

- In the stop mode, select the manual edit mode. Press **EDIT** button twice on the unit or **EDIT** button twice on the remote control.

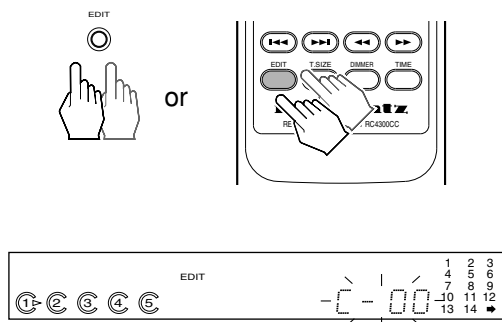


- Select the tape length as you do in "Making auto edit" procedure.

- Press **PROGRAM** button on the unit or the **PROGRAM** button on the remote control to manually edit the tracks to be recorded.

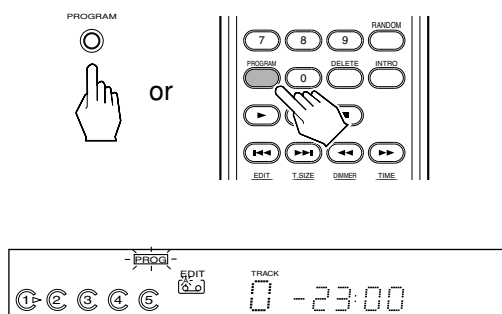


 
- Edit the tracks for the side A repeating steps 3 and 4 in "Playing Tracks in Any Sequence (Programmed Play)" procedure on page 15.



Note :

- During manual edit, if the "-" indicator in the time display disappears and "➡" flickers, it means that the total time of the edited tracks exceeds the tape length. So you should edit again.
- When a track with a number greater than 30 is edited, the time display may show "- : - : -".
- Manual edit is only available on the current disc. If you press **Disc selector** or **DISC SKIP** buttons, the unit exits from edit mode.

 
- Press **EDIT** button on the unit or the **EDIT** button on the remote control to start editing for the side B.

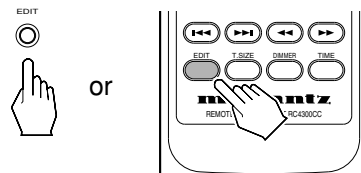

- Do the above step 4 to edit the tracks for the side B.
 - If the **PLAY** button is pressed after editing the tracks, play starts from the first track of the side A for recording.
 - If all tracks of the side A have been played, press the **PLAY** button to start play from the first track of the side B for recording.


❖ Checking the Edited Tracks

- In the edit mode, check as you do the programmed tracks. (refer to “Checking the Programmed Selections” on page 15)

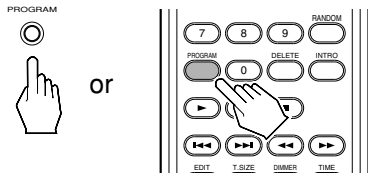

❖ Clearing All Edited Tracks

- In the edit mode, press the **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control for more than 4 seconds.

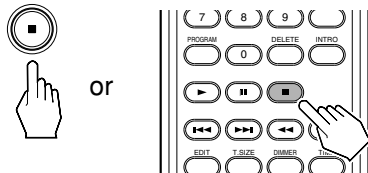

- Opening the disc tray clears all edited tracks, too.



- In the manual edit mode only, you can clear or rectify the edited tracks as you do in “Rectifying Any Wrong Programmed Selection” or “Clearing the Programmed Selections” on page 16 and 17.

❖ Start Edit Recording

Before start editing, connect remote control input of Marantz cassette deck with remote control output of CC4300 by remote control cable.

Reverse mode switch may be set to any of one side (⇐), both sides (⇔) and continuous play (↻).

- **Synchro recording with Marantz auto reverse cassette deck (when set to both sides (⇔) or continuous play (↻) mode).**

1. After setting up Edit program automatically or manually, setup the cassette deck to rec pause state.

2. Press **Play/Pause** button of the unit to start A side program. The player sends out signal to start recording and starts playing A side program after 4 seconds.



3. After A side program complete, player turns to the pause state at the beginning of B side program.

4. When A side of the tape ends up, cassette deck inverts its recording direction and set to rec pause state automatically.

5. Press **Play/Pause** button of the unit manually to start B side recording. Player sends out signal to restart recording and starts playing B side program after 4 seconds.



6. After B side program complete, player stops playing and clears edit program automatically.

- If the tape ends up before edit program of one side completes, for example by wrong tape length have chosen, cassette deck send out signal to player to let the player cancel the rest of program. Player jumps to the beginning of B side if it was A side or stop playing and clear edit program if it was B side.

- **Synchro recording with Marantz one-way cassette deck, or Marantz auto reverse cassette deck set to one side (☐) mode.**

1. After setting up Edit program automatically or manually, setup the cassette deck to rec pause state.

2. Press **Play/Pause** button of the unit to start A side program. The player sends out signal to start recording and starts playing A side program after 4 seconds.



3. After A side program complete, player turns to the pause state at the beginning of B side program.

4. When A side of the tape ends up, Reverse cassette tape or invert recording direction manually and set to rec pause state.

5. Press **Play/Pause** button of the unit manually to start B side recording. Player sends out signal to restart recording and starts playing B side program after 4 seconds.



6. After B side program complete, player stops playing and clears edit program automatically.

- **Recording with Marantz cassette deck without remote cable connection, and recording with the cassette deck other than Marantz.**

1. After setting up Edit program automatically or manually, start recording of cassette deck first.

2. Press **Play/Pause** button of the unit to start A side program. Then player starts playing A side program after 4 seconds.



3. After A side program complete, player turns to the pause state at the beginning of B side program.

4. When A side of the tape ends up, Reverse cassette tape or invert recording direction manually and start recording.

5. Press **Play/Pause** button of the unit to start B side recording. Then player starts playing B side program after 4 seconds.



 

6. After B side program complete, player stops playing and clears edit program automatically.

Deleted Play

When there are the undesired discs or tracks, you can delete up to 32 selections.



❖ Deleting the Undesired Discs or Tracks

1. In the stop mode, enter the delete mode. Press **DELETE** button on the unit or the **DELETE** button on the remote control.

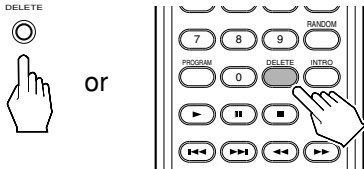

2. Select the undesired disc.
Press the corresponding **Disc selector** button or **DISC SKIP** button on the unit.
Press **DISC** button on the remote control first and then the desired disc number(1~5) on the **NUMERIC** buttons within 2 seconds.

 

(Example) When selecting the disc 1.

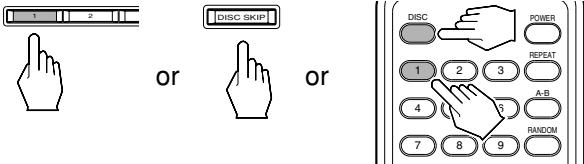



- If the **DELETE** button is pressed without selecting a track, the selected disc is deleted as a selection.

3. Select the undesired track.
Press **◀◀ / ▶▶** on the unit or the **◀◀ / ▶▶** button or the **NUMERIC** buttons on the remote control.

 (Example) When selecting the track 4.

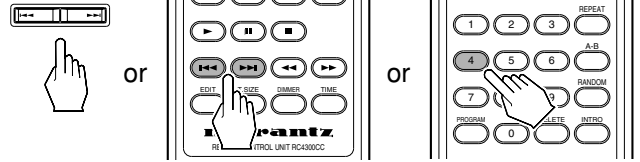

 
4. Delete the selected track. Press **DELETE** button on the unit or the **DELETE** button on the remote control.

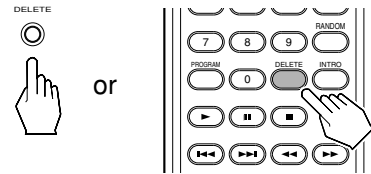

- When selecting a track with the **NUMERIC** buttons, the selected track is deleted automatically without pressing the **DELETE** button.


5. When deleting other tracks on that disc within 8 seconds after the above step 4, repeat the above steps 3 and 4 and when deleting the tracks on other discs, repeat the above steps 2, 3 and 4.

6. Start the deleted play.
Press **Play/Pause** button on the unit or the **Play** button on the remote control.

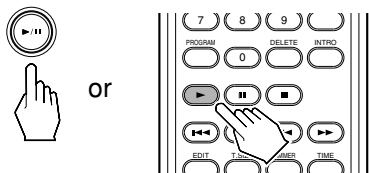

❖ Checking the Deleted Selections


- Each time the **DELETE** button on the unit or the **DELETE** button on the remote control is pressed in the delete mode (meaning “DELETE” lights up in the stop mode), the deleted selections will appear in the deleted sequence.

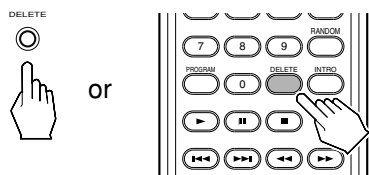

❖ Recovering the Deleted Selections

- To Recover One by One


- Each time **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control is pressed in the delete mode, the deleted selections are recovered one by one in the opposite sequence.

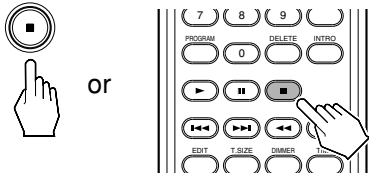


- To Recover a Specific Selection

- Find the desired track in delete selection checking and press **Stop/Clear** button to recover.

1. Press **DELETE** button on the unit or the **DELETE** button on the remote control until the track (or disc) to recover appears.

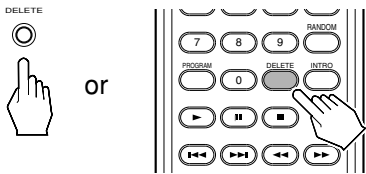


2. Press **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control during the track (or disc) to recover is displayed.

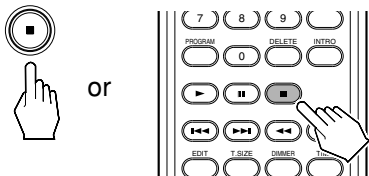

- To Recover All Deleted Selections

- Press **Stop/Clear** button on the unit or the **Stop/Clear** button on the remote control for more than 4 seconds in the delete mode.

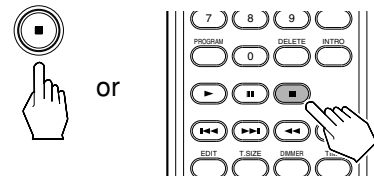


- Opening the disc tray recovers all deleted selections, too.



Selecting a Brightness of the Display



- Each time **DIMMER** button on the remote control is pressed, the brightness of the display changes as follows;

→ ON → DIM →

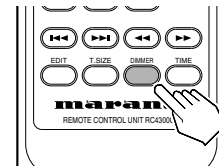

Selecting a Time Display


- Each time **TIME** button is pressed during play, time display changes as follows:

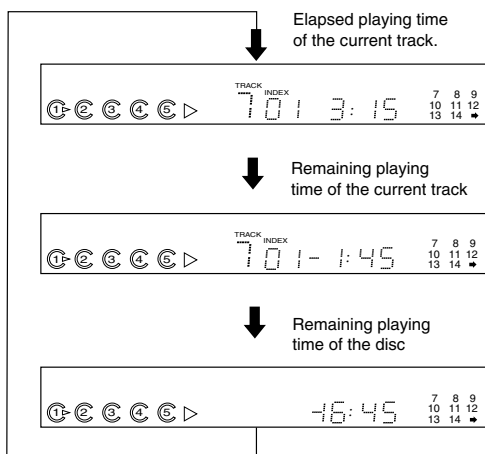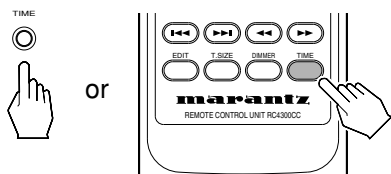

- During random or programmed play, etc., the remaining playing time of the disc may show "- - : -".
- When a track of which number is greater than 30 is programmed, edited or being played, the time display may show "- - : -".

Using the Headphones


- For private listening, insert a plug of the headphone into "PHONES" jack.

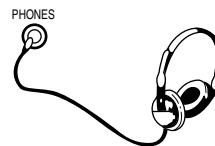

External Control (Serial Interface) RS232C

The unit can receive external control signals by connecting a straight cable on the market to the D-sub 9 pin connector for RS232C external control.

❖ Pin Assignment of the Connector

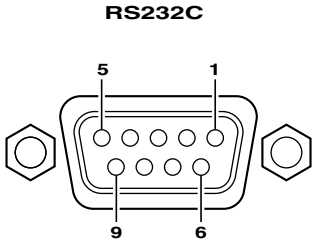

1	NC
2	RX
3	TX
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC


❖ RS232C Physical Specification

Cable	Straight-type
Connector	D-Sub 9 pin (Female type)
Baud rate	9600bps
Data bits	8 bits
Parity	None
Stop bit	1 bit
Flow control	None


❖ Data Packet

A packet contains data from 5 to 8 bytes in length. In serial communication, ASCII code from 00h to 7fh is used. So the HEX data are converted into ASCII code and set to the data packet. The data packet includes CR code (0dh) at the end.

 Example 1: CD Play (Code: 20 53)



Example 2: T.SIZE (Code 20 104 08)

 

The unit can identify following commands on next page.

• **Remote Control Unit (RC4300CC) RC-5 Code**

The unit can be controlled through its infrared IR sensor on the front panel when it receives remote control signals that supports RC-5 signals as shown in the table on the following.
 These remote control (RC-5) codes can also be used if sent through the RS232C port found on the rear panel of the unit.

Key No.	Function	Code	ASCII Code
1	POWER ON/STANDBY	20 12	32h 30h 31h 32h 0dh
2	DISC	20 30	32h 30h 33h 30h 0dh
3	1	20 01	32h 30h 30h 31h 0dh
4	2	20 02	32h 30h 30h 32h 0dh
5	3	20 03	32h 30h 30h 33h 0dh
6	4	20 04	32h 30h 30h 34h 0dh
7	5	20 05	32h 30h 30h 35h 0dh
8	6	20 06	32h 30h 30h 36h 0dh
9	7	20 07	32h 30h 30h 37h 0dh
10	8	20 08	32h 30h 30h 38h 0dh
11	9	20 09	32h 30h 30h 39h 0dh
12	0	20 00	32h 30h 30h 30h 0dh
13	REPEAT (1/ALL)	20 29	32h 30h 32h 39h 0dh
14	A-B (A<->B)	20 59	32h 30h 35h 39h 0dh
15	RANDOM	20 28	32h 30h 32h 38h 0dh
16	PROGRAM (PROG/REV)	20 36	32h 30h 33h 36h 0dh
17	DELETE (DEL/REV)	20 49	32h 30h 34h 39h 0dh
18	INTRO	20 43	32h 30h 34h 33h 0dh
19	PLAY ►	20 53	32h 30h 35h 33h 0dh
20	PAUSE ■■	20 48	32h 30h 34h 38h 0dh
21	STOP ■	20 54	32h 30h 35h 34h 0dh
22	PREVIOUS (SKIP) ◀◀	20 33	32h 30h 33h 33h 0dh
23	NEXT (SKIP) ▶▶	20 32	32h 30h 33h 32h 0dh
24	REW (SEARCH) ◀◀	20 50	32h 30h 35h 30h 0dh
25	FF (SEARCH) ▶▶	20 52	32h 30h 35h 32h 0dh
26	EDIT	20 104	32h 30h 31h 30h 44h 0dh
27	T.SIZE	20 104 08	32h 30h 31h 30h 44h 30h 38h 0dh
28	DIMMER (DISPLAY)	20 71	32h 30h 37h 31h 0dh
29	TIME	20 11	32h 30h 31h 31h 0dh

• **Acceptable RC-5 Code**

These RC-5 codes are not supported by remote control unit (RC4300CC), but they can also be used if sent through the RS232C port found on the rear panel of the unit.

Key No.	Function	Code	ASCII Code
a	POWER ON	20 12 01	32h 30h 31h 32h 30h 31h 0dh
b	STANDBY	20 12 02	32h 30h 31h 32h 30h 32h 0dh
c	DISC 1	20 55	32h 30h 35h 35h 0dh
d	DISC 2	20 56	32h 30h 35h 36h 0dh
e	DISC 3	20 57	32h 30h 35h 37h 0dh
f	DISC 4	20 64	32h 30h 36h 34h 0dh
g	DISC 5	20 65	32h 30h 36h 35h 0dh

Troubleshooting

If your unit should not perform as expected, consult the table below to see if the problem can be corrected before seeking help from your dealer or our service organization.

Problem	Possible Cause	REMEDY
No power	<ul style="list-style-type: none"> • The AC input cord is disconnected. • The POWER switch is not pressed correctly. 	<ul style="list-style-type: none"> • Connect the cord securely. • Press the POWER button to ON.
No play	<ul style="list-style-type: none"> • The disc is loaded upside down. • Dirty disc. • Defective or deeply scratched disc. 	<ul style="list-style-type: none"> • Reload the disc with the printed side up. • Clean the disc. • Load another disc.
No sound	<ul style="list-style-type: none"> • Incorrect connections. • Incorrect operation of the amplifier. • The " II " indicator lights up. 	<ul style="list-style-type: none"> • Make connections correctly. • Operate the amplifier correctly. • Press the PLAY or PAUSE button to cancel the pause mode.
Poor or distorted sound	<ul style="list-style-type: none"> • The unit is connected to the PHONO input jacks of the amplifier. • Poor connections. 	<ul style="list-style-type: none"> • Make connections correctly. • Check the connections and connect all cords securely.
Sound skips	<ul style="list-style-type: none"> • Defective or deeply scratched disc. • This unit is placed on a surface that is subject to vibration or physical shock. 	<ul style="list-style-type: none"> • Play another disc. • Place this unit on a stable surface.
Programming or deleting does not perform.	<ul style="list-style-type: none"> • The disc is dirty or badly scratched. • The programming or deleting procedure is not correct. • The number of the programmed selections is 32. 	<ul style="list-style-type: none"> • Try again with a scratch-free disc. • Try again. • Check the number of the programmed selections.
"Error" is displayed.	<ul style="list-style-type: none"> • Incorrect operation. 	<ul style="list-style-type: none"> • Press the OPEN/CLOSE button to open and close the disc tray or press the POWER switch to turn the power off and on.

Specifications

SYSTEM Compact Disc Digital Audio

TYPICAL AUDIO PERFORMANCES

Number of channels 2
Frequency response 20~20,000 Hz \pm 0.5 dB
Signal to noise ratio, A Wtd. 105 dB
Dynamic range 95 dB
Total harmonic distortion, 1 kHz 0.005 %
Wow and flutter Quartz crystal precision
Audio output level 2 V RMS
Digital output
Optical -19 dBm
Coaxial 0.5 Vp-p (75 Ω)

OPTICAL READOUT SYSTEM

Laser Semiconductor AlGaAs
Wavelength 780 nm

SIGNAL FORMAT

Sampling Frequency 44.1 kHz
D/A Conversion 1 bit P.L.M. D/A Conversion
Oversampling 8 times

GENERAL

Power supply AC 120 V, 60 Hz
Power consumption 12 W
Dimensions (W x H x D) 17-5/16 x 4-7/16 x 15-1/2 inches (440 x 113 x 393 mm)
Weight (NET) 12.8 lbs (5.8 kg)

Note : Design and specifications are subject to change without notice for improvements.

COUNTRY	COMPANY	ADDRESS
ALGERIE	Azur 2000	8, Lotissement Ben Hatadi, Alger, Algerie
ARMENIA	NGYIG Ltd.	47 A/75 St. Lalaiaants, 375000 Yerevan, Armenia
AUSTRALIA	Jamo Australia Pty. Ltd.,	24 Lionel Road, Mt. Waverley, VIC 3149, Australia
AUSTRIA	Huber & Prohaska GmbH	Taborstraße 95 / Ladestraße 1, Gebäude Hangartner, A-1200 Wien, Austria
BAHREIN	Ambassador Stores	P.O. Box 237,141, Government Avenue, Manama,Bahrein
BANGLADESH	Target	1078, Ramjoy Mohanja Lane Asadgonj, Chittagong 4000, Bangladesh
BELGIUM	Van der Heyden Audio N.V.	Brusselbaan 278, 9320 Erembodegem, Belgium
BULGARIA	Ariescommerce GmbH	Makedonia Blvd. 16, 1606 Sofia, Bulgaria
CANADA	Lenbrook Industries Limited	633 Granite Court, Pickering, Ontario
CHINA	Guang Chang Audio International Co., Ltd.	No.38 Yushan Road, ShiQiao, Pan Yu, Guang Dong, China
CYPRUS	Empire Hifi systems Ltd.	P.O. Box 5604, Nicosia, Cyprus
CZECH REPUBLIC	Audio International	Sokolska 41, 67902 Rajecsko, OKR,Blansko, Czech Republic
DENMARK	Audio Nord	Dali Allé 1, 9610 Noerager, Denmark
DUBAI	V.V.& SONS	P.O. Box 105, Dubai, U.A.E.
EGYPT	Solimco	9, El Attibaa St. Doki, Cairo, Egypt
ESTONIA	HiFi Club Estonia	Ehte 4, 90503 Haapsalu, Estonia
F.Y.R.O.M.	T.P. KODI	ul.Cedomir Kantargiev 21a, Skopje, Former Yugoslavian Republic of Macedonia
FINLAND	Audio Nord	Uudenmaankatu 4-6, Helsinki SF-00120, Finland
FRANCE	Marantz France	A division of Marantz Europe B.V., P.O. Box 301, 92 156 Suresnes Cedex, France
GERMANY	Marantz Deutschland	Hakenbusch 3, 49078 Osnabrück, Germany
GREECE	Adamco S.A.	188, Hippocratous Street, 11471 Athens, Greece
HEADQUARTERS EUROPE:	Marantz Europe B.V.	P.O. Box 8744, 5605 LS Eindhoven, The Netherlands
HONG KONG	Marantz Asia Ltd.	Unit 1706, Metroplaza II, 223 Hing Fong Road, Kwai Fong, N.T., Kowloon, Hong Kong
HUNGARY	Infovox Ltd.	Terez Krt.31, 1067 Budapest, Hungary
ICELAND	ID Electronics Ltd.	Armula 38, 108 Reykjavik, Iceland
INDIA	NOVA Audio Private	8,Punam Co-op.Society 29/30 Road#5, Union Park MUMBAI 400052, India
IRAN	Home Co.	5th floor no 878 Philips Building Enghelab ave, P.O. 11365/7844 Tehran, Iran
IRELAND	Marantz Ireland	Clonskeagh, Dublin 14, Ireland
ISRAEL	Elmor Ltd.	52 Heh Beiyar Street, Kikar Hamedina, Tel Aviv, Israel
ITALY	Marantz Italy	Via Casati 23, 20052 Monza (Milano), Italy, Servizio Consumatori 1678-20026, Numero Verde
IVORY COAST	Hifivoir	B.P. 2428, Abidjan 01, Ivory Coast
JAPAN	Marantz Japan Inc.	35-1 Sagami Ohno 7-Chome, Sagamihara-shi, Kanagawa 228-8505, Japan
KOREA	Mk Enterprises Ltd.	121-210, 2F Shinhan Bldg., 247-17 Seokyo-dong, Mapo-ku, Seoul, Korea
KUWAIT	alAlamiah Electronics Intl.	P.O. Box 8196, Salmiah 22052, Kuwait
LATVIA	Ace Ltd.	61, LacPlesa Str., Riga LV 1011, Latvia
LEBANON	AZ Electronics S.A., 1,	P.O. Box 11 2833, Beirut, Lebanon
LITHUANIA	Accapella Ltd.	Ausros, Vartu G/5, Pasazo SKG., 2001 Vilnius, Lithuania
MALAYSIA	Wo Kee Hong Electronics Sdn. Bhd.	Suite 8.1, Level 8, Menara Genesis, No. 33, Jalan Sultan Ismail, 50250 Kuala Lumpur, Malaysia
MALTA	Doneo Co Ltd.	78 The Strand, Sliema SLM07, Malta
MAURITIUS	SKR Electronics Ltd.	P.O. Box 685, Bell Village, Port Louis, Mauritius
MILITARY MARKET EUROPE	PASCO GmbH	PO BOX 1280, Sandhausen 69200, Germany
NEW ZEALAND	Wildash Audio Systems	14 Malvern Road, Mt. Albert, Auckland, New Zealand
NORWAY	Audio Nord	Sandkerveien 64, Oslo 0483, Norway
OMAN	Mustafa & Jawad Trading CO.	P.O. Box 1918, Ruwi, Oman
POLAND	Philips Polska Sp. z.o.o.	Al.Jerozolimskie 195b, 02 222 Warszawa, Poland
PORTUGAL	Corel2	Comércio de Electrónica Lda., Av. Luís Bivar, No 85 A, 1050 Lisboa, Portugal
PROFESSIONAL EUROPE	Marantz Professional Products	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
PROFESSIONAL U.S.A.	Marantz Professional Products	Distributed by: Superscope Technologies Inc., 1000 Corporate Blvd. Ste.D, Aurora, Illino
QATAR	Almana & Partners W.W.L.	P.O. Box 49, Doha, Qatar
REUNION	Vision +	180 Rue du Marechal Leclerc, 97400 Saint Denis, Ile de la Reunion
ROMANIA	Nova Music Entertainment	5, Zagazului Str. Bl.1G,apt.18, sector 1,Bucharest, Romania
RUSSIA	Absolute Audio	7/2, Montazhnaya Street, 107497 Moscow, Russia
SAUDI ARABIA	Adawlia Univ. Electr. Apl	P.O. Box 2154, Alkhubar 31952, Saudi Arabia
SINGAPORE	Wo Kee Hong Distribution PTE Ltd.	130 Joo Seng Road, #03-02 Olivine Building, Singapore 368357
SLOVAKIA	Bis Audio s.r.o.	Nam. SNP 10, 96001 Zvolem, Slovakia
SLOVENIA	Bofex	Smartinska 152, HALA V/3, 61000 Ljubljana, Slovenia
SOUTH AFRICA	Coherent Imports (PTY) Ltd.	P.O. Box 1614, Alberton, 1450, South Africa
SPAIN	Marantz Spain	Martinez Villergas 2, Apartado 2065, Madrid 28027, Spain
SRI LANKA	The listening Room	Mezzanine Floor, The Landmark 385, Galle Road, Colombo - 3, Sri Lanka
SWEDEN	Audio Nord	Almedalsvagen 4, Gotenborg 402-23, Sweden
SWITZERLAND	Sound Company AG	Postfach, 8010 Zürich, Switzerland
SYRIA	Hamzeh & Partners	Hafez Ibrahim Str. No 117, Damascus Shalan, Syria
TAHITI	Covecolor	Av. Prince Hinoi, Cours de l'union sacré, P.O. Box 2334, Papeete, Tahiti
TAIWAN	Pai-Yuing Co. Ltd.	6th No 148 Sung Kiang Road, Taipei 10429, Taiwan R.O.C.
THAILAND	MRZ Standard Co. Ltd.	746-750 Mahachai Road, Wangburapa, Bangkok 10200, Thailand
TUNESIA	Societe EDEVIG	40, Avenue du Golfe Arabe, El Menzah, 1004, Tunesia
TURKEY	Türk Philips Ticaret A.S.	Yukari Dudullu Organize sanayi Bolgesi, 2.Cadde no.28, 81260 Umraniye-Istanbul, Turkey
U.K.	Marantz Hifi UK Ltd.	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
U.S.A.	Marantz America Inc.	1100 Maplewood Drive Itasca, IL 60143, U.S.A.
YUGOSLAVIA	ITM Company	Omladinskih Brigada 86, 11070 Belgrade, Yugoslavia

WWW.MARANTZ.COM

marantz® is a registered trademark.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>