



Password Journal

N9498
For 1 player / Ages 6 and up
INSTRUCTION MANUAL
P/N 823C9200 Rev.A

Now you can protect and reveal your secrets in your private journal while listening to your favorite music on your MP3 player! The cover stays locked until you say your secret password, and then locks automatically when you close it.

Once inside your Password Journal®, you can activate your show and Glow Light by simply speaking into your journal. Write your personal thoughts and then turn on your Glow Light to make them magically appear. Plus, you can store your important stuff in the secret compartment.

It's the perfect journal for a Cool and Connected Girl Tech® girl!

GETTING STARTED


BATTERY INSTALLATION / REPLACEMENT

This game is powered by three (3) AA batteries (not included).

- Using a screwdriver (not included), loosen the screw until the battery compartment door can be removed.

E

- Insert three (3) AA batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.
- For longer life use only alkaline batteries.
- Replace the batteries when the product does not function properly.
- Remove batteries and dispose of them safely.

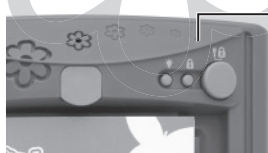

Reset

NOTE: You will have 20 seconds to replace the old batteries before your password and set-up information is lost. Should you lose your password or set-up information, you will need to re-enter them.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

BUTTON FUNCTIONS

Audio In – Plug the cord of your MP3 Player into the Audio In plug to listen to your favorite tunes.

Note: Use your MP3 Player to adjust the volume of your music.




Microphone – Speak clearly into the Microphone when recording your password.

Light - Show / Glow – Press the “Light” Button once for using the Glow Light. Push the button once again for the Show Light and another time to turn the light off.

NOTE: The UV light will automatically shut off after 1 minute.

Security – The Security Button adds even more protection to your Password Journal®. The button has high, low and off settings. On high, you need to speak your secret password perfectly clearly. On low, you can say your password softer and not as clearly. When you switch to the off setting, your voice recognition no longer works.

Access Button – Press and hold the Access Button to enter and open your journal.

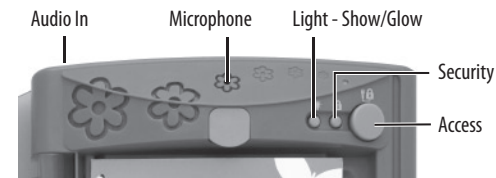

SET UP

1. RECORDING YOUR PASSWORD

After installing the batteries, press the Access Button. The door will automatically open. Press and hold the Access Button once again then say your chosen password into the microphone.

NOTE: If you do not wait until the light is on, the Password Journal® will not “hear” your password and will prompt you to speak again: “Error! Record password.”

Password Journal® will prompt you to repeat your new password again: “Repeat password”. If you have spoken your password correctly, it will be accepted: “Password recorded”.

HINT: Be sure to speak clearly and say your password the EXACT same way each time! When recording your password, make sure you are in a quiet place. If the Password Journal® does not accept your password after speaking it clearly, try whispering the password.

You may want to write down your password in case you forget it - but be sure to write it in a safe place or it won't be a secret anymore!

If you do not want to set a password, ignore voice instructions until finished. Access button will automatically open journal.



Sugar Cubes™



Stylin' Studio™



Wishful Daisy™



USING YOUR PASSWORD JOURNAL®

1. CHANGING YOUR PASSWORD

From time to time, you may want to change your password (especially if you think someone else knows it!). Open Password Journal® using your old password. To change your password, press and hold the Access Button for 1/2 second. The Password Journal® will then prompt you to record your new password. Say your chosen password in the microphone. Your password can be any word of your choice, such as "cat", "popcorn" or "flower".

NOTE: Password Journal® will prompt you to repeat your new password again: "Repeat password". If you have spoken your password correctly, it will be accepted: "Password recorded".

2. TURNING ON THE LIGHT

Pull up the Light from inside your Password Journal®. Then locate the Light Button on the front of your journal. Press the Light Button to choose either show, glow or off by repeatedly pressing the Light Button. If the door is closed while the light is still on, the light automatically turns off.

3. USING THE GLOW LIGHT AND PEN

WARNING: The Glow Light emits UV light. Do not look directly at the light bulb.

Use the special Glow Light pen included in your Password Journal® to write your personal secrets then reveal them with the Glow Light. To activate the Glow Light locate the Light Button on the front of your Password Journal®. Press the Light Button until the Glow Light appears.

CAUTION

- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Keep these instructions for future reference as they contain important information.

FOR PRODUCT SOLD IN CANADA POUR LES PRODUITS VENDUS AU CANADA

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

(VALID FOR CANADA ONLY - VALABLE AU CANADA SEULEMENT)

Operation is subject to the following two conditions :

- (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Hereby, Mattel declares that this toy is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC, 88/378/EEC. Suitable for use in all EU member states. A copy of the Declaration of Conformity may be obtained from Mattel UK Ltd.

6-MONTH LIMITED WARRANTY FOR USA

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 6 months from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty

does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement, and return shipment, will be free of charge.

TOLL-FREE NUMBER: **1-800-803-9611**. Hours: 9:00 AM - 7:00 PM Eastern Time; Monday - Friday; 11:00 AM - 5:00 PM; Saturday.

ADDRESS FOR RETURNS: **CONSUMER RELATIONS, 636 GIRARD AVENUE, EAST AURORA, NY 14052.**

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

© 2008 Mattel, Inc. All Rights Reserved.
RADICA USA Ltd., 16650 Westgrove Dr., Suite 500, Addison, TX 75001. www.radicagames.com[™]
Helpline 1.800.803.9611 or service.mattel.com[™]
Retain this address for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1.800.803.9611.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsingshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1.800.803.9611.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com[™] or call 1.800.803.9611 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

SERVICE.MATTEL.COM[™]

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>