

Dual Band mobile phone

**Savvy**  
DUAL BAND

## *User manual*



*Let's make things better*



**PHILIPS**

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# TABLE OF CONTENTS

Table of contents		Read archived messages	17
Glossary	1	Send short messages (SMS)	17
Before you start	2	Service center number	17
The micro-SIM card	2	Emotion icons	18
The battery	2	Send short messages from phonebook	19
Insert the micro-SIM card	3	Usual messages	19
Insert the battery	3	Calls	20
Discover your phone	4	View calls	20
Display	5	Delete all calls	20
Entering text	6	Meters	21
Basic functions	7	View meters	21
Switch ON/OFF	7	Reset meters	21
Voice dialling	7	Settings	22
Make a call	7	Set up meters	22
Answer or reject a call	8	Key tones ON/OFF	22
Earpiece volume	8	Choose ringer	23
Consult last calls	8	Cell broadcast	23
Adjust ringer volume	8	View topics, add a topic	23
Emergency call	9	Manual registration	24
Change language	9	Voice mailbox number	24
International call	9	Consult your voice messages	25
Keypad lock/unlock	9	Security	25
Special functions	10	Pin request,	25
Answer a second call	10	change PIN and PIN 2 codes	25
Automatic redial	10	Fixed names	26
Scratchpad	10	Extra	27
Touchtones (DTMF)	11	Alarm clock, (set off/set on)	27
Hide your identity	11	Set clock	27
Setting up Flash Dial	11	Calculator	28
Menus	12	Euro converter	28
Discover the Compass key	12	Biorythm calendar	29
Names	13	Stopwatch	29
Add a name	13	Call forwarding	30
Add voice dial	13	Forward always to voice mail	30
View names in the name list	14	Forward always to number	30
Quick access to names	14	Cancel all	30
Search for a specific name	15	Philips Authentic Accessories	31
Road your own number	15	Troubleshooting	33
Delete a name	15	Safety Precautions	34
Messages	16	Index	
Read new messages	16		

## SWITCH ON



Press and hold

	Enter PIN:
	—



Enter your PIN code.



## MAKE A CALL



Enter phone number.



Call the number

(e.g.: 112 for emergency see p. 9)

## ANSWER A CALL

	12345678



Accept.

## END A CALL



End.

## ADD A NAME

	Network



Enter phone number.

	1234_



	1234_
	◀ Store no. ▶



	Name :
	—



Enter name



	Number :
	1234_



If number is OK

	Stored

For Voice dial options  
(see page 13)

## ACCESS TO MENU



Enter or exit the menus.

## NAVIGATION



Move Up or Back.



Move Right.



Move Left.



Move Down or Forward or Validate.

## SWITCH OFF



Press and hold.



When your phone is switched off, you cannot receive calls.

# MENU

**FORWARDING MESSAGES NAMES CALLS EXTRA SETTINGS SECURITY**

## Forwarding

Always Status ◀ If no reply ▶ If busy Unreachable Cancel all

## Messages

Centre no. Archive ◀ Send ▶ Usual msg. Forwarding

## Names

Search ◀ View ▶ Add Own number

## Calls

Delete all ◀ View ▶ Meters

## Extra

Stopwatch Clock ◀ Alarm clock ▶ Calculator BioCalendar Converter

## Settings

Register Key tones ◀ Ringer ▶ Voicemail Box number Broadcast

## Security

Change PIN2 Change PIN ◀ PIN code ▶ Fixed names Restriction

 
<b>DTMF</b>	Dual Tone Multi Frequency The tones are transmitted by the phone to the network. They are used to interrogate answering machines, transmit codes,...
<b>GSM Network</b>	Global System for Mobile communications. The type of phone network used by your phone.
<b>PIN Code</b>	Personnal Identification Number, this is the secret code of the SIM Card. If you, or someone else, enters the wrong PIN code three times your SIM card is blocked. <b>If this happens, please contact your service provider.</b>
<b>PIN2 Code</b>	Secret code that allows you to access certain SIM card dependent features. If you, or someone else, enters the wrong PIN2 code three times your SIM card is blocked. <b>If this happens, please contact your service provider.</b>
<b>PUK Code</b>	Secret code used to unblock your SIM card if you, or someone else, enters the wrong PIN code three times. <b>This code will be given to you by your service provider.</b>
<b>Roaming</b>	Using your phone in a network other than your home network in your country or abroad.
<b>SIM card</b>	Subscriber Identification Module. This card which is provided by your GSM service provider allows you to make phone calls with your GSM phone. Your phone number is contained inside the card.
<b>SMS</b>	Short Messages Service. This service provided by the operator allows you to send and receive short written messages (Maximum : 160 characters).

From your card, remove  
the micro-SIM card

## **The micro-SIM card**


To use your phone, you must insert a valid micro-SIM card supplied by your GSM network operator. When you switch the phone on, it may ask for the PIN code. The PIN code is the secret code of the micro-SIM card.

The micro-SIM card contains your subscription number and phone number. It also contains a memory in which you can store phone numbers and messages. If you use your micro-SIM card on another phone, you still retain the same phone number, stored numbers, and messages.

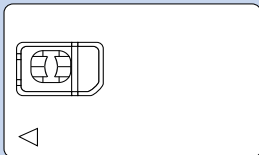

## **The battery**

 Your phone is powered by a rechargeable battery.

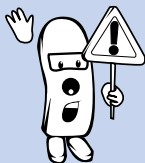

- After you plug in the battery, please wait a few seconds before pressing the on/off key to switch the phone on.
- A battery only reaches its maximum capacity after being totally discharged and recharged 2 or 3 times.
- A battery lasts longer if you allow it to fully discharge from time to time.
- If you do not use your phone for several days, it is better to remove the battery.


## **Remove the battery cover**

 Press on the latch on the back of the phone and lift off the battery cover.




## **Remove the battery (if necessary)**

Lift up on the bottom of the battery and remove it from the phone.

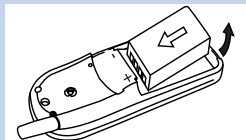


**Insert the micro-SIM card**

 First, place the micro-SIM card into the appropriate slot in the battery compartment (the clipped corner should be at the top left). Then, slide the card with your finger until it stops.

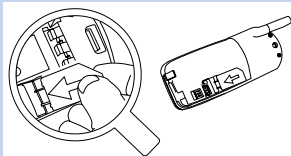**Insert the battery**

 
1. Keep the battery + and - on the top facing the + and - of the phone.
2. Slide the battery onto the contacts points and press.

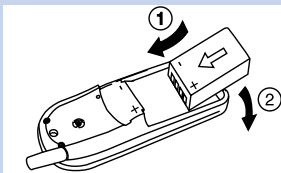**Replace the battery cover**

Hook the battery cover onto the hinges on bottom of phone and press forward until the latch catches.

**Charge the battery**

 With the battery inserted in the phone, plug the connector into the right socket at the base of the phone. Next, plug the transformer unit into an AC power socket.

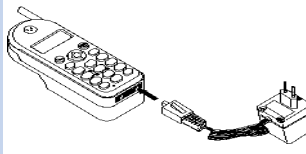

The only way to turn off the charger is to unplug it, so use an easily accessible AC power socket.

The battery icon on your phone's display indicates the state of the charge process:

- Bars moving = battery is charging.
- Bars steady = battery is fully charged.
- Battery outline flashing (see Troubleshooting p. 32).

You can switch the phone on and use it during charging.



*The first time you charge the battery and later, if it is completely discharged, the battery icon will only appear 2 to 3 minutes after you connect the charger. Please charge the phone for a minimum of 3 hours before first use.*

# DISCOVER YOUR PHONE

**"Compass" key**  
use this key to navigate  
in the menus,  
the OK key is used to  
validate information

**Green "CALL" key**  
press this key to dial the  
number or name on the  
display, or use it to  
answer a call

**"CLEAR" key**  
to delete numbers and  
letters on the display

**Keypad**  
to enter  
numbers and  
text

**Earpiece**  
listen here

 
**Antenna**


**Display**  
see next page

**Red "ON/OFF" key**  
a long press on  
this key switches  
the phone on/off,  
a short press ends a  
call

**MENU key**  
to enter and exit  
the menus

**Microphone**

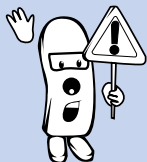

*If you encounter the  symbol in this manual, it means that you have to press and hold the key to activate the function.*



**New text message(s)**

- if on: you received new messages  
 - if flashing: the memory is full, you need to delete old messages before you can receive new ones

**Silent mode**

if on: phone will not ring or beep (except for the alarm clock)

**Network**

if on: your phone is registered to a network  
 if flashing: registration is in progress

**Battery level**

the bars indicate the battery level (4 bars is full, no bars means recharging is needed)

**New voicemail**

 
if on: there are new messages waiting in your voicemailbox (\*)

**Roaming**

your phone is registered to a foreign network

**Reception quality**

the more bars are shown the better the reception

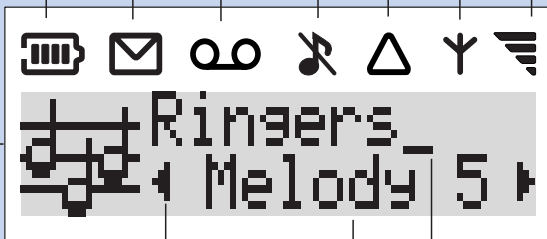






**Graphics area**

displays the clock and guides you through the menu

**Arrows**

indicate in which directions you can go using the Compass key

-   left/right and
-   back/forward or
-  end of menu

**Cursor**

indicates that you can enter numbers or text




**2 text lines**













to enter numbers and text or to read text messages

(\*) Depending on the network.



# ENTERING TEXT





Each key allows you to obtain several characters. You have to quickly press the same key several times to reach the desired character.

	TO OBTAIN	Space	D	ü
Example:	PRESS	 Once	 Once	 Five times quickly

Key	Characters
	space 1 @ # = <> ( ) & £ \$ ¥
	a b c 2 à ä å æ ç
	d e f 3 é è Δ Φ
	g h i 4 Γ ì
	j k l 5 Λ
	m n o 6 ñ ò ö ø
	p q r s 7 β Π Θ Σ
	t u v 8 ü ù
	w x y z 9 Ω Ξ Ψ
	. 0 " ' ? ! , ; i ÿ
	* + - / %
	upper-case lower-case mode

While you enter text your phone changes between upper-case and lower-case automatically.

If you wish to enter text in the upper-case mode press , to enter text in the lower-case mode press  again.

The   icons will show that you are in the upper-case mode. In the lower-case mode the   icons appear.



## Switch on/off...

### SWITCH ON



Press and hold.



Enter PIN:

—



Sometimes entering the PIN code is not necessary (depends on your subscription and on your PIN request settings - see page 24).



Enter your PIN code.

The digits entered are replaced by big dots.

 


If you enter a wrong code 3 times your card will be blocked. If this happens, contact your operator.



PIN correct

...



If this is the phone's initial use or if the battery has been removed since the last use, you will need to re-set the clock



Registering



Network

### SWITCH OFF



Press and hold.



Goodbye

## Voice dialling

You can also make a call by pronouncing the voice tag you have associated to a number (see p. 13).



Press and hold



Speak now

Pronounce the name you have associated to the number. The phone dials automatically the number.

## Make a call



Network



Enter phone number



01456\_



Call the number



Calling

0145678901



Black Jack

00:02

Display shows a call cost if sent by your network.



The name will be displayed only if the name is stored in your phone's Names list.

### END CALL



# BASIC FUNCTIONS

## Answer or reject a call



123456789

The caller number is displayed only if your subscription supports caller line identification.

If the number is in your Names list, the name will appear instead.



Accept the call  
or



Reject the call.

## Earpiece volume

While on a call you can adjust the earpiece volume.



Helen

17:24



Raise earpiece volume.

OR



Helen

17:24



Lower earpiece volume.



Helen

17:24

## Consult last calls

Your phone automatically stores a list of the last 10 calls you dialed and the last 10 callers who dialed you (including missed calls).



Network



Display the last call made, received or missed.



Calls

Florence ▶



To view other calls.



To call.



For information on viewing the last 20 calls you placed or received, see "Calls Section" p. 20.

## Adjust ringer volume and vibrator

You can select the vibrator options and adjust or turn off the ringer volume



Network



Display ringer volume selection.



Volume

◀ Medium ▶

■ Silent ♦ Vibrator ♦ Vibra+ring ♦  
Low ♦ Medium ♦ High ■



Select the volume.



Volume

◀ High ■

OR



Select vibrator mode



Volume

◀ Vibrator ▶



Validate vibrator or volume selection.

## Emergency call



Enter 112



Calling

112



Depending on your network operator, the emergency number 112 can be dialled without the micro-SIM card inserted.

## Change language

Normally your phone automatically selects the right language for your country, but in case you want to change it:



Press and hold.



Language

 
English



Select language.



## International call



To make an international call, you can use "+" as the international prefix.



Network



Press and hold.



+\_

Dial the number (international country code and local number).



Call the number.



Calling

+831234567

## Keypad lock/unlock

Avoid undesired keystrokes when the phone is in your pocket or purse.



Network



Press and hold to lock keypad.



Keypad is locked



Network



Press and hold to unlock keypad.



Keypad is unlocked



 
When the keypad is locked, it is possible to dial the emergency number and to receive calls.

# SPECIAL FUNCTIONS

## Answer a second call (Call Waiting)



This feature depends on the network. If a second person calls you, you will hear a beep. Check the display for a second call.




Reject second call

OR



Accept second call

 Call 1 is put on hold.




Switch between Call 1 and Call 2.




To end the call on display and return to other call.

 Return to single call state.




## Automatic redial

 When you dial a number and your correspondent is busy, your phone offers the function of automatically redialling.




Call failed or recipient is busy.

 


Confirm. OR

 Any other key cancels autoredial.



 A beep will sound for each redial attempt or vibrate 5 seconds in both vibrator modes




A beep informs you when the connection has been made. An incoming call or any use of the phone will end automatic redial.


## Scratchpad

 The scratchpad feature is useful if you want to store a telephone number during a call.


The number can be dialled or viewed later.




Enter the number you want to keep.

 

 The display automatically returns to your call.



End the call.

 


Call the number on the scratchpad.

OR



 For options.



## Touchtones (DTMF)

 
During a call or in direct dialling, the numeric keys always transmit DTMF tones (Dual Tone Multi Frequency) also known as "touchtones".

These tones are used to operate services that you can reach with your phone, like a pager or an answering machine.


Example, to consult your home answering machine:



Enter telephone number of your home answering machine.



 Enter a "wait" signal to give time for the phone to connect.




Enter the password of your home answering machine (e.g.: code: 9876).




## Hide your identity



 Enter "pause" character.



 
Enter code to listen to new message (e.g.: code 3).



Call.

## Hide your identity

 If you type #31# followed by the phone number you call, your phone number is hidden to the other person.



Availability of this feature depends on your network.

## Setting up Flash Dial

You can associate 8 names in the Names list or FDN list with keys 2-9 on the keypad. A long press on one of these keys will automatically dial the the associated number.



Names

◀ Vincent ▶

Choose the name you want to make Flash Dial.



Press and hold to link the name to key 4.

## CANCEL FLASH DIAL



Names

◀ Vincent ▶



Press and hold to cancel link.

## TO FLASH DIAL



Network



Press and hold to dial linked number.

## Discover the Compass Key

The Compass Key is your navigator while in the menus.

Press  to enter or exit the menus.

Move one menu-level back.

Switches to option on the left.



Switches to option on the right.

 
 
 
 
 
 
 
 
 
Move forward or validate the displayed option.

Here's an example:

*What you see on the display*

*Press this key*



*The Names list menu options*






## Add a name

  
With your phone, you can store the names and phone numbers of people you call frequently.



Switch to "Add".

 

Accept.

 

Enter name (max 11 characters).

For example: Jim



Once



Three times quickly



Once

...

 
 


Delete one character.


OR



Press and hold to delete all characters.




Enter number (20 digits max).

 

Accept number.

## Add Voice Dial

 
NO VOICE DIAL




Select "No"



 TO ADD VOICE DIAL



 Pronounce the voice tag you want to associate to the number



Repeat the voice tag you want to associate to the name




When Voice dial memory is full (10 names) the Voice dial menu disappears

# MENUS / NAMES...
 
## View names in the Names list

...

## Quick access to names..

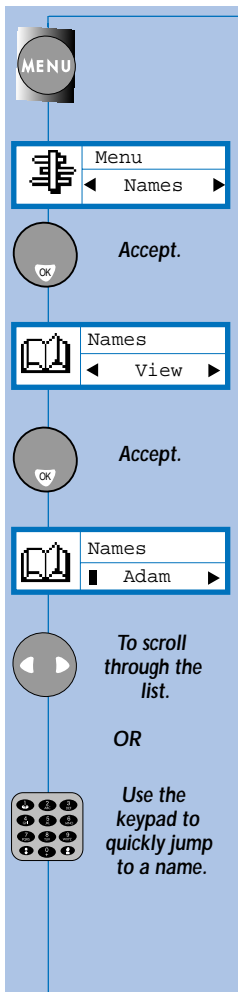

**MENU**

	Menu
◀	Names ▶

**OK** Accept.

	Names
◀	View ▶

**OK** Accept.

	Names
█	Adam ▶

**Left/Right** To scroll through the list.

**OR**

**Keypad** Use the keypad to quickly jump to a name.

**For example:**

Press to jump to names starting with "P", "Q", "R" or "S".

<b>7</b>	PORS
----------	------

	Names
◀	Philippe ▶

**Right** Press to jump to next name.

	Names
◀	Rozenn ▶

**Phone** Call the number.

**OR**

**OK** To view the number.

	0123456789
	▼

**OK** To view the available options.

	Zara
◀	Send msg ▶

Delete ◊ Send msg ◊ Usual msg ◊ Voice dial ◊ Change █

**Left/Right** Switch to the option you want.

**OK** Accept.

### Quick access to names

There is a quick way to access the names you stored:

	Network
--	---------

**OK**

 
	Names :
█	Anders ▶

**Left/Right** Switch to other names.

**Phone** Call.


## Search for a specific name

MENU



OK

 Accept.




Left arrow

Switch to "Search".

OK

Accept.

 Example:



Enter first few letters of name

U

R

8

 
TUV

7

PQRS

Twice quickly    Three times quickly

OK




Phone icon

Call name on display.

## Read your own phone number

 MENU




OK

OK

Switch to "Own number".

 
Right arrow



OK

Accept.

 OK



OK




Only available if present in the SIM card.

## Delete a name

 
OK

To access directly to phonebook




Right arrow

 Select name you want to delete



OK

 "Accept twice"




Left arrow

Go to delete

OK



 C



OK




## Messages

 
With your GSM phone you can receive text messages (SMS) and send messages to other GSM phones. To have the possibility of writing and sending messages, you need to enter a service center number first. If it is not present in the SIM card, ask your network operator for it.



Switch to "Messages".



Switch to "Centre no."

 

Enter number.



## New message(s)

Your phone allows you to send or receive short written messages.

### NEW MESSAGE INDICATORS



Lights up on the display when you receive a text message.



Flashes when the message memory is full. If this happens, you need to delete archived messages otherwise new ones will be rejected.

### READ NEW MESSAGE(S)



Network  
2 msg. ▾

 


Messages  
1 of 2 ▶



OR




...



Switch to "Messages".

  

Read the message.

 

Scroll through the message.



To switch to other messages.

## Read archived messages

## Send short messages (SMS)

...



At the end of a message.



Delete Reply Forward



Switch to the option you want.



Accept.

When you receive a text message that comprises a telephone number enclosed between double quotes (e.g.: "+33900112233"), then the number is automatically extracted and stored in your calls list so that you can call it back easily.



Messages you have read and messages you have saved can be found in the Archive.



 
Switch to "Messages".



Switch to "Archives".



Accept



Switch to the message you want to read.



Read the message.



To switch to other messages



Menu

Messages



Messages

Send



Accept



Enter phone number or select a name from the phonebook by pressing OK a second time.



To number :

0123\_



Text :

\_

Enter message (maximum 160 characters). See "Entering Text" section for instructions.



...

## Emotion Icons

...

Icons  
None ▶

Select the icon you want to send. (See "Emotion Icons" table at the end of this procedure). If you do not want to send an icon, choose "None".



Select icon



Validate.

Send  
Yes |

■ No ♦ Yes ■

Decide to send or not.



Requesting

Wait while message is being sent.

Confirmation will appear.

Sent

Save  
Yes |

■ No ♦ Yes ■

Decide to save or not. To see the icon the receiver needs a Philips Savvy™ phone, otherwise the equivalent code will be displayed at the end of the receiver's message.

 
 
## Emotion Icons

Icon	Code sent
	:-)
	;-)
	B-)
	:-P
	:-(
	:-/
	:<*
	:>#
	8<)



	Magic	=:I
	Love	(O)
	Broken	(X)
	Yo!	Yo!
	Well done	==b
	Party	o<l
	Hooray!	iii
	Flowers	@>-
	Drink	>-I
	Coffee	ID
	Cloudy	::;
	Sunny	>o<
	Holidays	-Y-
	Ball	(I)
	BOOM!	>*<
	Deadly	%-I

## Send SMS from phonebook

You can also send an SMS directly from your phonebook without having to enter the phone number.



Accept twice

  

Enter message (maximum 160 characters).  
See "Send short messages (SMS)" for more instructions.

 


...

OR



Accept twice




You have direct access to the phonebook



Select the name



 Accept twice.



Enter message (maximum 160 characters).  
See "Send short messages (SMS)" for more instructions.



## Usual Messages

Your phone contains a number of pre-defined text messages like:

 
"Please call me back"  
"I will be late"  
"I will call you back", etc.



From Messages switch to "Usual msg."




Accept



Switch to the desired message.



 
Accept



Enter number.



 Accept



Change text (if wished).



Accept.

# MENUS / CALLS...

## View calls...

You can consult the last 20 calls in the Calls list.

MENU

Switch to "Calls".

Menu

← Calls →

Accept

Calls

← View →

The Icon indicates the type of call.



Phone number you dialed.



Phone number of answered call.



Phone number of call you missed.



Phone number extracted from an SMS message.

...



Calls

Barbara ▶

To view other calls.

To call

OR

To view the number.

0123456789

To options.

Barbara

← Store no. →

Delete ♦ Store no ♦  
Send msg. ♦ Usual msg. ▽

Choose other option if you wish.

Confirm selection.

## Delete all calls

You can delete all the calls in the calls list.

MENU

Switch to "Calls".



Menu

← Calls →

Accept.

Calls

← View →

Switch to "Delete All".

Calls

Delete all ▶

Accept.



Press C  
to delete

You must confirm the deletion.



To delete.



 
Deleted




## Meters

Your phone has meters that allow you to see the total cost of your calls.

It also allows you to set limits on cost and check your consumption.





Switch to "Meters".

 

The cost counters and limits will only work if the network supports this feature.

## View Meters

  


Duration ◊ Remaining ◊ Cost




Switch to the meter you want.



 Accept.




## Reset Meters

 

Switch to "Reset".



 
Accept.



Select "Duration" or "Cost".



 To reset.



For some of these options you might need your PIN or PIN2 code (depending on your operator).

## Set-up meters

...

## Key tones ON/OFF



From Meters switch to "Setup".



Meters  
◀ Setup



Enter PIN:  
\_

Type your PIN code (or more often, your PIN2). Depending on the network.



Currency  
\_

Press and hold to clear your entry.



For example BEF (Belgian francs).



Currency  
BEF\_



Price/unit:  
\_

For example 2.50 francs per unit.



Price/unit:  
2\_

Press and hold for the decimal point.



Price/unit:  
2.5\_



Each time you press a key, a tone is emitted.

You can silence the key tones by turning them off.



Switch to "Settings".



From Settings switch to "Key tones".



Settings  
◀ Key tones ▶



Key tones  
◀ Set off ▶

Set off ♦ Set on



 
 
Accept.



Set

## Choose ringer


When your phone rings, it plays a melody. You can change this melody.



Current melody



 
For other melodies.



Phone plays the melody.



 Accept.




The «Key tones» and «Ringers» menu items are not visible when the volume is set to «Silent» or «Vibrator»

## Cell broadcast

 
The broadcast menu allows you to activate or deactivate the reception of SMS broadcast by the network.



From «Setting» switch to «Broadcast»



Accept.

 

Reception ♦ Topics ♦ District



The topics menu allows you to define the type of message you want to receive.

## VIEW TOPICS



Accept.



 
View ♦ Add




This fonction allows you to view which topics are registered in your phone (e.g: weather report). To delete or change a topic in the topics list use delete or change options.

...

## ADD A TOPIC



Accept.

 

Enter the name you want to associate with the topics.



Accept.



Enter the code given by your network operator for this topics.




Accept.

## RECEPTION

 The reception menu allows you to activate or deactivate the reception of registered topics.



From Broadcast switch to «Reception»





...

## Manual registration

## Voice Mailbox number

Accept.

 
 OK

 Reception  
◀ Set off |


◀ Set on | ▶ Set off |

Select the desired option.


Accept.

 OK


**DISTRICT**  
The district menu allows you to select a topic from the topics list, which you would like be permanently displayed. As a result, for this special handling of messages you must enter the topic in both the district menu and the topics menu.


 Broadcast  
◀ District |

 
Accept.


 OK


When travelling abroad, it may be useful to manually register with a network of your choice.


 From Settings switch to "Register".


 Settings  
| Register ▶

 OK


 Requesting

 Register  
| Net A ▶

 Switch to desired network.


 Accept.


Your phone will revert to automatic network selection next time you switch it on.

 



To be able to use Voicemail you need to set up your voice mailbox number.


Ask your network operator for this number.


 From Settings switch to "Box number".


 Settings  
◀ Box number ▶

 OK


 Box number :  
\_

 Enter number.

 To correct (if needed).

 OK

This menu may not appear. Depends on your subscription.




## Consult your voice messages




 
Lights up on the display if you have a new voice message.

Availability of this feature depends on your network.



Press and hold to call for your voicemail.

  OR



To call.

## Pin request



Switch to "Security"

 
 
 


You can (de)activate the request for the PIN code at power-on.




Set off ♦ Set on


Switch to desired option.




## Change PIN and PIN 2 codes

 

Accept.

 

Enter old PIN code.

 

Enter new PIN code.



 
Accept.



Enter new PIN code again.



Accept.





## Fixed names


Your network operator may have provided you with a SIM card which supports fixed names (FDN). You can restrict the use of your phone to the numbers stored in the fixed names list.

### VIEW FIXED NAMES

  From Security switch to "Fixed names".



Search ◊ View ◊ Add ◊ Restrictions

 

To view other names.



OR

To call.


## Add names



  
From "Fixed Names" switch to "Add".




Enter PIN2.

 

Enter name.

 


Enter number.

 

## Restrict to fixed names



 
From "Fixed Names" switch to Restriction.




Set off ◊ Set on



 Accept.



Enter PIN2:

 

If "Restriction" is activated, then only the numbers in the fixed names list can be called.

## Alarm

The phone offers you some fun and practical functions.

MENU

Switch to "Extra"

### ALARM

Your phone has a 24 hour alarm clock. The alarm will ring even if the phone is switched off. When the alarm rings press any key to silence it.

### SET ALARM OFF



Extra

◀ Alarm clock ▶

OK



Alarm clock

■ Set off ▶

■ Set off ♦ Set on ■

OK



Deactivated

## Set alarm on



Extra

◀ Alarm clock ▶



Alarm clock

◀ Set on ■

■ Set off ♦ Set on ■



Alarm Clock

◀ 18:44 ▶



> Minutes decrease

< Minutes increase

OR



Enter hour and minutes (eg: 07:45).



Set

## Set clock



From Extra switch to "Set clock".



Extra

◀ Set clock ▶



Set clock

◀ 11:37 ▶



< Minutes decrease

> Minutes increase

OR



Enter hour and minutes (eg: 19:42).



Set clock

◀ 19:42 ▶



Accept.



 
Set



You have to set the clock if you remove the battery.

## Calculator

Your phone has a calculator to add (+), subtract (-), multiply (\*), and divide (/).




Network

Press and hold to use calculator.


OR

 from Extra switch to "Calculator".



Extra

 ← Calculator →







To	+	-	*	/
PRESS				
	Once	Twice	Three times	Four times

For example  
 $3 \times 6 = 18$



    ...



To clear.

## Euro converter

This feature is only available for countries participating in the European Monetary Union. It allows you to easily convert Euros into your local currency and vice versa.



From Extra switch to "Converter".



Extra

← Converter →



 
Converter

█ Euro->FF █

█ Euro->FF ♦ FF->Euro █



Switch to desired type of conversion.



Euro:

\_



Enter amount  
(e.g.: 10.5 Euros).



Euro:

10.5



Press and hold zero to enter a decimal point.



## Biorythm calendar

	10.5 Euro
	66.75 FF

Your phone has a game which allows you to find your potential, or this of your friends, for a given day.



From Extra switch to "Bio calendar".

	Extra
◀ Bio calendar ▶	



	Birth date:
dd/mm/yyyy	



Type your birth date.

	Birth date:
04/06/1974	



	Date:
dd/mm/yyyy	

...



Enter the date for which you want to know the bio-rythm results.

	Date:
30/03/1999	



The results can be:

	Chance ▶
█ █ █ █ █ █	



	Love ▶
█ █ █ █ █ █	



	Energy ▶
█ █ █ █ █ █	



	Success ▶
█ █ █ █ █ █	

## Stopwatch

You can time a race or other event.



This stopwatch is not a professional measuring device. Its measurements cannot be applied in an official context.



From Extra switch to "Stopwatch".

	Extra
◀ Stopwatch ▶	



	Stopwatch:
00:00:00.00	



Start the stopwatch.



Stop the stopwatch.



Restart the stopwatch.



Reset the stopwatch to zero (when stopped).

## Call forwarding

Depending on your network operator your phone will allow you to divert all your calls to voicemail or to another number. You will have to select the type of forwarding you want .

MENU

Switch to  
"Forwarding"



Menu  
Forwarding ▶

OK



Forwarding  
◀ If no reply ▶

Always ◊ If no reply ◊ If busy ◊  
Unreachable ◊ Cancel all ◊

Select the option  
wanted by pressing  
the OK key

Example : Always  
FORWARD ALWAYS  
TO MAILBOX



Forwarding  
Always ▶

Status ◊ Cancel ◊ To mailbox ◊ To number ◊

Switch to  
mailbox



Number :

...



Requesting



Activated

Your phone will not ring  
as long as your calls are  
forwarded to your mail  
box.



To be able to forward  
calls to your voice mail  
check that your mail box  
number has been set  
correctly ( see "Settings"  
section page 23)

**FORWARD ALWAYS TO  
NUMBER**

From  
"Forwarding"  
switch to  
"Always"



Forwarding  
Always ▶

Status ◊ Cancel ◊ To mailbox ◊ To number ◊

OK

Select "To  
number"



OK



Number :

## Cancel all



Enter the  
number to which  
you want to  
divert your calls



Requesting



Activated



"Status" will show you  
if this specific call  
forwarding option is  
activated or not .  
You can cancel each  
individual forwarding  
option by using "Cancel  
" instead of "Cancel all"

**CANCEL ALL**

From "Forwarding"  
switch to  
"Cancel all"



Forwarding  
◀ Cancel all ▶



Deactivated

Your phone will now  
receive calls as normal ;

*"When Performance Counts... Philips Authentic Accessories are Designed to Maximize the Performance of Your Philips Phone".*

## **PLUS Battery**

### **Reference**

BHR 130/P	9911 240 32041
NIMH	1300 mAh



## **SLIM Battery**

### **Reference**

BHR 127/P	9911 240 32040
NIMH	700 mAh

## **Cigarette Lighter Adapter 12V - 24V**

### **Reference**

CKLR 12/P	9911 240 34118
-----------	----------------



## **Deskstand Charger**

### **Reference**

DTSC 12/P	9911 240 35143
-----------	----------------



## **Fast Travel Charger**

### **Reference**

Europe	ACSR 12/P	9911 240 30042
Taiwan/USA	ACTR 12/P	9911 240 30043
UK	ACUB 12/P	9911 240 30044
Australia	ACAR 12/P	9911 240 30045



## **Fast Battery Charger and Conditioner**

The cradle holds a single battery. Four versions of AC plugs available.

### **Reference**

Europe	DTER 12/P	9911 240 35137
Taiwan/USA	DTTC 12/P	9911 240 35139
UK	DTUC 12/P	9911 240 35140
Australia	DTAC 12/P	9911 240 35141



## **Basic Car Kit**

Keeps your phone secure and within easy reach while the battery is charging.

CKBR 12/P

**Reference**  
9911 240 34210



## **Car Kit with Headset**

Enjoy hands-free conversation while your phone is secure and within easy reach.

CKSR 12/P

**Reference**  
9911 240 34211



## **Easy Hands-Free Car Kit**

Complete hands-free solution with an advanced design speaker and microphone. Easy to install - simply plug into the vehicle power outlet. Your battery charges while secure in the cradle.

CKER 12/P

**Reference**  
9911 240 34420



## **Headset**

Use your phone under almost any situation with this convenient hands-free, very mobile solution.

HSSR 12/P

**Reference**  
9911 241 30017



## **Personal Accessories**

Keeps your phone within easy reach, safe and secure.

Carry Case with Belt Clip

**Reference**  
PBCR 12/P 9911 240 37023

Belt Clips (3 colors per package)

VBCR 12/P 9911 241 39203

Phone Necklace

VPNR 12/P 9911 241 39204



## **Easel-Style Phone Stand**


 
Keeps the display on your phone at an easy-to-read angle.

VPER 12/P

**Reference**  
9911 241 39205



Ask for Philips Authentic Accessories where you bought your Philips phone.

PROBLEM	SOLUTION
The phone does not switch on.	Check if the battery is correctly inserted (big arrow facing you and pointing to the top) and/or charge the phone until the battery icon has stopped flashing.
The display shows «BLOCKED» when you switch on.	Somebody tried to use your phone but did not know the PIN code or Unblocking code. Contact your service provider.
The  and  symbols are not displayed.	The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside of the network coverage area. Try from another place.
The display doesn't respond (or responds slowly) to key pushes.	The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again.
Your phone shows "insert SIM" on the display.	Remove your battery. Check that the micro SIM card is correctly inserted (clipped corner at the top left - see page 3).
When charging the battery, the battery icon shows no bars and the outline is flashing.	Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

# SAFETY PRECAUTIONS

## RADIO WAVES

 
- Your phone transmits/receives radio waves in the GSM frequency (900/1800 Hhz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

## SAFETY PRECAUTIONS

- Careless use can cause harm to you and others.
- Please inquire and respect local laws and regulations.
- Use your phone in the normal operating position (to ear).
- Avoid touching the antenna while a call is in progress.
- Do not use your phone if the antenna is damaged (risk of minor skin burn).
- Keep your phone in a safe place, out of reach of small children.
- Check with other manufacturers that consumer electronics will not be affected by radio energy.
- Avoid use of phone while driving. It affects your concentration.
- Switch phone off in an aircraft. It is illegal to use cellular phones when airborne.
- Switch phone off near hospitals or medical equipment.
- Ask manufacturer about radio wave shielding of electronic medical devices you may use (pacemaker, hearing aid).
- Switch phone off where blasting is in progress (for example in quarries).
- Switch phone off in potentially flammable atmosphere (petrol stations, fuel depot, chemical plants).

## ENVIRONMENTAL CARE

- Please remember to observe the local regulation regarding the disposal of your packaging material, exhausted batteries and old phone and where possible promote their recycling.



- *The phone must ALWAYS be switched OFF by pressing the Red ON/OFF key and never by removing the battery while the phone is ON. Otherwise, the stability of the settings, alarm clock and ring cannot be guaranteed.*
- *The phone is equipped with an alarm clock that, if set, will ring. If the phone is off and the alarm rings, no radio waves are transmitted. Press any key to turn off the alarm.*

- Accessories - 31
- Alarm - 27
- Battery - 2, 31
- Biorhythm calendar - 29
- Calculator - 28
- Calls - 20
  - Answer a call - 8
  - Answer a second call - 10
  - Call forwarding - 30
  - Emergency call - 9
  - End a call - 7
  - International call - 9
  - Last calls - 8
  - Make a call - 7
  - Menu - 19
  - Reject a call - 8
- Capital letters - 6
- Cell Broadcast - 23
- Clear display - 8
- Clock - 26
- Compass key - 4, 12
- Consult last calls - 8
- Display - 5
- DTMF tones - 11
- Earpiece volume - 8
- Emergency - 9
- Emotion Icons - 18
- Entering Text - 6
- Euro Converter - 28
- Extra - 27
  - Alarm - 27
  - Biorhythm calendar - 28
  - Calculator - 28
  - Clock - 26
  - Euro Converter - 28
- Stopwatch - 28
- Fixed names - 26
- Flash Dial - 11
- Forward calls - 30
- Hide identity - 11
- Keypad - 4
  - Lock - 9
  - Unlock - 9
- Languages - 9
- Last calls - 8
- Mailbox number - 24
- Manual registration - 24
- Menus
  - Calls - 20
  - Extra - 27
  - Messages - 16
  - Names - 13
  - Security - 25
  - Settings - 22
  - Voicemail - 24
- Messages - 16
  - Cell Broadcast - 22
  - Menu - 16
- Meters - 21
- Micro-SIM card - 2
- Names - 13
  - Add a name - 13
  - Menu - 13
  - Fixed names - 26
  - Search a name - 15
  - View list - 14
- Phone - 4
  - Own number - 15
- PIN - 25
- Ringer volume - 8
- Restrict to FDN - 26
- Scratchpad - 10
- Safety Precautions - 34
- Security - 25
- Settings - 22
- Set
  - Alarm On/Off - 27
  - Clock - 27
- Set-Up - 22
- Switch On/Off - 7
- Stopwatch - 28
- Touchtones (DTMF) - 11
- Troubleshooting - 33
- Voice dialling - 7
- Voicemail - 24
- Volume
  - Earpiece - 8
  - Ringer - 8
  - Vibrator - 8

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>