 
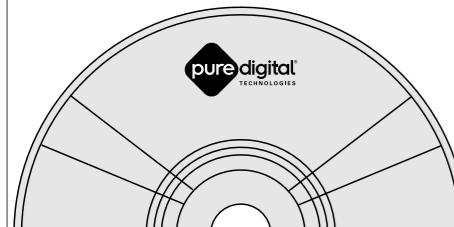 


GET DVDS MADE!

Tocom 5637 692B

Take your camcorder to an authorized Pure Digital retailer to get your videos on DVD (sold separately).

- Keep your videos archived forever
- Watch your videos on any DVD player
- Easily email personalized video greeting cards
- Get extra DVDs for family and friends

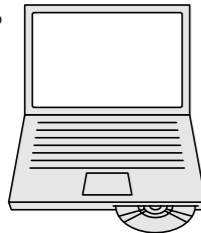

COMPUTER REQUIREMENTS

Windows Computers

- Intel Pentium III 800 MHz computer with at least 128 MB of RAM
- Microsoft Windows 2000 or XP
- SVGA display monitor
- Sound Card
- Video Card, with display set to screen resolution of 800 by 600 pixels or higher, and color quality/depth set to 24-bit or higher
- Windows Media Player 9 or later
- Microsoft DirectX 8.1 or later
- **Note:** Installation of the video compatibility software (Automatically installed by the RCA Small Wonder Video program)

Macintosh Computers

- 400 MHz PowerPC-based G3 or faster Macintosh computer with at least 128 MB of RAM
- Mac OS X v10.2 or later
- SVGA display monitor
- Sound Card
- Video Card, with display set to resolution of 800 x 600 or higher, and color set to Millions or higher
- QuickTime 6 or later
- **Note:** Installation of video compatibility software included on the camcorder (Double-click the ReadMe icon and follow the instructions)

VIEWING, SAVING, AND EMAILING VIDEOS ON YOUR COMPUTER

1. Slide latch down to release the USB connector arm on the camcorder.
2. Insert the camcorder USB arm into the USB port on the computer.

Note: Use USB extension cable (optional accessory) if USB arm is obstructed or space does not permit connection.

3. On Windows Computers

The RCA SMALL WONDER Video program should start automatically.

 
- If program does not start automatically, open My Computer and double-click "RCA SMALL WONDER Video Camcorder".
- Double-click "View Your Videos" to start the program.
- Use the RCA SMALL WONDER Video program to playback, save, email, and delete videos.

4. On Macintosh Computers

- Double-click the "RCA SMALL WONDER" icon on your desktop.
- Double-click the ReadMe icon and follow the instructions.

Save

1. In the video program, click "Save Videos" in the feature menu.
2. Click on the videos you want to save.
3. Click "Save" to save the videos you have selected to your computer.

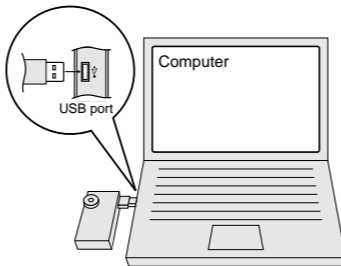

Note: Camcorder will not record when connected to computer.

Playback

1. In the video program, click "Make Movie" in the feature menu.
2. Click on the videos you want to watch.
3. Click "Begin" to play the selected videos as one continuous movie.

Email

1. In the video program, click "Email Videos" in the feature menu.
2. Click on the videos you want to email.
3. Select your email preferences: either a) to create video email message by creating smaller video files and attaching them to a new message in your default email program, or b) to save smaller video files on your desktop for sending with any email program.

Delete

1. In the video program, click "Delete Videos" in the feature menu.
2. Click on the videos you want to delete.
3. Click "Delete" to delete the video you have selected from your camcorder.

 
VIEWING VIDEOS ON YOUR TV

1. Plug in TV connection cable: Insert single-connector end to camcorder. Connect triple-connector end to corresponding video (yellow) and audio (white and red) color input jacks on TV.
2. Turn on TV and camcorder.
3. Switch TV to selected video input (see your TV manual for instructions).

Note: Camcorder display screen will turn off when TV connection is activated.

4. Playback and delete videos on TV using the camcorder buttons.

Note: Camcorder will not record when TV connection is activated.

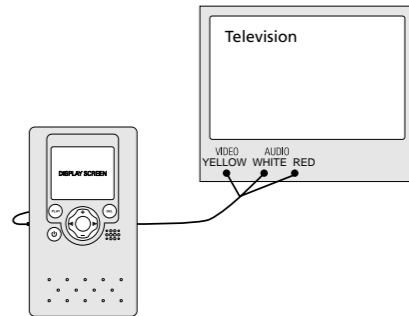

Important Battery Information

- The batteries used in this device may present a risk of fire, explosion, or chemical burn if mistreated. Do not separately recharge, disassemble, incinerate, or expose to high temperatures. Examples of high temperatures that may damage your product include leaving it in a locked car in summer, or putting it on top of heat generating electronic devices (such as power amplifiers and computer monitors).
- Dispose of used batteries promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

For Customer Service and Technical Support

Web: www.mysmallwonder.com

TEL: 1-877-9322269

Quick Start Guide

RCA

Small Wonder

www.mysmallwonder.com

RCA EZ105

The Everyday Video Camcorder

USING YOUR CAMCORDER

Turn On/Off

1. Press **POWER** to turn the camcorder on.
2. Press **POWER** again to turn the camcorder off.

Note: Camcorder will shut off after 2 minutes if not in use.

Record

1. Wait for "Ready" to appear in the top left corner of the display screen before recording.
2. Press and release red record button to begin recording

While recording:

 
- "•" will appear and flash in the top left corner of the display screen.
 - Red recording indicator on the front of the camcorder will turn on.
3. Press red record button again to stop recording.

Zoom

Before or during recording:

1. Press "+" to zoom in.
2. Press "-" to zoom out.

Note: Zoom control is cushioned for noise-free recording. Recommend to press firmly and hold to avoid clicking sound while recording.

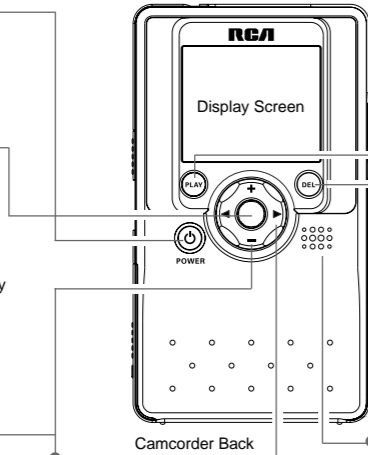

Volume

During playback:

1. Press "+" to increase volume.
2. Press "-" to decrease volume.

Play

1. Press **PLAY** to start playback of the last video recorded or selected video.
2. Press **PLAY** again to stop playback.
3. To select another video to playback - see Skip Forward/Backward.
4. To play all videos, press and hold down **PLAY** for 3 seconds.

Note: "▶" will appear in the top left corner of the display screen.

Delete

1. Press **DEL** and last video recorded or played will appear on the display screen.
2. "Delete video?" will appear on the display screen.
3. Press **DEL** again to confirm.
4. To select another video to delete, - see Skip Forward/Backward.
5. To delete all videos, press and hold down **DEL** for 3 seconds.

Skip Forward/Backward

Press ◀ and ▶ to skip backward and forward through the videos.

Recording Indicator

 
(Camcorder Top) - slot for connection with DVD processing labs at Authorized Pure Digital Retailer. (Note: This is NOT a memory card slot)

Lens

Microphone


TV Output

Note: read backside of this guide for details.

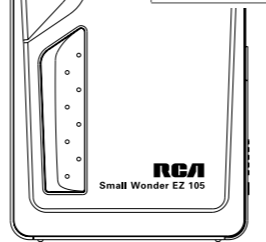

Camcorder Strap Connection Hook

 Tripod Screw Mount

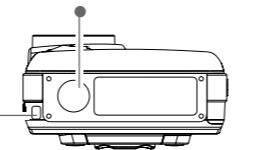

Video Quality Selector

HQ - High quality mode

LP - Long play mode

Note: Selected setting (HQ or LP) will appear on the display screen during recording.


Setting	Quality	Approx. recording duration
HQ	Best	30 minutes
LP	Good	60 minutes

Important note about maximum recording time of 20 minutes for a single video clip:

In order to allow convenient processing onto DVD and to give you easily manageable file sizes, the maximum recording time for a single video clip is 20 minutes (40 minutes in LP). Longer continuous recordings will be saved as separate files.

USB Connector Arm

 Note: Use USB extension cable (optional accessory) if USB arm is obstructed or space does not permit connection.

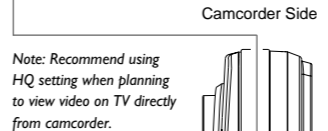

Battery Door

Note: in case of low battery power, an empty battery icon will flash on the display screen.

To change batteries:

1. Slide battery door down to open.
2. Remove used batteries.
3. Replace with two AA batteries.
4. Align "+" and "-" ends as indicated on door.
5. Close battery door and slide up to lock.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies. This product complies with DHH Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Records
In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase.

Date of Purchase:
Place of Purchase:

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Technical Specification

Product: Digital Camera Recorder
Brand: RCA
Model: EZ105

Electrical Consumption

2x AA Battery



Equipment tested for compliance as a complete unit

IMPORTER

Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151, Piso 13.
Col. Roma. Delegación Cuauhtémoc
C.P. 06700. México, D.F.
Telefono: 52-55-11-020360
RFC: CTM-980723-KS



SEE MARKING ON BOTTOM/BACK OF PRODUCT
WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

WARRANTY

U.S. Limited Warranty

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- 90 days from date of purchase - unit exchange, which includes parts and labor. 91 days to 1 year from date of purchase - unit exchange, which includes parts only; you pay for the labor.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.,
Product Exchange Center,
11721 B Alameda Avenue,
Socorro, Texas 79927**

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.

A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or

incorporated into other products.

- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>