


# Avanti<sup>®</sup>

## WASHING MACHINE INSTRUCTION MANUAL

Model Numbers: W751SC / W752PC

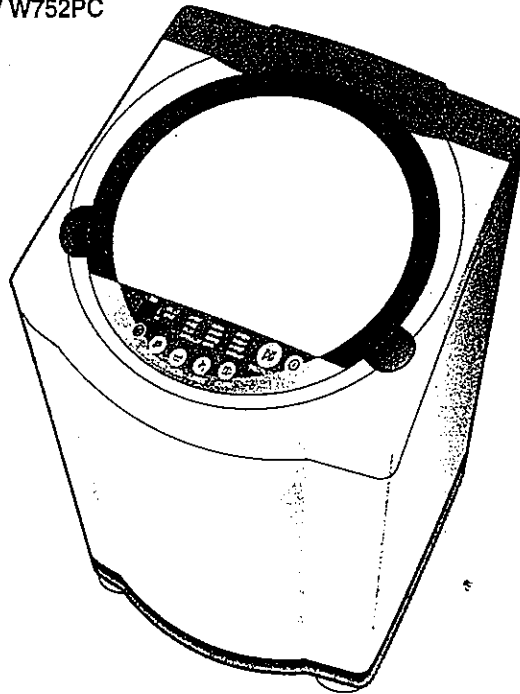

### CAUTION:

**BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS. SAVE THESE INSTRUCTIONS.**

Avanti has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

Avanti Products  
P.O. Box 520604 - Miami, Florida 33152  
[www.avantiproductions.com](http://www.avantiproductions.com)

## Warranty Information

Thank you for purchasing this fine Avanti product. Please fill out this card and return it within 100 days of purchase and receive these important benefits:

- **Confirm your warranty:**  
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Avanti warranty.
  
- **Protect your product:**  
We will keep the model number and date of purchase of your new Avanti product on file to help you refer to this information in the event of an insurance claim such as fire or theft.
  
- **Promote better products:**  
We value your input. Your responses will help us develop products designed to best meet your future needs.

----- (detach here) -----

### Avanti Registration Card

Name	Model #	Serial #
Address	Date Purchased	Store/Dealer Name
City	State	Zip
Occupation		
Area Code	Phone Number	<b>As Your Primary Residence, Do You:</b> <input type="checkbox"/> Own <input type="checkbox"/> Rent

**Did You Purchase An Additional Warranty:**

Extended       None

**Reason For Choosing This Avanti Product:**

Please indicate the most important factors that influenced your decision to purchase this product.

- Price
- Product Features
- Avanti Reputation
- Product Quality
- Salesperson Recommendation
- Friend/Relative Recommendation
- Warranty
- Other \_\_\_\_\_

**Your Age:**

under 18     18-25     26-30  
 31-35     36-50     over 50

**Marital Status:**

Married       Single

**Is This Product Used In The:**

Home       Business

**How Did You Learn About This Product:**

Advertising       Product Features  
 In Store Demo     Personal Demo  
 Other \_\_\_\_\_

Comments \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

---

## HELP US HELP YOU...

### Read this guide carefully.

It is intended to help you operate and maintain your new appliance properly.

Keep it handy to answer your questions.  
If you don't understand something or you need more help, please call:

**Avanti Customer Service**  
**800-220-5570**

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

### Write down the model and serial numbers.

You'll find them on a plate located on the back wall of the appliance.

Please write these numbers here:

\_\_\_\_\_

Date of Purchase

\_\_\_\_\_

Model Number

\_\_\_\_\_

Serial Number

Use these numbers in any correspondence or service calls concerning your appliance.

If you received a damaged appliance, immediately contact the dealer (or builder) that sold you the appliance.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct yourself.

---

## IF YOU NEED SERVICE


We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details, including your telephone number, and send to:

**Customer Service**  
**Avanti Products**  
**10880 NW 30 Street**  
**Miami, FL 33172**

## PARTS AND FEATURES

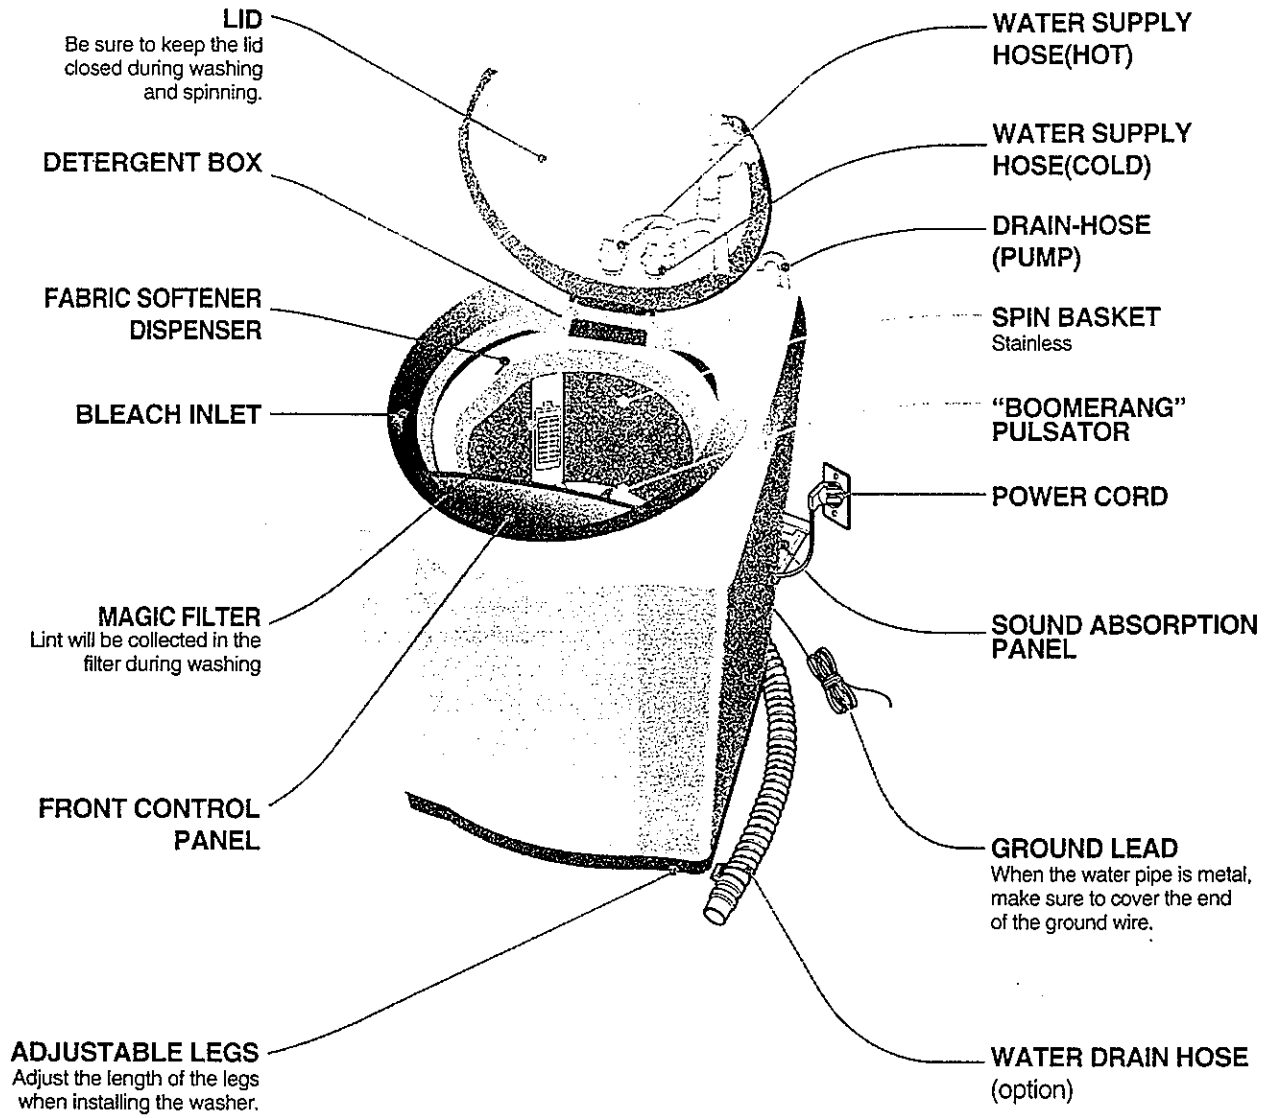

## TABLE OF CONTENTS

Warranty Information and Registration Card .....	2
Help Us Help You .....	3
Parts and Features .....	4
Important Safety Instructions .....	6-7
Installation Instructions .....	8
Before Using Your Appliance .....	8
Installation of Your Appliance .....	9
Water Connections .....	10
Electrical Connection .....	11
Care and Maintenance .....	11
Control Panel .....	12
Washing Procedure .....	13-15
Troubleshooting Guide .....	16
Service For Your Appliance .....	16
Your Avanti Products Warranty .....	17
Parts Breakdown and Parts List .....	18
Wiring Diagram .....	22
Spanish Section .....	23 - 31

## Important Safety Instructions



To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable, or explosive substances as they give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using a washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Before the appliance is removed from service or discarded, remove the door.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instruction.
- **DANGER or WARNING : Risk of child entrapment.**  
Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous. . . even if they will "just sit in the garage a few days."
- **Before you throw away your old appliance:** Take off the door so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
- During spinning, don't put your hand in the spin basket: Because the spin basket is rotating at high speed, rotating parts may injure your hand.



## Important Safety Instructions

- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Turn off water taps when the washer is not in use to avoid water pressure damage to the pump.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- The appliance is not intended for use by young children or infirm persons without supervision.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Place clothes evenly into the washer as unevenly distributed laundry may cause excessive out of balance noise and vibration.
- Do not operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

-Save these instructions-

 **WARNING** 

## INSTALLATION INSTRUCTIONS

### Before Using Your Appliance


- Remove the exterior and interior packing.
- Check to be sure you have all of the following parts:
  - Hot Water Supply Hose
  - Cold Water Supply Hose
  - Drain Hose (Pump)
  - Instruction Manual
  - Absorbing Panel & Screw
  - Male and Female Hose Thread Adapters
  - Support Legs
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your washer on a floor that is strong enough to support the appliance when it is fully loaded.
- To level your washer, adjust the legs at the front of the appliance.
- Allow 5 inches of space between the back and sides of the appliance.
- Carpeting must not obstruct ventilation openings when the washing machine is installed on a carpeted floor.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating, plastic and electrical components.
- Put your laundry into the washer evenly. Uneven laundry may cause noise or vibration.
- Don't use excessively hot water (60°C or more). Plastic parts may be deformed or damaged. Also, clothing may be deformed or bleached.
- Before washing, check all pockets. If nails or pins remain in pockets, they may damage the washer or clothes.
- Never splash water on the control panel.
- Plug the washer into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.



## INSTALLATION INSTRUCTIONS

### > Assembling The Sound Absorbing Panel


Lay down the washer with the rear side facing up and insert the panel until it clicks into the five slots provided (as shown in the figure). Use the screw in the hole provided to tighten the absorbing panel to the bottom of the washer.

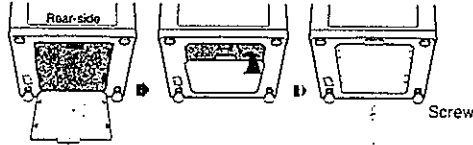

### > Leveling


SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.

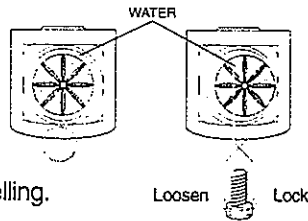

- Adjust the front legs on feet for levelling.

 **Note :** The protective rubber support inserts may leave marks on certain floor types. To prevent possible markings place a small piece of cloth, or similar item, under the rear legs when the machine is in use.




### > Connecting The Drain Hose

- After pressing the joint ring (a), insert the drain hose (b) to drain direction.



### > In Case of Pump-Drained Washer

 
- Take out the cap-hose and connect the outlet hose.



- Be sure to join tightly the drain hose outlet on the back of the machine.






 
- Install the drain hose 28-32 inches above the ground.



**CAUTION :** Drain hose may pop up during draining due to heavy water pressure. This is normal. We suggest to hold it down with a heavy water proof object, to keep hose in place.

### > Cleaning the Magic Filter

1. Push the upper part of the filter and pull in.
2. Open the cover as shown in the figure.
3. Clean the filter.
4. Close the cover and insert the lower part of the filter in the basket first and then push the filter until you hear a "click" sound.

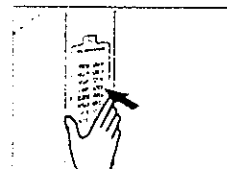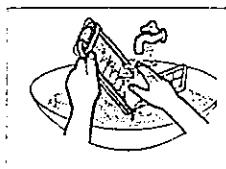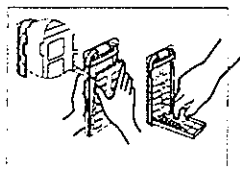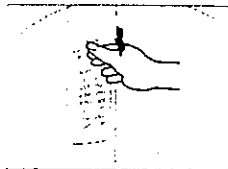


### > Water Connection

For normal kitchen-sink tap only use the inlet hose with cold water inlet.


Connect the inlet hose to the male hose thread adapter by turning it clockwise to be fixed tightly. Make sure to insert the rubber ring enclosed. Then connect tightly to your sink.

**Note :** Some faucets may require you to also use the female hose thread adapter between the male adapter and your sink as shown below. Make sure the rubber ring is inserted and connect to your sink.

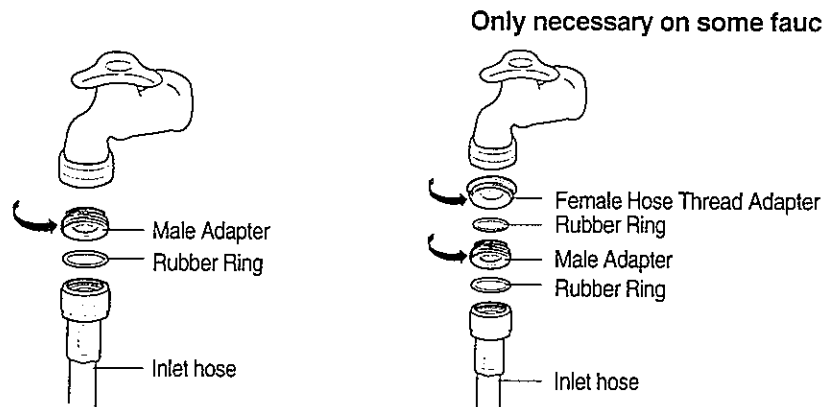

### > Connecting The Water Supply Hoses

1. Your washer is provided with dual water inlets (hot & cold) Connect the water supply hose to the water tap. Fasten it tightly.
2. Next, connect the other end of the water supply hose to the inlet valve at the back of the washer. Screw the hose clockwise all the way in.
3. When using as a portable washer connect hose to the cold(blue) side of the water valve.

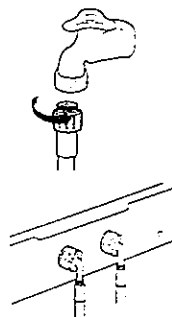

### > Note:

Be sure to connect the hot inlet hose to hot water tap and hot water valve. For best operating conditions your hot water should be approximately 60°C (140°F) otherwise water above this temperature will cause damage to the machine.

Turn on the water completely to check for any leakage.

If any, turn off the water and try again above procedures.

For special tap, use connectors provided or call a qualified plumber for the installation.

## ➤ **Electrical Connection**

### **⚡ Warning ⚡**

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized Avanti Products service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third ground prong from the power cord supplied.

Use of extension cords is not recommended.

This appliance requires a standard 115/120-volt, 60Hz electrical outlet with three-prong ground. The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

## **CARE AND MAINTENANCE**

### ➤ **Cleaning Your Washer**

- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- The outside of the washer should be cleaned with mild detergent and warm water.

## **FEATURES**

### ➤ **Fuzzy Control**

Fuzzy control operates with best washing course by sensing the washload like artificial intelligence.

### ➤ **Clear window**

This see-thru Window is a new concept to solve the curiosity of users to see inside the washing machine while in operation. The laundry progress can be checked by looking through the clear window.


### ➤ **Clean Wash By The Water Fall**

Water Fall, falling down from top of the tub, cleans heavy dirt and dissolves detergent thoroughly with impact power.

### ➤ **Boomerang pulsator**

The Boomerang Pulsator helps water and detergent go through fabrics efficiently while providing both the powerful water action to clean larger and heavier clothes, and the gentle water action to clean all delicates with less wear and tear on clothes.

## CONTROL PANEL

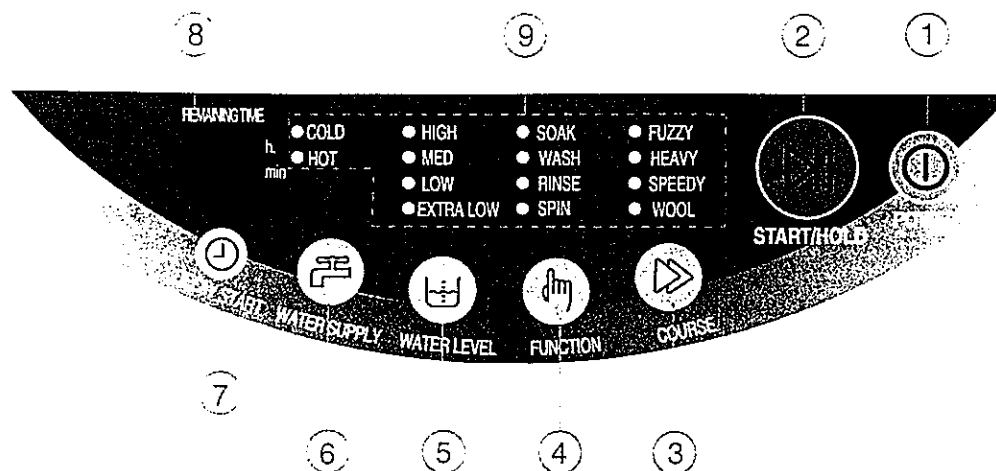

- 1) **Power Button**  
Press this button once to operate. Press once again to turn the washer off.
- 2) **Start/Hold Button**  
Use to pause and restart the operation. To change the washing procedure during operation, press this button to stop, and once again to restart after changing the procedure.
- 3) **Course Select Button**  
With every press of this button, the washing course changes;  
Fuzzy → Heavy → Speedy → Wool → Fuzzy
- 4) **Function Select Button**  
With every press of this button, the washing course changes;  
Wash+Rinse+Spin → Soak+Wash+Rinse+Spin → Wash → Rinse → Spin → Wash+Rinse → Rinse+Spin → Wash+Rinse+Spin
- 5) **Water Level Select Button**  
According to the washload, select the water level:  
Medium → High → Extra Low → Low
- 6) **Water Supply Select Button**  
As you press this button, the type of water is selected as follows.  
Cold → Cold+Hot → Hot → Cold
- 7) **Delay Start Button**  
Press this button when delay start washing is needed.
- 8) **Remaining Time Indicator Light**  
The indicator light shows the remaining time (in Minutes) of each wash cycle.  
At the end of the cycle, the power automatically switches off.
- 9) **Function Indicator Light**  
The function in use indicator shows the current function as a flashing symbol.  
The light goes out at the end of the function.

## WASHING PROCEDURE

### FUZZY COURSE

*Selects the best washing course automatically.*

- 1) **Before starting washing, check the following;**  
Connect the water supply hose to the water tap. Leave the tap open. Plug the power cord in.
- 2) **Put the laundry into the washer and add detergent, too.**  
Be careful not to overload. Use right detergent for the fabrics you are washing.
- 3) **Press the POWER Button to "ON".**  
The remaining time indicator should show "--"



- 4) **Press the START/HOLD Button.**  
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again.  
You can change the course when in pause mode.



- 5) **Close the Lid.**

### HEAVY COURSE

*For the heavy laundry, it gives powerful washing.*

- 1) **Press the power button to "ON".**



- 2) **Press the course select button once.**



- 3) **Press the START/HOLD button.**  
Water level is selected automatically. Washing, rinsing, and spinning follow.  
If you want to pause, press the START/HOLD button again.  
You can change the course when in pause mode.



- 4) **Close the Lid.**

## WOOL COURSE

Only high or medium water level is available. Cold water is selected.

- 1) Press the power button to "ON".



- 2) Press the course select button twice.



- 3) Press the START/HOLD button.  
Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again.  
You can change the course when in pause mode.



- 4) Close the Lid.

### CAUTION:

- Do not use water above 30°C for WOOL washing.
- Refer to the tag attached on the clothes for washing information.
- Fasten buttons and turn inside out before washing.
- Use the detergent indicated in the laundry.
- When the degree of dirt is extreme, soak the laundry in warm water for about 10 minutes before pressing the WOOL course button in order to enhance washing efficiency.

## SPEEDY COURSE

Because washing is speedy, it is good for light or less stained laundry.

- 1) Press the power button to "ON"



- 2) Press the course select button three times.



- 3) Press the START/HOLD button  
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the START/HOLD button again.  
You can change the course when in pause mode.



- 4) Close the Lid.

## DELAY START COURSE

Select this course when you have to go out or do something else.

1. Press the Power button to "ON".



2. Press the DELAY START button once.  
You may change the delay start time with use of the DELAY START button. (From 3 hours to 18hours)



3. Press the START/HOLD button and put the proper amount of detergent into the detergent box.



4. Close the lid.  
The washing starts at the time you selected.


## MANUAL FUNCTIONS

### SOAK AND WASH AND RINSE AND SPIN

Press the POWER button. Press the FUNCTION SELECT button once. Press the START/HOLD button once. Washing goes on for 71 minutes.

The laundry is soaked in water so that the dirt can be eliminated completely.


When the FUNCTION button is pressed during operation the rinse times can be changed to between 1 and 5 times in duration.

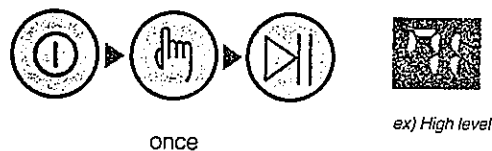

### WASH ONLY

Press the POWER button. Press the FUNCTION SELECT button twice. Press the START/HOLD button once. Washing goes on for 18 minutes.


When the FUNCTION button is pressed during washing, the wash time can be changed to between 3 and 25 minutes in duration.

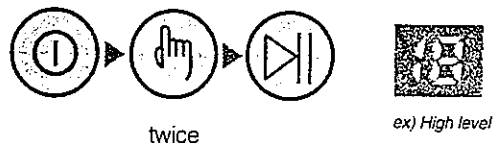

### RINSE ONLY


Press the FUNCTION button three times. Press the START/HOLD button once. Rinsing goes on for 5 minutes.

When the FUNCTION button is pressed during rinsing, the rinse times can be changed to between 1 and 5 times in duration.

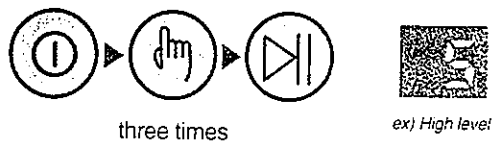


### SPIN ONLY

Press the FUNCTION button four times. Press the START/HOLD button once. Spin-drying goes on for 9 minutes. When the FUNCTION button is pressed during spinning, the spin time can be changed to from 5 to 11 minutes.

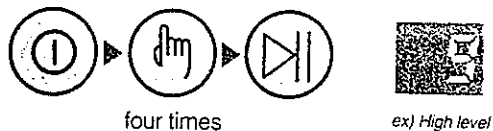


### WASH AND RINSE

Press the FUNCTION button five times. Press the START/HOLD button once. Washing and rinsing go on for 32 minutes. When the FUNCTION button is pressed during operation the rinse times can be changed to between 1 and 5 times in duration.

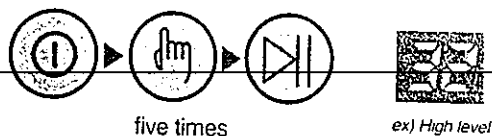

### RINSE AND SPIN

 Press the FUNCTION button six times. Press the START/HOLD button once. Washing, rinsing and spinning follows. *When the FUNCTION button is pressed during operation, the rinse times can be changed to between 1 and 5 times in duration.*



six times



ex) High level

### WASH AND RINSE AND SPIN

Press the FUNCTION button seven times. Press the START/HOLD button once. Washing, rinsing and spinning follow. *When the Function button is pressed during operation the rinse times can be changed to between 1 and 5 times in duration.*



seven times



ex) High level

## PROBLEMS WITH YOUR WASHER?


You can solve many common appliance problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

### TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Washer does not operate.	Not plugged in. The circuit breaker tripped or blown fuse.
Vibrations.	Check to assure that the washer is level.

#### Washing machine won't work

- Is the water tap opened?
- Is the washer plugged in?
- Is the power cut off?
- Is there enough water?


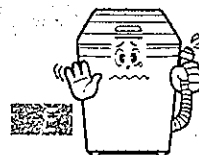


#### Water does not drain

- Is the drain hose down?(No pump)
- Is the drain hose frozen?
- Is the drain hose clogged?
- If the water does not drain in 6 minutes, a buzzer will sound, and the remaining time indicator will show "E".*

#### Water is not supplied

- Is the water tap opened?
- Is the water cut off?
- Is the water supply hose or hose connection clogged?
- Is the water tap frozen?
- If water is not supplied in 1 hour, a buzzer will sound, and the remaining time indicator will show "7E".*

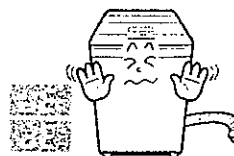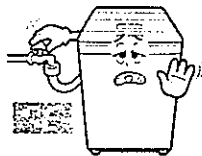


#### Spinning does not work

- Is the laundry spread out evenly in the washer?
- Is the washer set on a sturdy flat surface?

#### Power won't cut off

 - This sign means power is not cut off automatically.
- Make sure lamp is lit when the power button is on.



#### Water is overflowed

- Restart after spinning.
- If the error sign still indicates, call Avanti products for service.



**YOUR Avanti Products WARRANTY**

Staple your sales receipt here. Proof of original purchase date is needed to obtain service under warranty.

**WHAT IS COVERED**

**LIMITED ONE-YEAR WARRANTY**

For one year from the date of purchase by the original owner, Avanti Products will, at its option, repair or replace any part of the appliance that proves to be defective in material or workmanship under normal use. During this period Avanti Products will provide all parts and labor necessary to correct such defects free of charge, so long as the appliance has been installed and operated in accordance with the written instructions in this manual. In rental or commercial use, the warranty period is 90 days.

**LIMITED 5 YEAR WARRANTY ON PLASTIC TUB**

After one year and until five years from date of purchase, Avanti will furnish a replacement plastic tub, which is defective in material or workmanship. You will be charged for labor.

**LIMITED 7 YEAR WARRANTY ON STAINLESS STEEL TUB**

After one year and until seven years from date of purchase, Avanti will furnish a replacement stainless steel tub, which is defective in material or workmanship. You will be charged for labor.

---

**WHAT IS NOT COVERED**

- Incidental or consequential damages.
- Parts and labor costs for the following will not be considered as warranty:
  - Plastic cabinet liners.
  - Repairs performed by unauthorized servicers.
  - Service calls that do not involve defects in material or workmanship such as customer education, or improper installation.
- Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or acts of God.
- Replacement of house fuses or resetting circuit breakers.
- Failure of the product if it is used for other than its intended purpose.
- This warranty does not apply outside the Continental U.S.A.


**SERVICE FOR YOUR WASHER**

We are proud of our customer service organization and the network of professional service technicians that provide service on your Avanti appliances. With the purchase of your Avanti washer, you can have the confidence that if you ever need additional information or assistance, the Avanti Products Customer Service team will be here for you. Just call us toll-free.

**AVANTI PRODUCTS CUSTOMER SERVICES**

Product Information 800-323-5029	Whatever your questions are about our products, help is available.
Part Orders 800-220-5570	You may order parts and accessories that will be delivered directly to your home. You may order these items by personal check, money order, Master Card, or Visa.
In-Home Repair Service 800-220-5570	An Avanti Products authorized service center will provide expert repair service, scheduled at a time that is convenient for you. Our trained servicers know your washer inside and out.


## Parts Breakdown

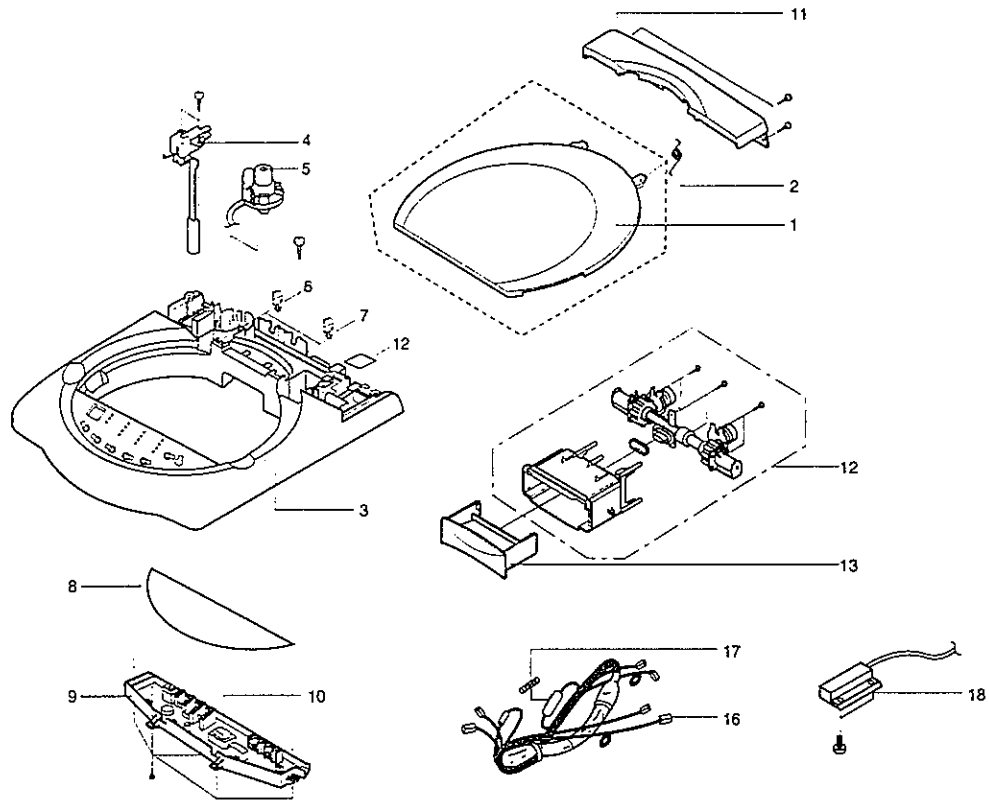

## Parts List

Location No.	Code No.	Description	Specification	Qty	Remarks
1	DC97-00161M	ASSY-LID T.C	PP	1	
2	DC61-00062A	SPRING-Q(R)	STS 304	1	
3	DC61-10728H	COVER TOP	PP	1	WHITE
4	DC90-11054S	ASSY CHECKER SW	DC15V/50mA	1	
5	DC32-30006M	SENSOR PRESSURE	DN-S12	1	
6	DC61-20226S	HINGE DOOR (L)		1	
7	DC61-20226T	HINGE DOOR (R)		1	
8	DC64-00015Q	INLAY-PANEL	PC	1	
9	MF-70A1D-01	ASSY PCB PARTS	W751SC	1	HOT+COLD 120V/60Hz
10	DC26-00003A	TRANS-FORMER	120V/60Hz	1	
11	DC63-00070A	COVER-T.C	PP	1	
12	DC62-30310K	VALVE WATER(COOL)	PP 120V/60Hz	1	
13	DC62-30310M	VALVE WATER(HOT)	PP 120V/60Hz	1	
14	DC97-00704A	ASSY BODY DETERGENT	120V/60Hz	1	
15	DC61-10659K	ASSY CASE DETERGENT	WHITE	1	
16	DC96-00040A	ASSY-M. WIRE HARNESS	W751SC	1	
17	3601-000485	FUSE-CARTRIDGE		1	
18	DC34-30006H	SWITCH REED	250V, 10A, GLASS	1	


# Parts Breakdown

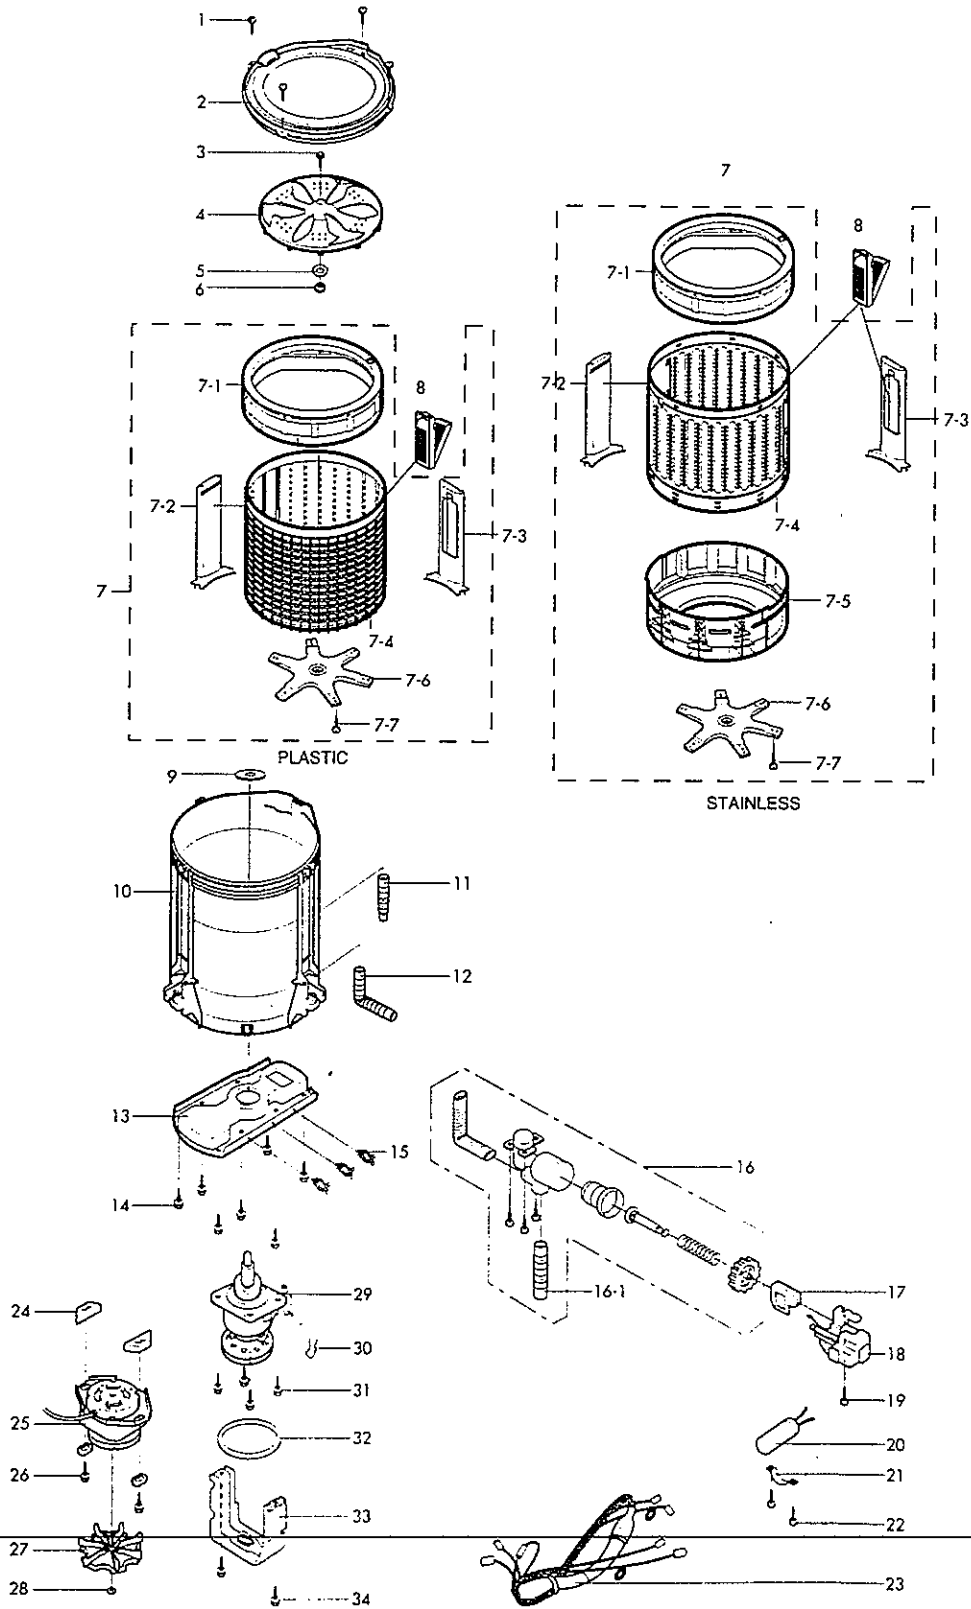

## Parts List

Location No.	Code No.	Description	Specification	Qty	Remarks
1	6002-000445	SCREW-TAPPING	2-4X18 STS	4	
2	DC61-000129A	COVER-TUB	PP	1	
3	DC60-00004A	BOLT PULSATOR	M6x20.5, STS	1	
4	DC66-50194A	PULSATOR	PP	1	
5	DC60-50004A	NUT-SPIN	ALDC M24	1	
6	DC60-60015A	WASHER-PLAIN	24.2-35xT1.0	1	
7	DC97-00113A	ASSY-S BASKET SPIN	W751SC	1	
7	DC97-00155A	ASSY-S BASKET SPIN	W751SC	1	
7-1	DC97-00033A	ASSY BALANCER	PP,PANTON-COO GRY	1	
7-2	DC61-60524A	GUIDE-W.F	WATER FALL W751SC	1	STAINLESS
7-2	DC61-00016A	GUIDE-W.F	WATER FALL W752PC	1	PLASTIC
7-3	DC61-60525A	GUIDE-W.F	FILTER W751SC	1	STAINLESS
7-3	DC61-00015A	GUIDE-W.F	FILTER W752PC	1	PLASTIC
7-4	DC61-30123A	BASKET-SPIN	PP	1	
7-4	DC61-30125A	BASKET-WRAPPER	STS	1	
7-5	DC61-30124A	BASKET-BOWL	PP	1	
7-6	DC66-40010A	FLANGE-SHAFT	ALDC	1	
7-7	DC60-20004E	SCREW-TAPPING		6	
8	DC97-00114A	ASSY FILTER	PP	1	MAGIC FILTER
9	DC60-00012A	WASHER-PLAIN	STS 24-37xT3.0	1	
10	DC61-00128A	TUB-OUTER	PP	1	
11	DC62-10293A	HOSE-DRAIN	EPDM,245mm	1	PUMP
12	DC62-10092C	HOSE-PUMP	EPDM,349.5mm	1	PUMP
13	DC61-70063A	DIE-MOTOR	SBHG1	1	
14	DC60-20064C	SCREW-TAPPING	2-6.2X20	8	
15	DC61-60526A	CLAMP-WIRE SADDLE	NYLON66	3	
16	DC91-10255A	ASSY CASE D.V		1	
16	DC62-10293A	HOSE-DRAIN	EPDM,245mm	1	
17	DC66-30027C	LINK	POM	1	
18	DC31-20014D	MOTOR DRAIN	110/120V 60Hz	1	
19	DC91-11258M	ASSY SCREW	M5X15	1	
20	DC62-50023Q	CONDENSER-M.F	250VAC 42uF	1	
21	DC61-40077A	HOLDER CONDENSER	PP	1	
22	DC60-20058B	SCREW TAPPING	M5X20	2	
23	DC96-00039C	ASSY WIRE HARNESS(SUB)	W751SC	1	
24	DC61-60026A	CUSHION-MOTOR	FRPP	2	
25	DC31-00005C	MOTOR-WASHING	110/120V 50/60Hz	1	
26	DC91-11258U	ASSY SCREW	M8X30	2	
27	DC66-10175A	PULLY-MOTOR	60Hz	1	
28	DC60-50150A	NUT-HEX	M6X6.5	1	
29	DC97-00347A	ASSY-SHAFT	SEM-50D1	1	
30	DC60-80017B	PIN-LINK		1	PUMP
31	DC91-11258E	ASSY-SCREW	M8x20	4	
32	DC66-10045E	BELT-V	M20.1	1	
33	DC61-40053B	SADDLE	SBHG1-A	1	
34	DC60-20064C	SCREW TAPPING	6.2X20	2	

## Parts Breakdown

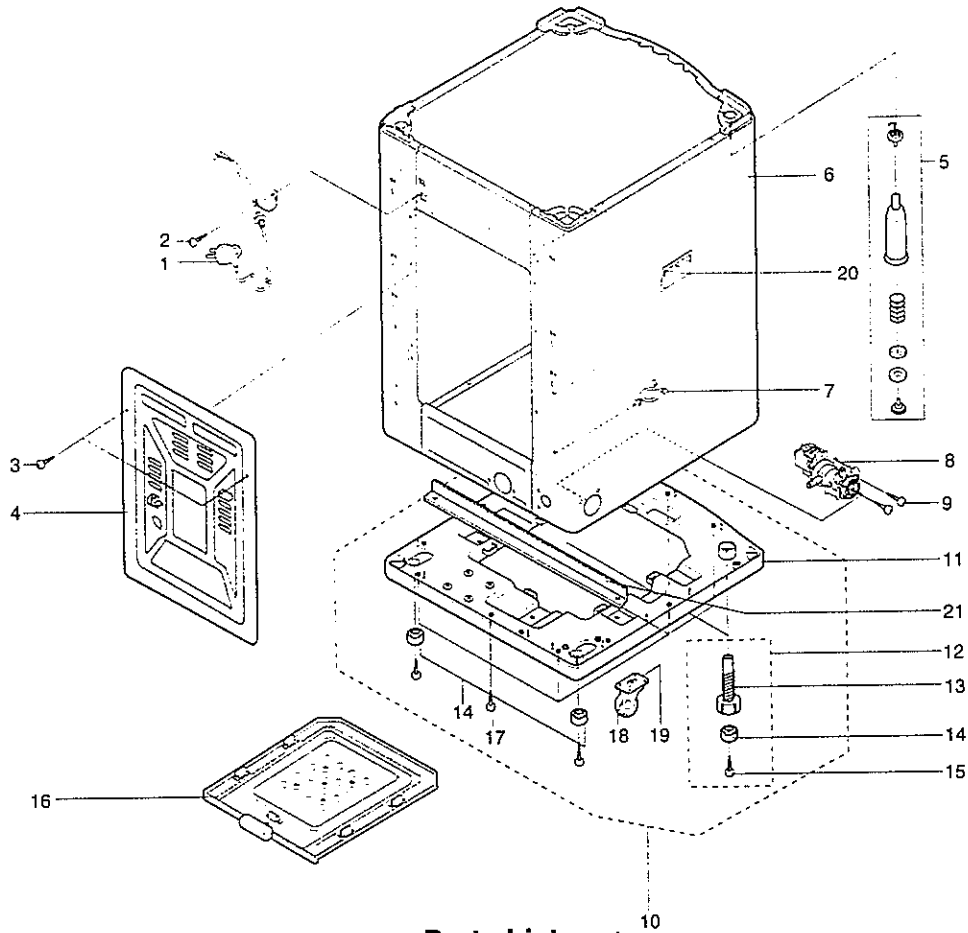


## Parts List

Location No.	Code No.	Description	Specification	Qty	Remarks
1	DC96 - 00038B	ASSY - POWER CORD	EP3	1	
2	DC60 - 10003C	SCREW - MACHINE	M4 x 8 BS	1	
3	DC60 - 20060A	SCREW - TAPPING		2	
4	DC61 - 10226A	COVER - BACK	PP	1	
5	DC97 - 00121C	ASSY - DAMPER	FRONT/RED	2	
	DC97 - 00121B	ASSY - DAMPER	REAR/WHITE	2	
6	DC91 - 11919B	ASSY - FRAME	SBHG1 - A	1	PUMP
7	6046 - 000310	STAND - OFF		7	
8	DC90 - 11110C	ASSY - PUMP DRAIN	120/60Hz	1	
9	DC60 - 20054F	SCREW - TAPPING	1 - 4 x 14	4	
10	DC97 - 00398B	ASSY - BASE	PP	1	
11	DC61 - 30314A	BASE	PP	1	
12	DC97 - 01224A	ASSY - LEG		2	
13	DC61 - 50009B	LEG - ADJUST	FRPP	2	
14	DC61 - 50167A	LEG - RUBBER	BUTYL	4	
15	DC60 - 20054F	SCREW - TAPPING	1 - 4 x 14	4	
16	DC61 - 20211A	(PAN - SILENT) SHUTTER	PP	1	
17	DC60 - 20054F	SCREW - TAPPING	1 - 4	9	BASE
18	DC61 - 00114B	LEG - CASTER	32mm	5	
19	DC60 - 20054C	SCREW - TAP.TH	1 - 4 x 12	8	
20	DC61 - 20018P	HANDLE	PP	2	
21	DC61 - 00243A	GUIDE-FRAME	T2.6XW24XL535	1	



## DESCRIPCION DE PIEZAS

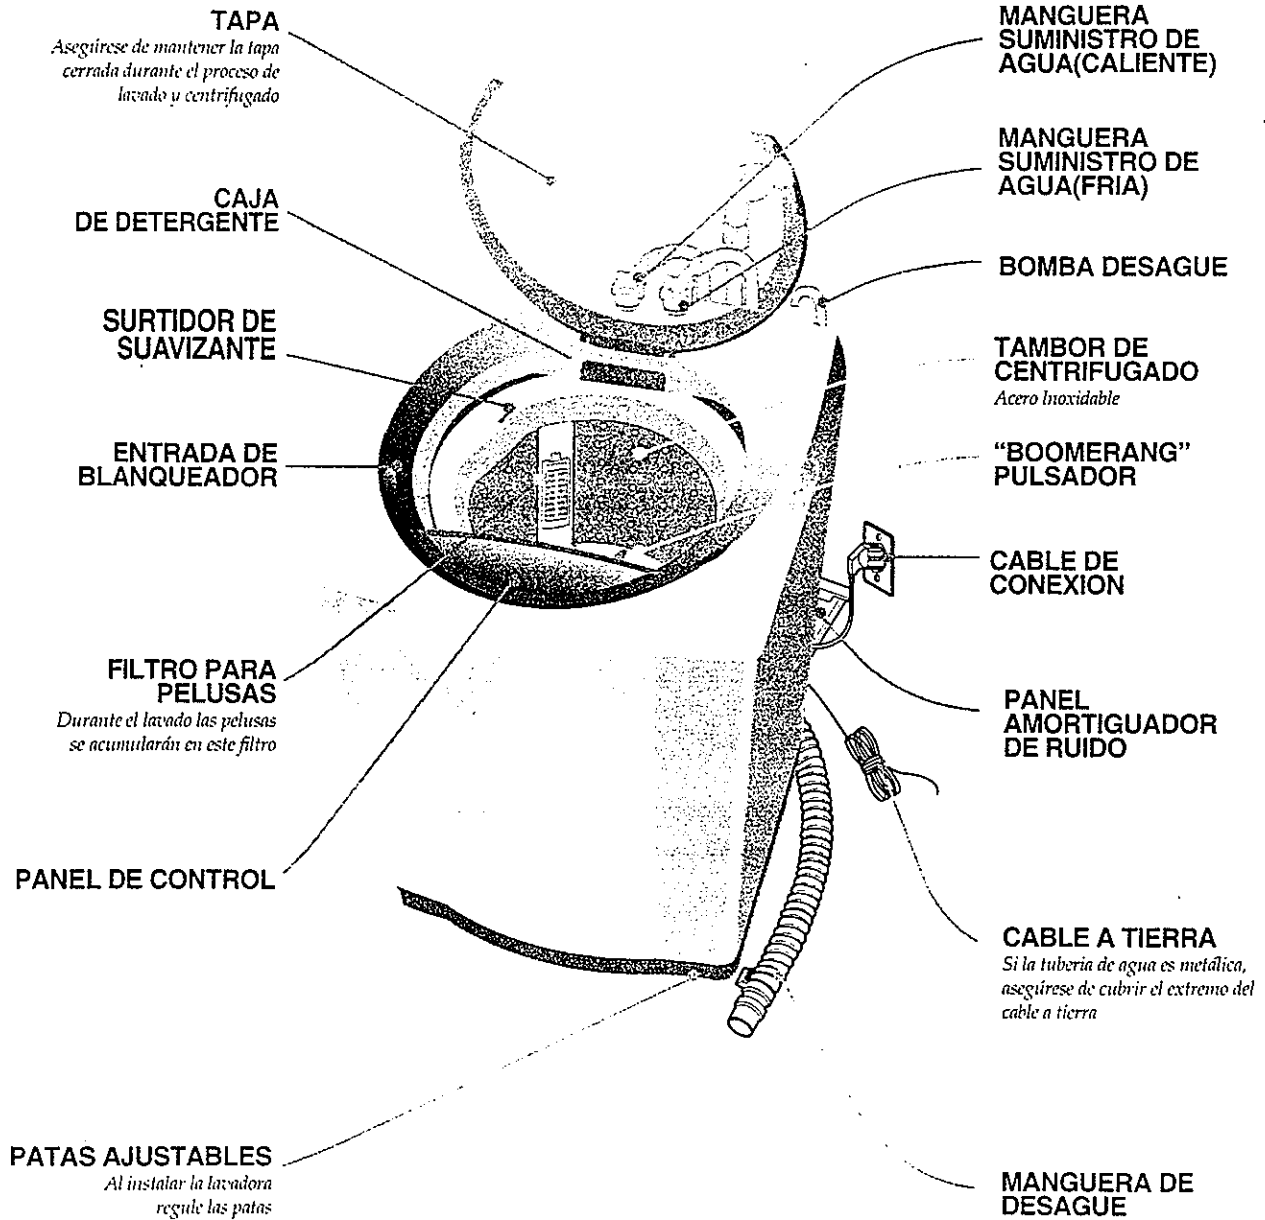

## CARACTERÍSTICAS

### ➤ CONTROL FUZZY

El control fuzzy funciona con el mejor programa de lavado al detectar la carga de lavado mediante un sistema de inteligencia artificial.

### ➤ Lavado Limpio Por Sistema De Caída

La ropa cae desde la parte superior del tambor, eliminando la suciedad y disolviendo completamente el detergente mediante un sistema de impacto.


## INSTRUCCIONES DE SEGURIDAD

- **Asegúrese que la lavadora esté conectada a tierra.**
- Para evitar choque eléctrico, al hacer la conexión a tierra use una tubería metálica.
- No haga la conexión a tierra de la lavadora en cañerías de gas o líneas telefónicas debido a que hay peligro de explosión o sobretensión por descarga atmosférica.
- Las aperturas de ventilación no deben ser obstruidas por la alfombra cuando la máquina de lavar está instalada en un piso con alfombra.
- **Durante el centrifugado, no coloque las manos dentro del tambor.**
- Debido a que el tambor está girando a alta velocidad, las piezas que giran pueden causarle heridas en las manos.
- Nunca permita que los niños operen o jueguen con la lavadora.
- Desconecte el cordón de electricidad del suministro de energía cuando no está en uso.
- **Coloque la ropa dentro de la lavadora en forma pareja.**  
Si coloca la ropa en forma dispereja es posible que se produzca ruido y vibración.
- No use agua excesivamente caliente. (60°C o más)
- Las piezas plásticas se pueden deformar o dañar. Igualmente, la ropa puede dañarse o desteñirse.
- Antes de lavar, revise los bolsillos. Si no se vacían pueden producirse daños a la máquina y a la ropa. Si se daña el cable de energía de la lavadora, este deberá ser cambiado por el servicio técnico designado por el fabricante debido a que es necesario utilizar herramientas especiales.



### ➤ COMO ARMAR EL PANEL DE AMORTIGUADOR DE RUIDO


Empuje la lavadora un poco y suba el panel hasta que pueda oír el sonido como la figura que está abajo.

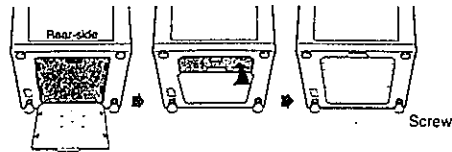

### ➤ NIVELAR


Mire si la máquina está nivelada observando la posición del pulsador dentro de la lavadora. Abra la tapa de la máquina, llene de agua el tanque hasta un nivel un poco debajo del pulsador. Ajuste las patas hasta que el pulsador se coloque al centro del agua como aparece en el dibujo.

Ajuste las dos patas delanteras hasta que la máquina esté completamente nivelada.

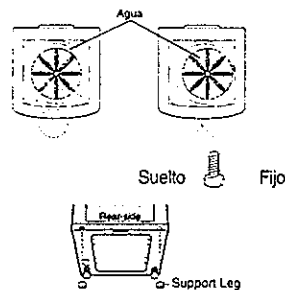

### ➤ PARA LAVADORA CON BOMBA DE DESCARGA

- Asegúrese de conectar correctamente la manguera de descarga a la salida de descarga que está en la parte posterior de la máquina.

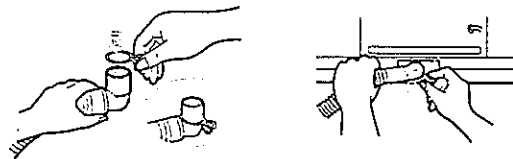

### ➤ COMO CONECTAR LA MANGUERA DESAGÜE

- Saque la capa de manguera, conecte la manguera de desagüe

- Asegúrese de conectar correctamente la manguera de desagüe a la salida de la válvula de desagüe que está en la parte posterior de la máquina.


- Instale la manguera de desagüe aproximadamente 28~32inches sobre el nivel del suelo.



➤ **Como conectar la manguera de suministro de agua a una sola llave de agua.**

1. Conecte la manguera a la llave de agua apretándola firmemente.
2. Si es necesario, saque el adaptador de rosca de la llave y reemplácelo con el adaptador macho de rosca que viene como accesorio.
3. Entonces, conecte el otro extremo de la manguera de suministro de agua a la válvula de entrada de agua que está en la parte posterior de la máquina. Atornille completamente la manguera a la derecha. Utilice el aro de espacio antes de introducir el adaptador.
4. Algunas llaves requieren usar los dos adaptadores (macho y hembra) que vienen como accesorios. Fíjese en el dibujo a continuación.

**Nota :** Para una sola llave de agua en la cocina use solamente la manguera de suministro de agua fría.

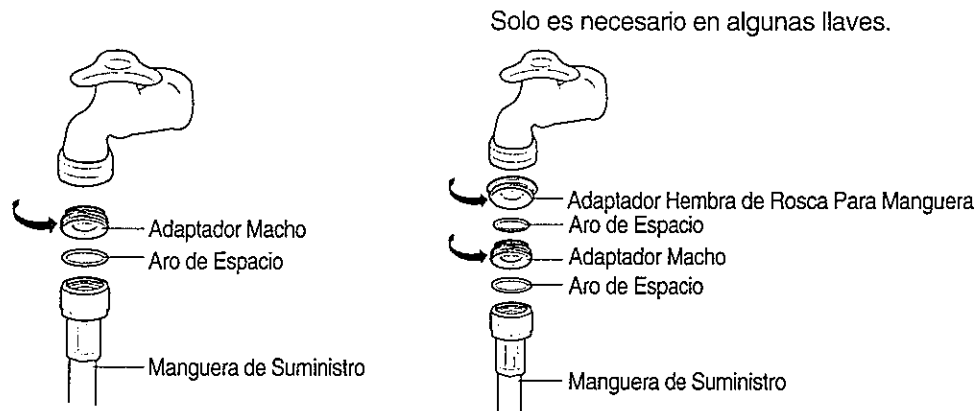


➤ **Como conectar las mangueras de suministro de agua.**

Su lavadora posee dos válvulas de suministro de agua (fría y caliente)


1. Conecte la manguera de suministro de agua a la llave de agua. Apriétela firmemente.
2. Conecte el otro extremo de la manguera a la válvula de entrada de agua que está en la parte posterior de la máquina. Atornille completamente la manguera a la derecha.

Notas :

- A. Asegúrese de conectar la manguera de suministro de agua caliente a la válvula de agua de entrada (marcada caliente). Para mejor resultados el agua caliente no debe sobrepasar los 60° grados centígrados. Si el agua está mucho más caliente que la temperatura recomendada puede dañarse la máquina.
- B. Abra la llave de agua completamente buscando por salideros. Si se encuentra alguno, repita los mismos pasos antes indicados.
- C. Si es una llave de agua no convencional, llame un plomero calificado para la instalación correcta.

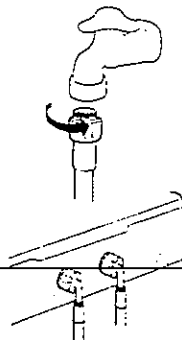

## PANEL DE CONTROL

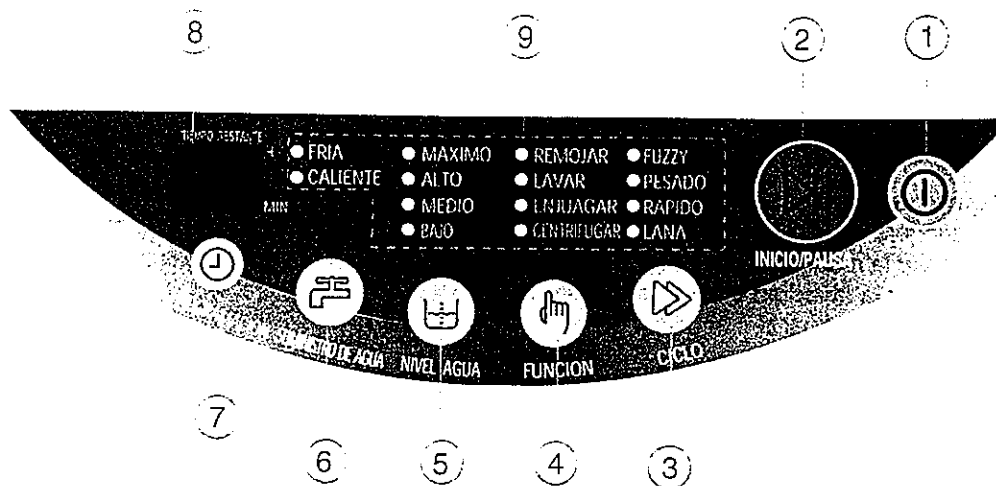

- 1) **Botón De Encender**  
Presione este botón para operar. Para apagar la máquina, vuelva a presionarlo.
- 2) **Botón Inicio/Pausa**  
Presione este botón para detener y reiniciar la operación de lavado. Para cambiar el procedimiento de lavado durante la operación, presione este botón para detener la máquina y vuelva a presionarlo para que vuelva a operar después de cambiar el procedimiento.
- 3) **Botón Selector De Programa**  
Cada vez que se presiona este botón, el programa de lavado cambia.  
FUZZY → PESADO → RAPIDO → LANA → FUZZY
- 4) **Botón De Selector De Funciones.**  
Cada vez que se presiona este botón, la función cambia.  
LAVAR+ENJUAGAR+CENTRIFUGAR → REMOJAR+LAVAR+ENJUAGAR+CENTRIFUGAR → LAVAR → ENJUAGAR → CENTRIFUGAR LAVAR+ENJUAGAR → ENJUAGAR+CENTRIFUGAR → LAVAR+ENJUAGAR+CENTRIFUGAR
- 5) **Botón Selector De Nivel De Agua**  
De acuerdo a la carga de lavado, seleccione el nivel de agua.  
MEDIO → ALTO → MINIMO → BAJO
- 6) **Botón Selector De Suministro De Agua**  
Al presionar este botón, el tipo de agua se selecciona de la siguiente manera:  
FRÍA → FRÍA+CALIENTE → CALIENTE → FRÍA
- 7) **Botón De Programación**  
Presione este botón cuando desee un lavado programado.
- 8) **Luz Indicadora De Tiempo Restante**  
La luz indicadora muestra el tiempo restante (en minutos) de cada ciclo de lavado. Al término de cada ciclo, la máquina se apaga automáticamente.
- 9) **Luz Indicadora De Función**  
Una luz intermitente indica la función que está en uso. Al término de la función la luz indicadora se apaga.

## PROCESO DE LAVADO

### PROGRAMA FUZZY

*El mejor programa de lavado se selecciona automáticamente.*

- 1) **Antes de comenzar el proceso de lavado, verifique lo siguiente;**  
Conecte la manguera de suministro de agua a la llave de agua. Abra la llave. Enchufe la máquina.  
Asegúrese de bajar la manguera de descarga (En caso que no cuente con una bomba de descarga)
- 2) **Coloque la ropa en la lavadora y luego agregue detergente.**  
Asegúrese de no sobrecargar la máquina. Use el detergente correcto para el tipo de ropa que está lavando.
- 3) **Presione el botón ENCENDER.**  
El indicador de tiempo remanente debería indicar. "- -"





- 4) **Presione el botón INICIO/PAUSA.**  
El nivel de agua se selecciona automáticamente. Luego comienza el proceso de lavado, enjuague y centrifugado. Si desea detener la máquina, presione nuevamente el botón INICIO/PAUSA. Es posible cambiar el programa cuando la máquina se encuentra detenida.



- 5) **Cierre la tapa.**  
Desenchufe la máquina cuando termine el proceso de lavado.

### PROGRAMA PARA LAVADO PESADO

*Para la prenda pesada , esto permite un lavado fuerte.*

- 1) **Presione el botón ENCENDER.**
- 
- 2) **Presione una vez el botón de selección de programa de lavado.**
- 
- 3) **Presione el botón INICIO/PAUSA.**  
Comienza el proceso de lavado, enjuague y centrifugado. Si desea detener la máquina, presione nuevamente este botón. Cuando la máquina esta detenida es posible cambiar el programa de lavado.



*\*Se lleva a cabo una operación de diez minutos (1 minuto de lavado y 4 minutos de remojado) durante 30 minutos.*

- 4) **Cierre la tapa.**

## PROGRAMA PARA LANA

*Solo se dispone de nivel alto o medio. Se selecciona agua fría.*

- 1) Presione el botón ENCENDER.



- 2) Presione dos veces el botón de selección de programa de lavado.



- 3) Presione el botón INICIO/PAUSA..

Comienza el proceso de lavado, enjuague y centrifugado. Si desea detener la máquina, presione nuevamente el botón INICIO/PAUSA.



- 4) Cierre la tapa.

### PRECAUCION:

- No use agua sobre 30°C para lavar ropa de lana.
- Consulte la etiqueta adherida a las prendas para obtener información acerca del lavado.
- Abroche los botones y lave la ropa por el revés.
- Use el tipo de detergente indicado en la etiqueta.
- Si la ropa está demasiado sucia, déjela remojar unos 10 minutos en agua tibia antes de presionar el botón del programa LANA para obtener la máxima eficiencia de su lavadora.

## PROGRAMA RAPIDO

*Debido a que el proceso de lavado es más rápido, es conveniente para la ropa que está menos sucia o manchada.*

- 1) Presione el botón ENCENDER

 


- 2) Presione tres veces el botón de selección de programa de lavado..



- 3) Presione el botón INICIO/PAUSA.

El nivel de agua queda automáticamente seleccionado. Luego comienza el proceso de lavado, enjuague y centrifugado. Si desea detener la máquina, presione nuevamente el botón INICIO/PAUSA.



- 4) Cierre la tapa.

## LAVADO PROGRAMADO

Seleccione este programa cuando tenga que salir o desee hacer otra cosa.

1. Presione el botón de ENCENDER.



2. Presione el botón de PROGRAMACION.



DELAY START



ex) 3 horas

Se puede cambiar el tiempo de lavado programado. (desde 3 horas a 18 horas)

3. Presione el botón INICIO/PAUSA y ponga la cantidad adecuada de detergente en la caja de detergente.



START/HOLD



4. Cierre La tapa.

El lavado empieza cuando usted lo programó.

## FUNCIONES MANUALES

### REMOJADO, LAVADO ENJUAGADO Y CENTRIFUGADO

Presione el botón de ENCENDER. Presione una vez el botón de SELECTOR DE FUNCIÓN. Presione una vez el botón de INICIO/PAUSA. El proceso de lavado comienza y continúa durante 71 minutos. Las ropas son remojuadas en agua para que la suciedad sea eliminada completamente. *Al presionar el botón de FUNCIÓN durante la operación, puede modificar el tiempo de enjuague en un rango de uno a cinco veces.*



 
una vez

ex) nivel mínimo



### SOLO LAVADO

Presione el botón de ENCENDER. Presione dos veces el botón FUNCION SELECTOR. Presione una vez el botón INICIO/PAUSA. El proceso de lavado comienza y continúa por 18 minutos. *Al presionar el botón FUNCION, el tiempo de lavado se modifica a una razón de 2 minutos por presión en un rango de 3 a 25 minutos.*



dos veces

ex) nivel mínimo



### SOLO ENJUAGUE

Presione el botón de ENCENDER. Presione tres veces el botón FUNCION. Presione una vez el botón INICIO/PAUSA. El proceso de enjuague comienza y continúa por 5 minutos. *Al presionar el botón FUNCION, el tiempo de enjuague se modifica en un rango de 1 a 5 veces.*



tres veces

ex) nivel mínimo



### SOLO CENTRIFUGADO

Presione cuatro veces el botón de FUNCIÓN. Presione una vez el botón de INICIO/PAUSA. El proceso de centrifugado durará 9 minutos. *Al presionar el botón de FUNCIÓN durante centrifugado el tiempo de centrifugado se modifica en un rango de 5 a 11 minutos.*



cuatro veces

ex) nivel mínimo



### LAVADO Y ENJUAGUE

Presione el botón de ENCENDER. Presione cuatro veces el botón FUNCION. Presione una vez el botón INICIO/PAUSA. El proceso de lavado y enjuague comienza y continúa por 32 minutos. *Al presionar el botón FUNCION, el tiempo de enjuague se modifica en un rango de 1 a 5 veces.*



 
cinco veces

ex) nivel mínimo



### ENJUAGUE Y CENTRIFUGADO

Presione el botón de ENCENDER. Presione seis veces el botón FUNCION. Presione una vez el botón INICIO/PAUSA. El proceso de enjuague y centrifugado comienza. *Al presionar el botón FUNCION, el tiempo de enjuague se modifica en un rango de 1 a 5 veces.*



seis veces

ex) nivel mínimo



### LAVADO, ENJUAGUE Y CENTRIFUGADO

Presione el botón de ENCENDER. Presione siete veces el botón FUNCION. Presione una vez el botón INICIO/PAUSA. Comienza el proceso de lavado enjuague y centrifugado. *Al presionar el botón FUNCION, el tiempo de enjuague se modifica en un rango de 1 a 5 veces.*



siete veces

ex) nivel mínimo



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>