



# XDVD710

## INSTALLATION/OWNER'S MANUAL

DVD Multimedia Receiver with 7" Touch Screen Display



### Safety Notes:

The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.

## **Copyright Notes**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and or other countries.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

All other trademarks are property of their respective owners.



# Table of Contents

	Page
DVD Region Management .....	2
Warning Statement .....	3
Safety Information/Precautions .....	4
Preparation/Mounting/Wiring .....	5-7
Remote Control Overview .....	8
Control Locations - Monitor Closed .....	9-10
Control Locations - Monitor Open .....	11-12
Control Locations - Remote .....	13-14
General Operation .....	15-20
General Setup Menu .....	21-22
Setting the Clock .....	23
Anti-theft Code .....	24
Screen Setup .....	25-28
AM/FM Tuner Operation .....	29-30
Warning Statement .....	31
DVD Operation .....	32-39
DVD Setup .....	40-42
CD Operation .....	43-44
MP3/WMA Operation .....	45-46
Media Compatibility Information .....	47-48
iPod Operation .....	49-52
XM Activation /Operation .....	53-54
Warranty .....	55
Troubleshooting .....	56
Specifications .....	57

## DVD Region Management

Some DVD discs can be played only in certain playback modes according to the intentions of the software. As the XDVD710 plays discs according to their intentions, some functions may not work as intended. Please be sure to read the instructions provided with each disc. This player has been designed to play back DVD software that has been encoded for specific region areas. It cannot play back DVD software encoded for other region areas than the region areas for which it has been designed.

The XDVD710 will play discs labeled "Region 1" or "All".

### DVD region codes:

- 1 - USA, Canada
- 2 - Japan, Europe, South Africa, Middle East
- 3 - Rep. of Korea, Taiwan, Hong Kong, Parts of Southeast Asia
- 4 - Australia, New Zealand, Mexico, South America
- 5 - Eastern Europe, Russia, India, Africa
- 6 - China



**⚠ WARNING ⚠**

Upon installation of this Monitor/DVD player (“unit”) into a vehicle, the driver of the vehicle must not operate this unit by watching videos or playing video games while driving. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.

Several states prohibit the installation of monitors/DVD players if the screen is visible from the driver’s seat. If you reside in a jurisdiction which has enacted such a law, this unit must not be installed so that the screen is visible from the driver’s seat. When installing this unit in the front console/dashboard, the unit must be positioned so that it is facing the front passenger seat only. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.

This unit is designed so that it may be operated only when the vehicle is in “Park” and the parking brake is fully engaged. To this end, this unit includes a parking brake lock-out feature which prohibits the unit from operating if the vehicle is not in “Park” and/or the parking brake is not fully engaged. When installing this unit, the installer must connect the parking brake detect wire (“Yellow-Blue Lead”) to the parking brake mechanism in order to make the parking brake lock-out feature operable. DO NOT simply ground the parking brake detect wire to a metal portion of the vehicle. Failure to properly install the parking brake lock-out feature could lead to driver distraction which could result in serious injury or death to the driver’s occupants or persons outside the vehicle and/or property damage.

Once the parking brake lock-out feature is installed, the owner/user must not attempt to disrupt/neutralize the parking brake lock-out feature by (a) partially engaging the parking brake and/or (b) purchasing/using any device or unit designed to send necessary brake signals to the unit. Failure to follow these instructions could lead to driver distraction which could result in serious injury or death to the driver’s occupants or persons outside the vehicle and/or property damage.

When operating this unit, keep the unit’s volume level low enough so that the vehicle’s occupants can hear traffic-related sounds such as police and emergency vehicles. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.

## Safety Information

**Please read all instructions carefully before attempting to install or operate.**

Due to its technical nature, it is highly recommended that your DUAL XDVD710 is installed by a professional installer or an authorized dealer. This product is only for use in vehicles with 12VDC negative ground only.

### **Safety Notes:**

The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.

### **To prevent damage or injury:**

1. Make sure to ground the unit securely to the vehicle chassis ground.
2. Do not remove the top or bottom covers of the unit.
3. Do not install the unit in a spot exposed to direct sunlight or excessive heat or the possibility of water splashing.
4. Do not subject the unit to excessive shock.
5. When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause the unit to malfunction.
6. To prevent short circuits when replacing a fuse, disconnect the wiring harness first.
7. Use only the provided hardware and wire harness.
8. You cannot view video while the vehicle is moving. Find a safe place to park and engage the parking brake.
9. If you experience problems during installation, consult your nearest DUAL dealer.
10. If the unit malfunctions, reset the unit as described on page 12 first. If the problem still persists, consult your nearest DUAL dealer or call tech assistance @ 1-866-382-5476.
11. To clean the monitor, wipe only with a dry silicone cloth or soft cloth. Do not use a stiff cloth, or volatile solvents such as paint thinner and alcohol. They can scratch the surface of the panel and/or remove the printing.
12. When the temperature of the unit falls (as in winter), the liquid crystal inside the screen will become darker than usual. Normal brightness will return after using the monitor for a while.

### **Additional Notes:**

1. When extending the ignition, battery or ground cables, make sure to use automotive-grade cables or other cables with an area of 0.75mm (AWG 18) or more to prevent voltage drops.
2. Do not touch the liquid crystal fluid if the LCD is damaged or broken. The liquid crystal fluid may be hazardous to your health or fatal. If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

This device complies with part 15 of the FCC rules and regulations.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

## Preparation



Please read entire manual before installation.

### Before You Start

- Disconnect negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.


### Getting Started

- Slide the unit out of the mounting sleeve.
- Install mounting sleeve into opening, bending tabs to secure.
- Connect wiring harness and antenna as shown on pages 6-7. Consult a qualified technician if you are unsure.
- Certain vehicles may require an installation kit and/or wiring harness adapter (sold separately).
- Test for correct operation and slide unit into mounting sleeve.
- Attach unit to mounting sleeve using supplied #1 Phillips screws.
- Snap trim ring into place.
- Mount the iplug™ adapter to any smooth clean surface using the supplied double-sided tape or Phillips head screws.

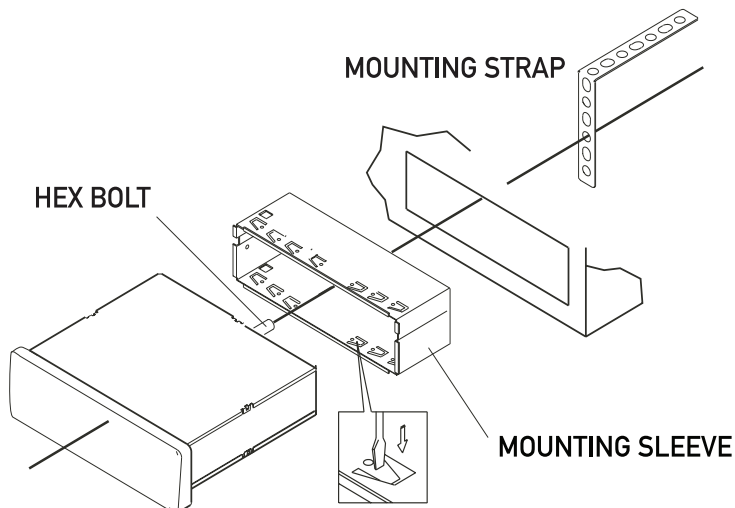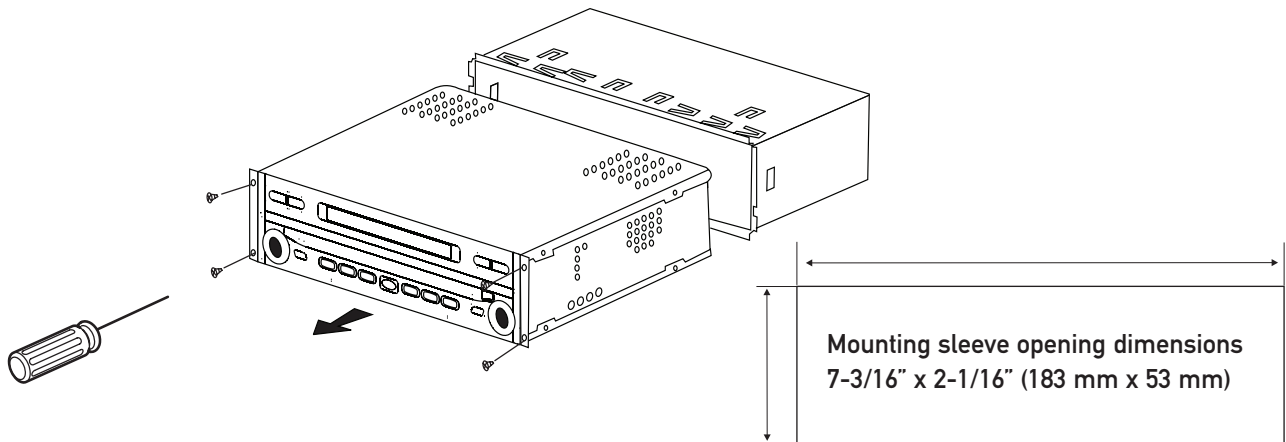

**TYPICAL FRONT-LOAD DIN MOUNTING METHOD**

# Expanded Wiring Diagram - Inputs/Outputs

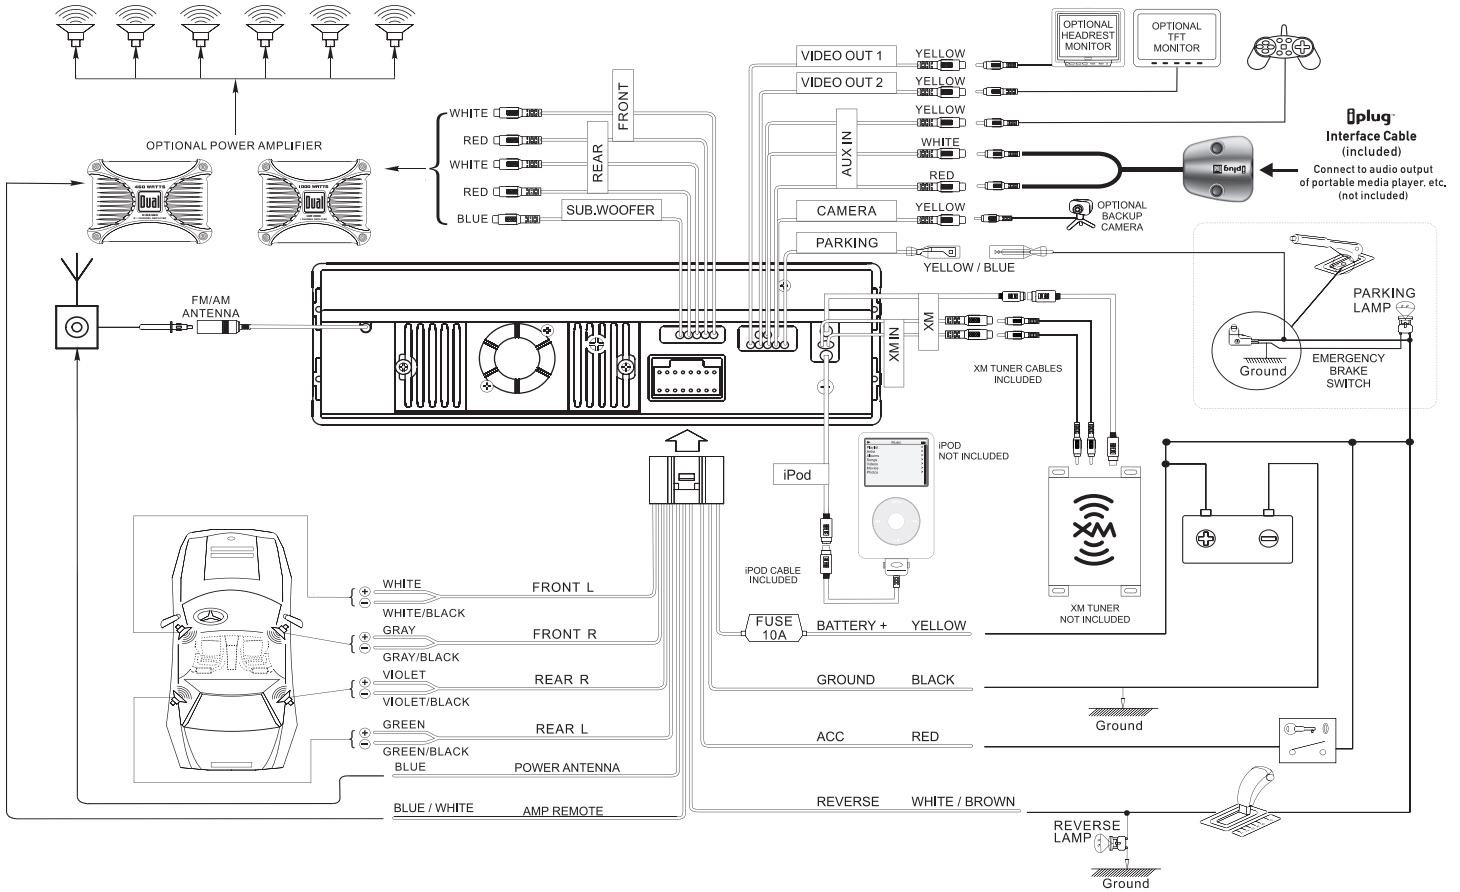

## Wiring Notes:

### Subwoofer output

The **SUBWOOFER** audio output (Blue RCA) is active in all audio modes and must be connected to an external amplifier.

### Rear view camera

A rear view camera (not included) can be used with the **CAMERA** input.


### NEED HELP??

Call our Technical Service Hotline, 1-866-382-5476.

## Safety Notes:

The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion. Altering or defeating this safety feature is a violation of law and is prohibited.


## Wiring Diagram - Optional A/V Connections

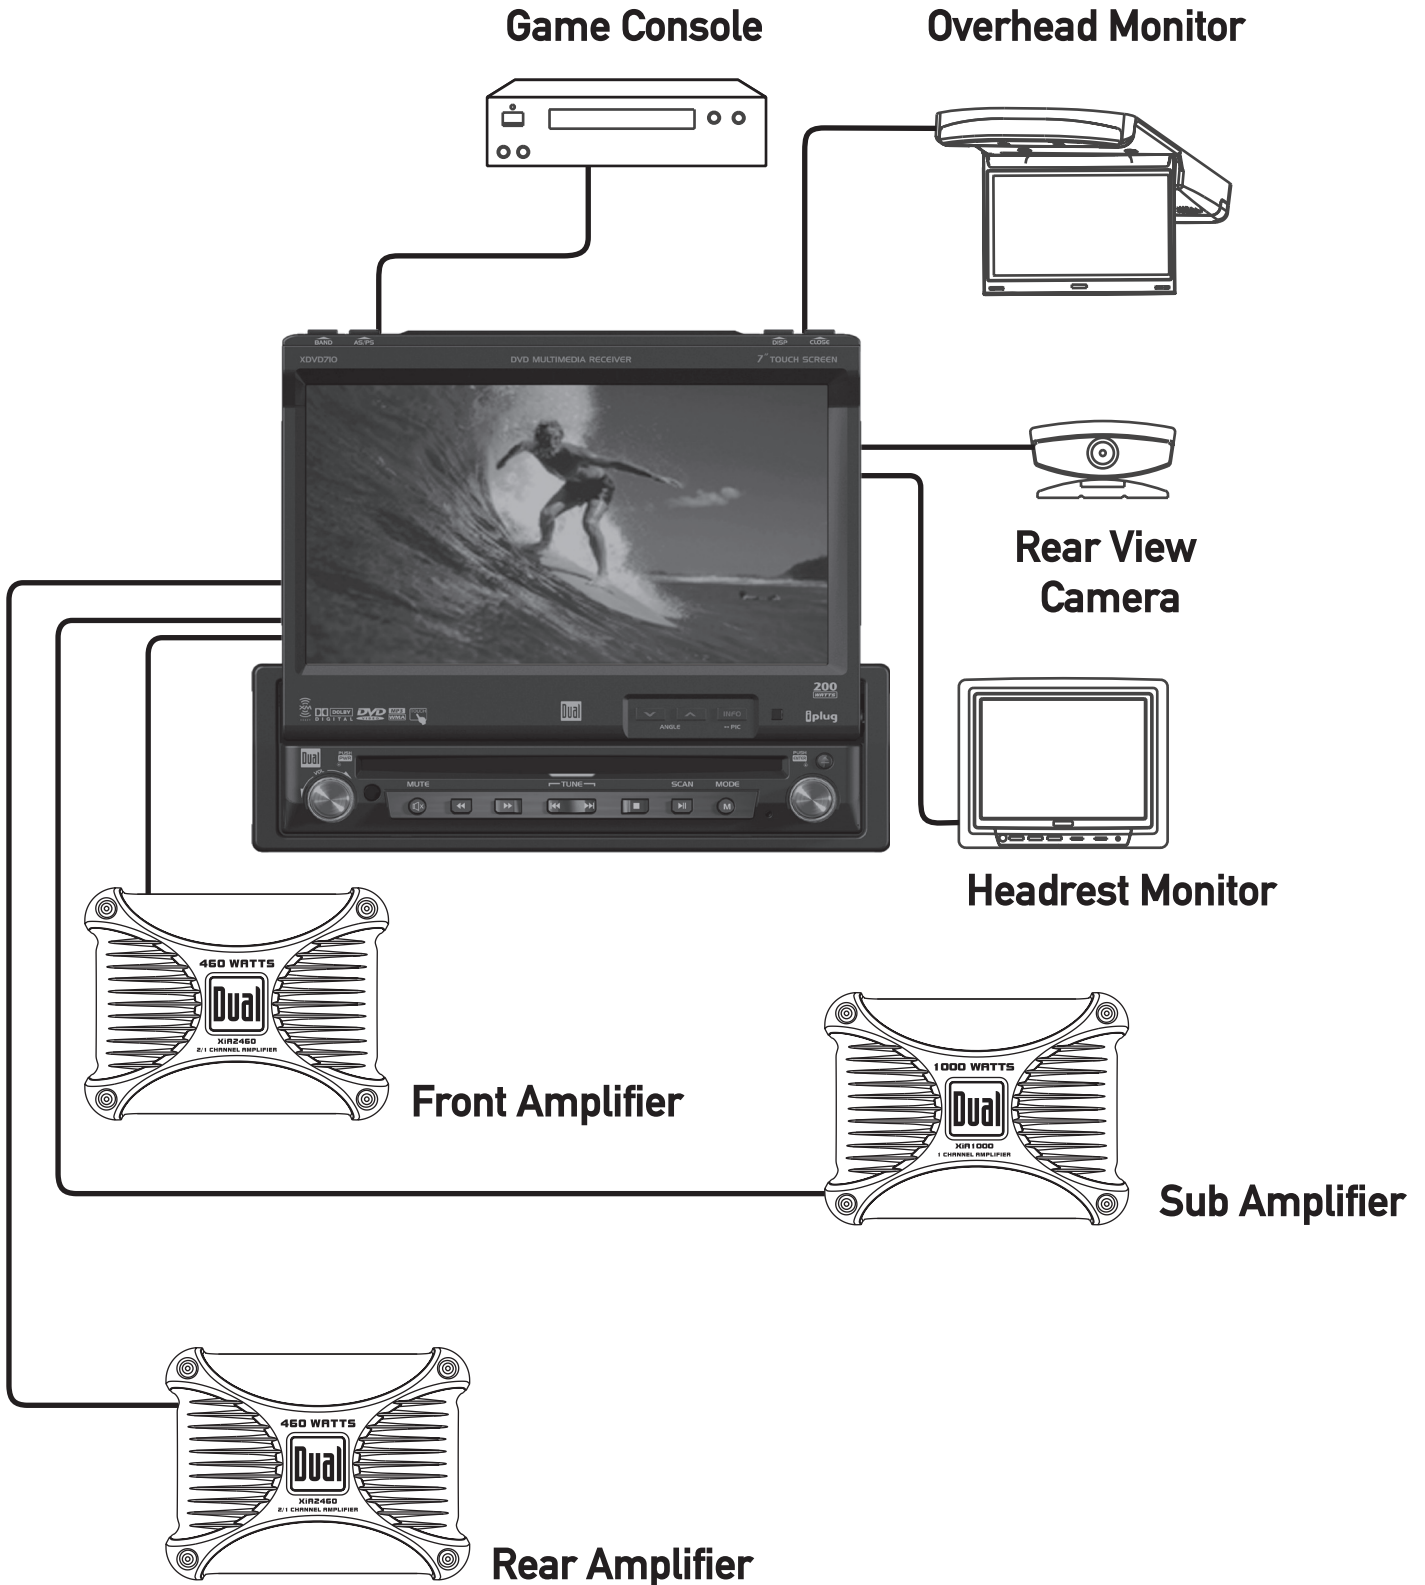



# IR Remote Preparation

To first use the IR Remote control, you must first pull the battery insulation tape out

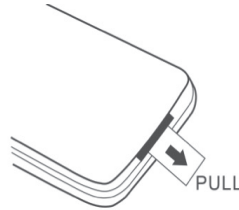


**Notes:**


- Remove the battery if the remote will not be used for a month or longer
- Remove and dispose of battery properly

Insert or replacing the Battery:


Remove the battery holder

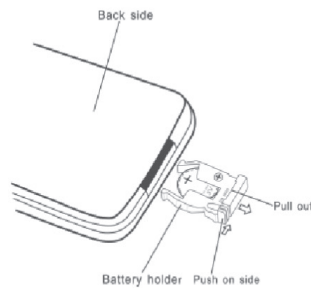


Remove the battery from the battery holder

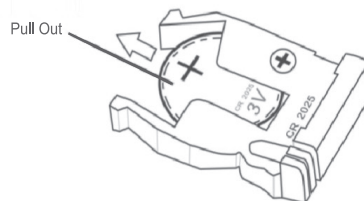

Install the new battery  
Make sure to keep the (+) side up

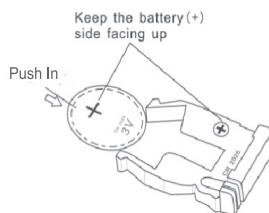


Insert the battery holder

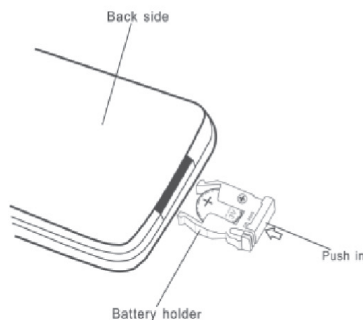

**CAUTION!!!**

- Do not store battery with metallic objects or materials

## Control Locations - Monitor Closed

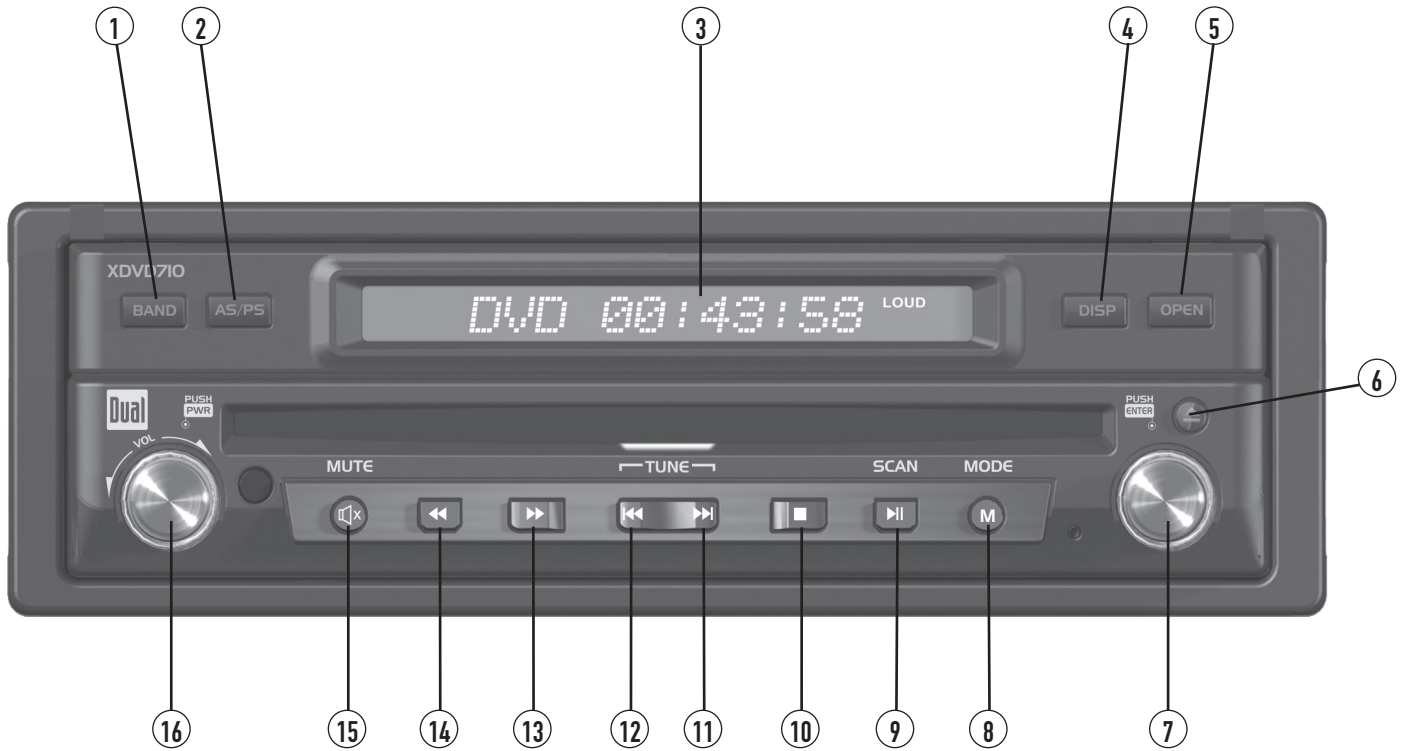

- |                          |                      |
|--------------------------|----------------------|
| ① Band                   | ⑨ Play/Pause/Scan    |
| ② Auto Store/Preset Scan | ⑩ Stop               |
| ③ Secondary LCD          | ⑪ Chapter/Track Up   |
| ④ Display                | ⑫ Chapter/Track Down |
| ⑤ Open/Close Monitor     | ⑬ Fast Forward       |
| ⑥ Eject                  | ⑭ Fast Reverse       |
| ⑦ Rotary Encoder/Enter   | ⑮ Mute               |
| ⑧ Mode                   | ⑯ Power/Volume       |

### Monitor Notes:

- This model incorporates a motorized moving monitor. Before final installation, make sure the monitor will not obstruct the dash, shifter or any other controls.
- Upon installation, do not attempt to move the monitor up/down by hand. Use the **ANGLE ▲/▼** and **OPEN** buttons on the front panel only.
- The unit will stop if it encounters any obstacles during the open/close sequence. If this occurs, remove the obstacle and press **OPEN** again to resume the monitor open/close sequence.

## Control Functions - Monitor Closed

<b>BAND</b>	Press <b>BAND</b> to increment from FM1, FM2, FM3, AM1⇒ FM1.
<b>AS/PS</b> (Auto Store /Preset Scan)	Press <b>AS/PS</b> momentarily to start station <b>PRESET SCAN</b> function. Press <b>AS/PS</b> for 2 seconds to start <b>AUTO STORE</b> station preset function in current <b>BAND</b> .
<b>SECONDARY LCD</b>	Additional <b>LCD</b> for system information while monitor is closed.
<b>DISP</b>	Press the <b>DISP</b> button to display various information on the secondary <b>LCD</b> .
<b>OPEN</b>	Press <b>OPEN</b> to open or close the monitor. The unit will emit 1 confirmation beep upon opening, 3 beeps when closing. Be careful not to not touch or obstruct the monitor movement during the open/close sequence, or permanent damage could occur.
<b>EJECT</b>	Press once to eject disc.
<b>ROTARY</b>	Rotate clockwise/counter-clockwise to select desired item and press once to <b>ENTER</b> .
<b>MODE</b>	Press once to incrementally select desired source.
<b>TRACK UP</b>	Selects the next chapter/track for playback.
<b>TRACK DOWN</b>	Selects the previous chapter/track for playback.
<b>STOP</b>	Stop playback of DVD/CD/MP3/iPod.
<b>PLAY/PAUSE</b>	Press once for <b>PAUSE</b> , press again for <b>PLAY</b> .
<b>FAST FORWARD</b>	Fast forward the content.
<b>FAST REVERSE</b>	Fast reverse the content.
<b>MUTE</b>	Press once to <b>MUTE</b> audio, <b>MUTE</b> will appear in the secondary <b>LCD</b> . Press again to return audio.
<b>POWER ON/OFF</b>	Press <b>POWER</b> momentarily to turn the unit on, the unit will beep 2 times. Press and hold <b>POWER</b> for more than 2 seconds, unit will beep 1 time, then turn off. <b>Note:</b> <b>EJECT</b> will still function even if <b>POWER</b> is off.
<b>VOLUME</b>	Rotate clockwise/counter clockwise for desired <b>VOLUME</b> level.

## Control Locations - Monitor Open



- ① Disc-in indicator - Red = Disc inserted, White = No disc.
- ② ANGLE ▼ - Press to decrease the monitor view angle.
- ③ ANGLE ▲ - Press to increase the monitor view angle.
- ④ INFO - Press to select DVD INFO and press and hold for BRIGHTNESS.
- ⑤ Press to RESET system.

### Safety Notes:

The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.

## Control Functions - Monitor Open

### Disc-in indicator

White = No disc  
Red = Disc inserted

### Monitor Angle ▲▼

Press **ANGLE ▲** to increase the monitor view angle.

Press **ANGLE ▼** to decrease the monitor view angle.

#### Notes:

- Do not attempt to move the monitor up/down by hand - severe damage will occur. Use the front panel buttons or the remote control only.
- The color of the LCD monitor varies between viewing angles. Select the angle with the most optimum view for your location.
- The last position of the monitor will be saved in memory. The monitor will return to its last position automatically the next time it is opened.

### INFO/PIC


Press **INFO** button for 1 second to display DVD disc information.

Press and hold **INFO** for 2 seconds to change TFT LCD **BRIGHTNESS**:  
Press **ANGLE ▲** to increase, **ANGLE ▼** to decrease or use **VOLUME** rotary to adjust the level up or down, (0 minimum/20 maximum), 10 is default.


### SYSTEM RESET

If you experience abnormal operation or, your unit is inoperable, press the **RESET** button for 3 seconds, located on the front bottom-right corner of the unit. After a system reset, the unit restores all factory default settings.

**Note:** Use the tip of a pen to access the button.

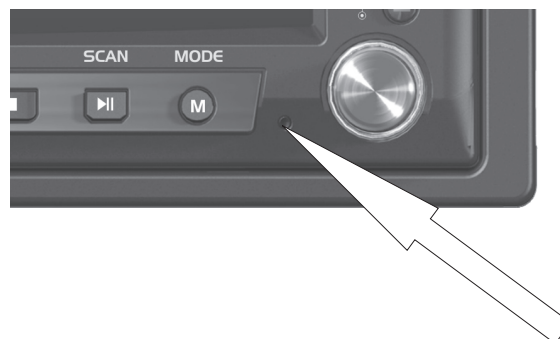

## Control Locations - Remote

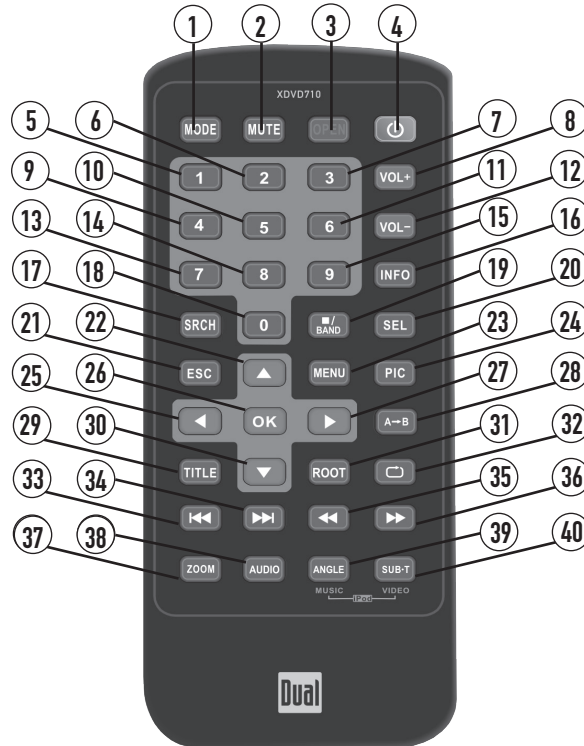

- |              |               |                             |
|--------------|---------------|-----------------------------|
| ① Mode       | ⑩ Key #5      | ⑲ Band/Stop                 |
| ② Mute       | ⑪ Key #6      | ⑳ Audio Select              |
| ③ Open/Close | ⑫ Volume Down | ㉑ Escape                    |
| ④ Power      | ⑬ Key #7      | ㉒ 4-Way - Up                |
| ⑤ Key #1     | ⑭ Key #8      | ㉓ Menu                      |
| ⑥ Key #2     | ⑮ Key #9      | ㉔ Picture                   |
| ⑦ Key #3     |               | ㉕ 4-Way - Left              |
| ⑧ Volume Up  |               | ㉖ Ok                        |
| ⑨ Key #4     |               | ㉗ 4-Way - Right             |
|              |               | ㉘ Repeat A-B                |
|              |               | ㉙ Title Menu                |
|              |               | ㉚ 4-Way - Down              |
|              |               | ⑳ Info                      |
|              |               | ㉑ Search                    |
|              |               | ㉒ Key #0                    |
|              |               | ㉓ Audio Select              |
|              |               | ㉔ Escape                    |
|              |               | ㉕ 4-Way - Up                |
|              |               | ㉖ Menu                      |
|              |               | ㉗ Picture                   |
|              |               | ㉘ 4-Way - Left              |
|              |               | ㉙ Ok                        |
|              |               | ㉚ 4-Way - Right             |
|              |               | ㉛ Repeat A-B                |
|              |               | ㉜ Title Menu                |
|              |               | ㉝ 4-Way - Down              |
|              |               | ㉞ Root                      |
|              |               | ㉟ Repeat                    |
|              |               | ㊱ Chapter/Track Down        |
|              |               | ㊲ Chapter/Track Up          |
|              |               | ㊳ Fast Rewind               |
|              |               | ㊴ Fast Forward              |
|              |               | ㊵ Zoom                      |
|              |               | ㊶ Audio                     |
|              |               | ㊷ Angle/iPod Music mode     |
|              |               | ㊸ Sub-Title/iPod Video mode |

\* The remote control uses one 3 volt Lithium CR2025 battery. For best performance, replace only with CR2025 or equivalent.

## Control Functions - Remote

Mode	Press once to incrementally select desired source.
Mute	Press once to <b>MUTE</b> audio, press again to return audio.
Open/Close	Press once to open monitor, press again to close the monitor.
Power	Press once to turn the unit on, press again to turn unit off.
Keys 0-9	Direct access chapter/track/preset station for current <b>BAND</b> .
Volume Up	Increase <b>VOLUME</b> .
Volume Down	Decrease <b>VOLUME</b> .
Info	Displays DVD information.
Search	Search function in the DVD/CD disc mode.
Band/Stop	Press to increment <b>BAND</b> , or <b>STOP</b> while in DVD/MP3 mode.
Audio Select	Enter <b>AUDIO</b> Setup mode.
Escape	Exit current menu.
4-Way -Up/Down/Left/Right	Navigating system and DVD menus.
Menu	Enter the <b>MAIN</b> system menu.
Picture	<b>BRIGHTNESS</b> parameter setting for TFT.
Ok	Starts/pauses playback or confirm settings.
Repeat A-B	Repeat playback from time frame A to time frame B.
Title Menu	Enters the title menu on DVD.
Root	Enters the main menu of the DVD.
Repeat	Repeats playback of current chapter/track or folder.
Chapter/Track Down	Selects the previous chapter/track for playback.
Chapter/Track Up	Selects the next chapter/track for playback.
Fast Rewind	Fast reverses the disc/iPod content.
Fast Forward	Fast forwards the disc/iPod content.
Zoom	Zooming in/out on an image from DVD disc.
Audio	Change the audio language for DVD disc playback.
Angle	Selects between different angles (when available) for a scene/Selects iPod Music mode.
Sub-Title	Language selection for subtitle/Selects iPod Video mode.



## General Operation

### Power On/Off

Press **POWER** momentarily to turn the unit on, the unit will beep 2 times. Press and hold **POWER** for more than 2 seconds, unit will beep 1 time, then turn off. **Note:** **EJECT** will still function even if **POWER** is off.

### Monitor Open/Close

Press **OPEN** to open or close the monitor. The unit will emit 1 confirmation beep when opening, 3 beeps when closing. Be careful not to touch the monitor during the open/close sequence.

#### Notes:

- The unit will stop automatically during open/close if an obstacle is detected. If this occurs, remove the obstacle and press **OPEN** again to resume the monitor open/close sequence.
- Audio can be heard while the monitor is closed.

### Monitor Angle Position

Press **ANGLE ▲** to increase the monitor view angle.  
Press **ANGLE ▼** to decrease the monitor view angle.

#### Notes:

- Do not attempt to move the monitor up/down by hand - severe damage will occur. Use the front panel buttons or the remote control only.
- The color of the LCD monitor varies between viewing angles. Select the angle with the most optimum view for your location.
- The last position of the monitor can be saved in memory. The monitor will return to its last position automatically the next time it is opened.

#### Notes:

- The vehicle must be in park and the parking brake applied to view video on the in-dash monitor.
- As a safety feature, a blue "**CAUTION**" screen will show on the display when the vehicle's parking brake is not engaged. DVD, AV1 audio can be heard while the vehicle is in motion.
- The video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion. Refer to local laws in your area.

See DVD operation on page 32 for more details on how to initialize the **PARKING BRAKE**.



# General Operation

**Mode** Press **MODE** to select between **TUNER**, **DVD**, **AUX IN**, **XM**, **iPOD** and **CAMERA** inputs. Modes of operation are indicated in the **OSD** (On Screen Display) and secondary **LCD**.


Notes: **XM** tuner and/or **iPod** (both optional) must be connected to appear in the **MODE** selection string.

**Optional Mode Selection** With the monitor open, press the top left corner of the screen to display the **OSD** menu. Press **TUNER**, **DVD**, **AUX IN**, **XM**, **iPOD** or **CAMERA** icon to select the desired source.

**Volume** Adjust **VOLUME** using rotary encoder or the **VOL ▲ ▼** buttons (00-40).

**Mute** Press **MUTE** to silence the audio; will appear in the **OSD**. Press **MUTE** again to cancel.

**Audio Adjustment from front panel** Press in **VOLUME** rotary knob on left front panel. Press in **VOLUME** again to advance to desired parameter to be changed. Turn **VOLUME** rotary ⤴ or ⤵ to adjust to desired level. Press in **VOLUME** to advance to next selection. Press and hold the **VOLUME** button on the front panel to exit.

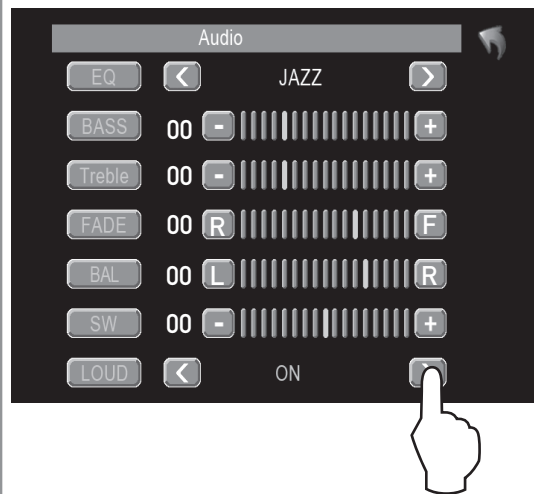

	RANGE	
ITEM		
EQ	USER	FLAT
	JAZZ	POP
	CLASSIC	ROCK
	NEWS	URBAN
	MOVIE	RAVE
	TECHNO	
BASS	-7	+7
TREBLE	-7	+7
FADE	-7	+7
BALANCE	-7	+7
SUB	-7	+7
LOUD	OFF	ON

**Audio Adjustment from Remote** Press the **SEL** button. Press the **▲ ▼** buttons on the remote to select an item to be adjusted. Press **◀ ▶** to adjust the desired setting. Press the **ESC** button on the remote control to exit the audio control menu.

**Notes:** The Bass and Treble levels are only adjustable when EQ is set to "User" mode. The Loud function compensates for deficiencies in sound ranges at low levels. When the Loud function is on, **LOUD** is displayed on the screen.

## General Operation

### INFO/PIC

Press **INFO** button for 1 second to display DVD disc information.

### RGB BRIGHTNESS

Press and hold **INFO** for 2 seconds to change TFT LCD **BRIGHTNESS**: Press **ANGLE ▲** to increase, **ANGLE ▼** to decrease, or use **VOLUME** rotary to adjust the level up or down. (0 minimum/20 maximum) 10 is default.

### CVBS Screen Controls

While in **iPod Video playback, AUX IN** or **CAMERA** mode: Press and hold **INFO** for 2 seconds to access **PICTURE MENU**, press **INFO** briefly again to step to next selection:

### SHARPNESS CONTRAST COLOR BRIGHTNESS TINT

**Note:** Adjustments to **SHARPNESS, CONTRAST, COLOR, BRIGHTNESS & TINT** are only possible while in either iPod video playback, **AUX-IN** or **CAMERA CVBS** mode.



Press **▼** or **▲** to adjust the sharpness (0 minimum/+20 maximum).

Press **▼** or **▲** to adjust the contrast (0 minimum/+20 maximum).

Press **▼** or **▲** to adjust the color (0 minimum/+20 maximum).

Press **▼** or **▲** to adjust the brightness (0 minimum/+20 maximum).

Press **▼** or **▲** to adjust the tint (0 minimum/+20 maximum).


## General Operation

<b>BAND</b>	Press <b>BAND</b> to increment from FM1, FM2, FM3, AM1 ⇒ FM1.
<b>AS/PS</b> (Auto Store /Preset Scan)	Press <b>AS/PS</b> momentarily to start station <b>PRESET SCAN</b> function. The unit will now scan your program presets for 10 seconds for each preset in that band. Press <b>AS/PS</b> again to stop scanning. Press <b>AS/PS</b> for 2 seconds to start <b>AUTO STORE</b> station preset function in current <b>BAND</b> .
<b>DISP</b>	Press the <b>DISP</b> button to display various information on the secondary LCD screen when the monitor is closed.
<b>OPEN</b>	Press <b>OPEN</b> to open or close the monitor. The unit will emit 1 confirmation beep upon opening, 3 beeps when closing. Be careful not to not touch or obstruct the monitor movement during the open/close sequence, or permanent damage could occur.
<b>EJECT</b>	Press once for <b>DISC</b> ejection.
<b>ROTARY</b>	Press to access MAIN menu, rotate clockwise/counter-clockwise to select desired item and press once to <b>ENTER</b> .
<b>MODE</b>	Press once to incrementally select desired source.
<b>TRACK UP</b>	Selects the next chapter/track for playback.
<b>TRACK DOWN</b>	Selects the previous chapter/track for playback.
<b>STOP</b>	Stop playback of <b>DVD/CD/MP3/iPod</b> .
<b>PLAY/PAUSE</b>	Press once for <b>PAUSE</b> , press again for <b>PLAY</b> .
<b>FAST FORWARD</b>	Fast forward the disc content.
<b>FAST REVERSE</b>	Fast reverse the disc content.
<b>MUTE</b>	Press once to <b>MUTE</b> audio, press again to return audio, an icon indicator will flash on the <b>TFT</b> monitor.
<b>POWER ON/OFF</b>	Press <b>POWER</b> momentarily to turn the unit on, the unit will beep 2 times. Press and hold <b>POWER</b> for more than 2 seconds, unit will beep 1 time, then turn off. <b>Note:</b> <b>EJECT</b> will still function even if <b>POWER</b> is off.
<b>VOLUME</b>	Rotate <b>VOLUME</b> rotary knob ⤴ or ⤵ for desired <b>VOLUME</b> level, press once to access the <b>AUDIO SETUP MENU</b> .
<b>PROGRAMMABLE TURN-ON VOLUME</b>	Turn <b>VOLUME</b> rotary to desired listening level, press and hold <b>VOLUME</b> rotary knob for 3 seconds to program currently selected volume level.

## General Operation



### Secondary LCD Information

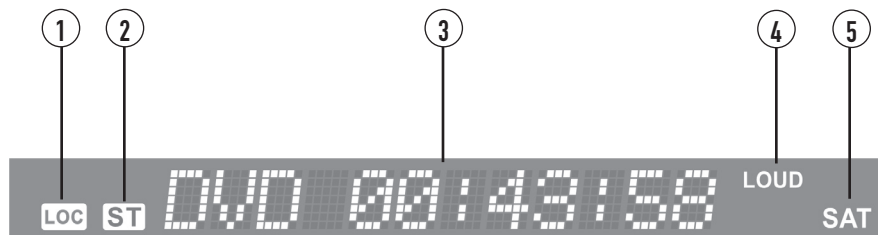

Note: Secondary LCD only functions when TFT monitor is closed.


- 1) **LOC** LOCAL indicator, icon will be off when **DISTANCE (DX)** is selected
- 2) **ST** STEREO radio station indicator
- 3) **TIME** Displays **TRACK** time, **TUNING** frequency, **MP3 ID3** info, & **CLOCK**, etc
- 4) **LOUD** LOUDNESS selection indicator
- 5) **SAT** XM SATELLITE RADIO indicator

**Note: XM Radio** requires an optional **XM tuner** and subscription, Visit [www.xmradio.com](http://www.xmradio.com) on where to buy and latest subscription rates or see your local **XM Radio** retailer for more details. See page 53 for more details.

# General Operation

## Main Menu Access

- There are three methods to access the MAIN menu
- Press the ENTER button on the right ROTARY knob
  - Press the MENU button on the remote control
  - Touch the upper left corner of the touch screen

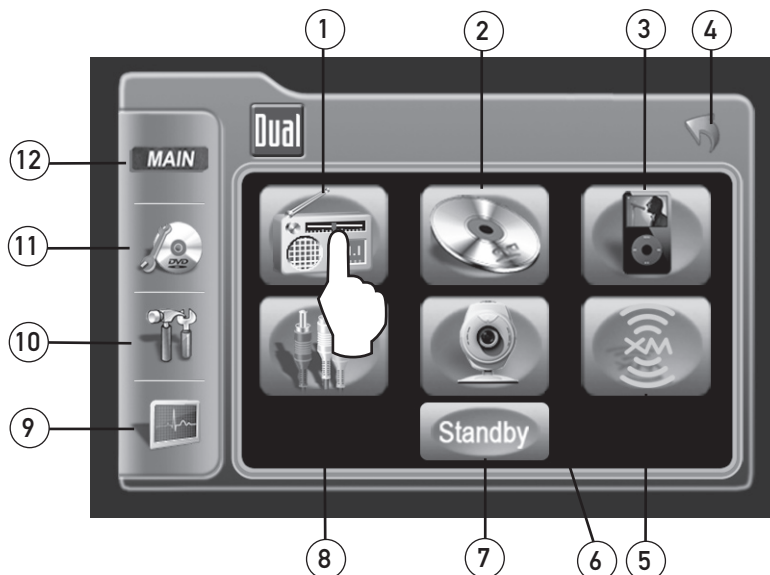


## Touch Access Buttons

- 1) Touch to access **AM/FM TUNER** mode
- 2) Touch to access **CD/DVD** mode, (CD/DVD must be inserted)
- 3) Touch to access **iPod** mode, (iPod must be connected to activate)
- 4) Touch to **RETURN** to previous screen
- 5) Touch to access **XM** mode, (XM tuner must be connected to activate)
- 6) Touch to access **CAMERA** mode, if optional camera isn't connected then "No Video Signal" will be displayed
- 7) Touch to **STANDBY** screen, touch screen again or any button to resume display  
Note: **VOLUME** level can be controlled in **STANDBY** mode
- 8) Touch to access **AUXILIARY A/V INPUT** mode
- 9) Touch to access **SCREEN SETUP** menu
- 10) Touch to access **GENERAL SETUP** menu
- 11) Touch to access **CD/DVD SETUP** menu, (CD/DVD must be inserted to function)
- 12) Touch to access **MAIN** Source menu

## Rapid Dial


**RAPID DIAL** can also control touch screen functions from the main menu

- Select desired function rotating clockwise or counter-clockwise
- Function will be outlined in yellow
- Press to confirm/ENTER

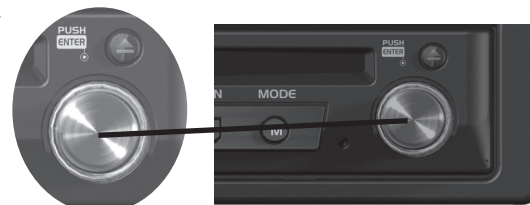

## GENERAL Setup - Menu

### General Setup Menu

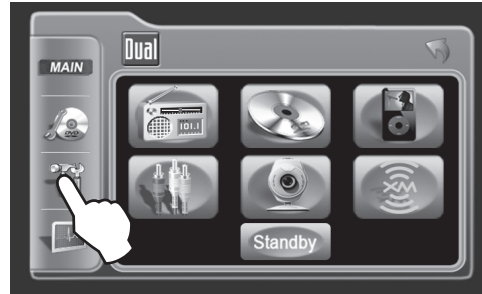

- Press the GENERAL button to access the GENERAL setup mode
- Select desired parameter you wish to change
- Page will return back to previous screen after 10 seconds of inactivity or by pressing the RETURN button

**Note:**  
Default anti-theft password  
is 0000

GENERAL Setup Menu matrix


Settings	Default	Options	Function
Radio	USA	USA	Set to appropriate setting for your country
		S-Amer1	
		S-Amer2	
		Europe	
Clock adjust	AM	00:00	See adjusting the clock on page 23 for more details
Clock Mode	12Hr	12Hr	PM 6:00
		24Hr	18:00
Camera Image	Normal	Normal	Normal Image
		Reverse	Mirror camera input image 180 degrees
Video Format	Auto	Auto	System will auto detect NTSC or PAL
		NTSC	For NTSC compatibility
		PAL	For PAL compatibility
TFT Auto Open	Off	On	TFT panel will automatically open when IGN is turned on
		Off	TFT panel will not auto open when IGN is turned on
		Manual	TFT will only open/close when OPEN button is pressed
Anti-theft Code	0000	----	Must enter password to turn anti-theft on or off
Anti-theft active	Off	On	System will require a password if main battery power is removed for more than 5 minutes
		Off	No password will be required if power is removed
Load Factory defaults	Yes	Are you sure? Yes/Cancel	Load all factory parameters to their original settings. Note: This will not reset the anti-theft password.

**Note:** Not all GENERAL setup features are described in detail.

# GENERAL Setup - Adjusting Radio Frequency


## Adjusting Radio Frequency

Step 1

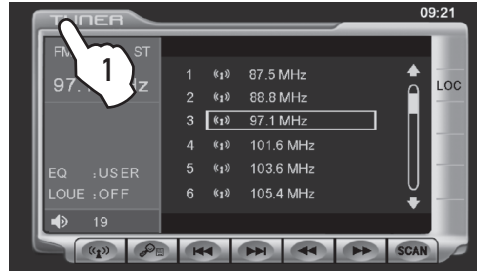


1) Touch top left corner of screen

Step 2

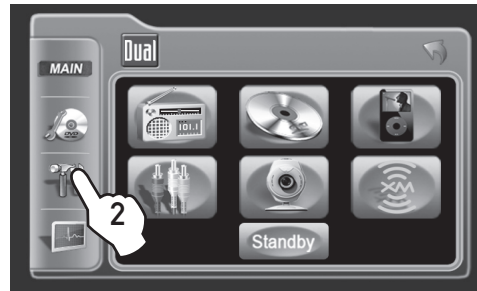


2) Touch GENERAL setup button

Step 3

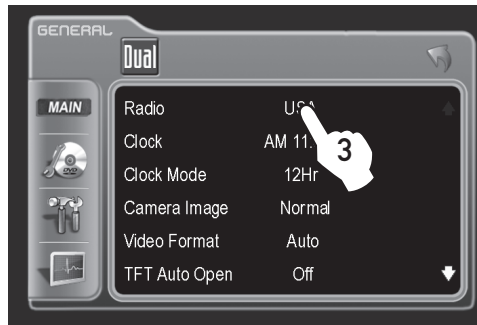

3) Touch USA

Step 4

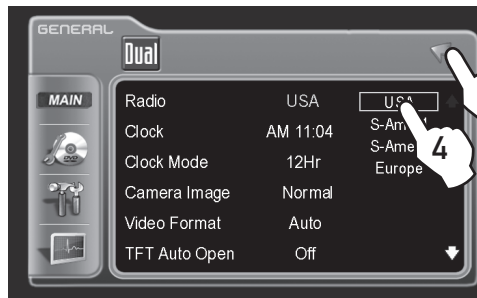

4) Touch the setting for your region

Step 5

Touch RETURN to exit

## GENERAL Setup - Adjusting the Clock


12Hr Clock Mode

Step 1




1) Touch top left corner of screen

Step 2

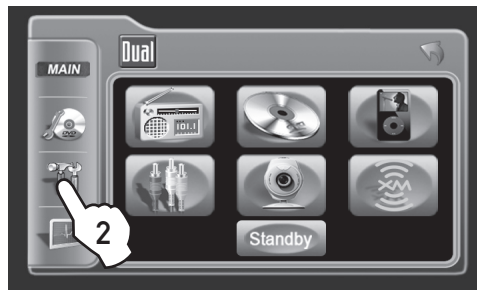

2) Touch GENERAL setup button

Step 3

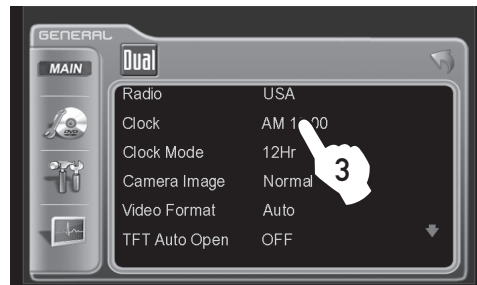

3) Touch 00:00 area in the CLOCK row

Steps 4-8




4) Keypad should now appear

5) Enter HOURS, touch ok

6) Enter MINUTES, touch ok

7) Touch AM or PM to set

8) Touch RETURN to exit

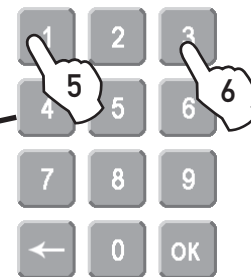


24Hr Clock Mode

If you desire 24Hr format, select 24Hr from CLOCK MODE, then follow steps 1-8.




# GENERAL Setup - Setting the Anti-theft code

By default Anti-theft password is 0000 and is turned Off. To turn this feature on, follow the steps below.  
**CAUTION!!**  
 This will lock your unit from operating if battery POWER is disconnected for more than 5 minutes.

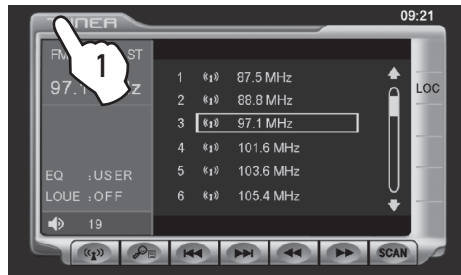

Step 1 & 2

1) Touch top left corner of screen

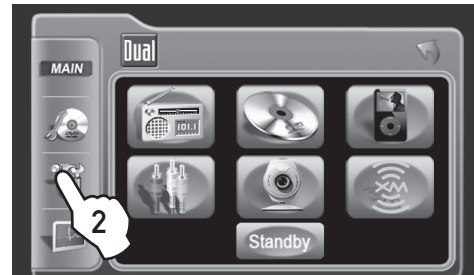


2) Touch GENERAL Setup button



Step 3 & 4

3) Touch down arrow button

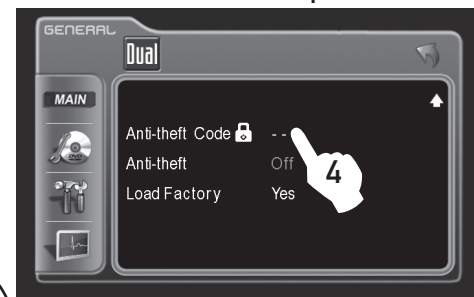


4) Touch ----




Step 5 & 6

5) Enter 0000, then press ok

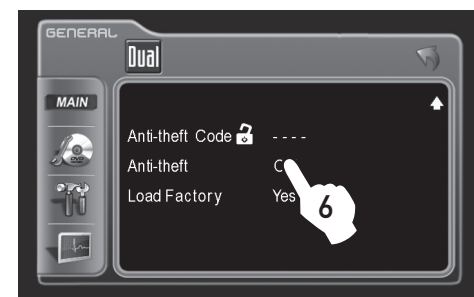


6) Touch OFF

**Note:** it is recommended that you choose your own 4-digit password carefully, write it down somewhere and keep in a safe location. In the event you ever loose or forget your password, call our tech hot line for support on how to unlock your system.

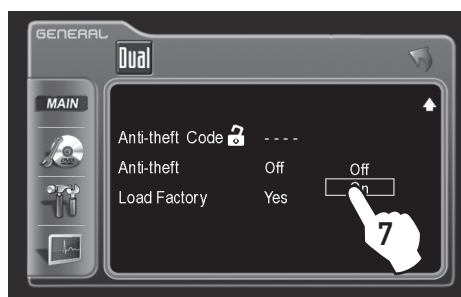

Step 7 & 8

7) Touch ON

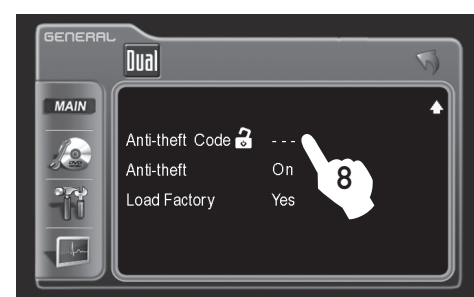

8) Touch ---- again



Step 9 & 10

9) Enter your new 4-digit password, then press ok.

10) Touch RETURN to exit

## SCREEN Setup - Menu

### Screen Setup Menu



- Press the SCREEN button to access the SCREEN setup mode
- Select desired parameter you wish to change
- Page will return back to previous screen after 10 seconds of inactivity or by pressing the RETURN button

### SCREEN Setup Menu matrix

Settings	Default	Options	Function
Brightness	10	0 - 20	Press the ◀ or ▶ buttons on the remote or press the right rotary once and rotate clockwise/counter-clockwise to adjust the BRIGHTNESS to the desired setting
Screen Tilt	4	1 - 6	Select 1 to 6 to adjust the default tilt angle of the screen
Screen Saver	On	Off	Select On to activate the screen saver, Off to deactivate
		On	
TS Calibrate	No	No	Touch Yes to enter the Touch Screen calibration mode
		Yes	
Version			Software version of unit

### System Standby




To conserve the LCD backlight lifespan or to eliminate glare while night driving, press STANDBY. The TFT screen will black out, however all other operations continue to operate. Press any button except **VOLUME** or touch the screen again to return to normal viewing.

# SCREEN Setup - Setting TFT Brightness


This will set the default setting for the TFT display brightness. This can also be set by pressing the INFO button on the front TFT panel.

Step 1

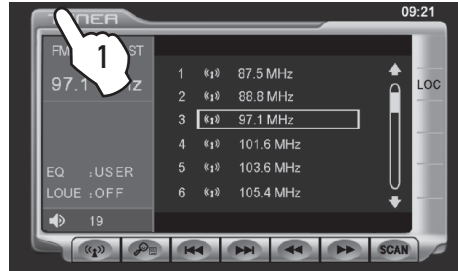


1) Touch top left corner of screen

Step 2

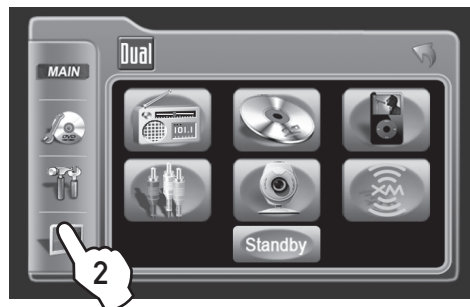


2) Touch SCREEN setup button

Step 3

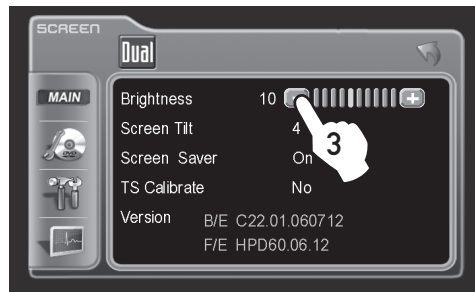

3) Touch [-] to dim TFT

Step 4

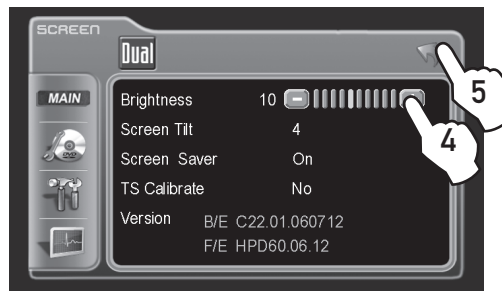

4) Touch [+] to brighten TFT

0 - 20 is possible  
Default = 10


Step 5

5) Touch RETURN to exit

## SCREEN Setup - Setting TFT Angle


Set for best viewing angle in your vehicle

Step 1

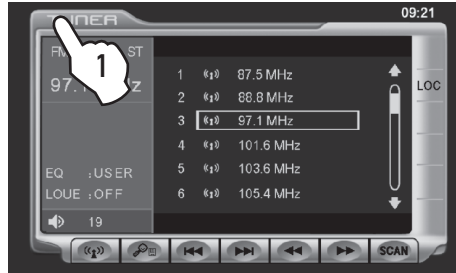


1) Touch top left corner of screen

Step 2

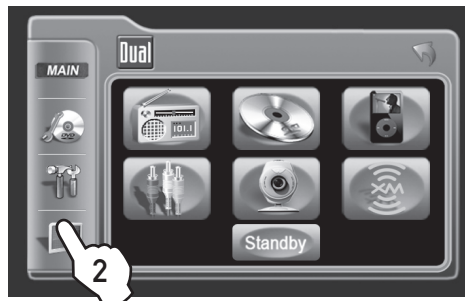

2) Touch SCREEN setup button

Step 3

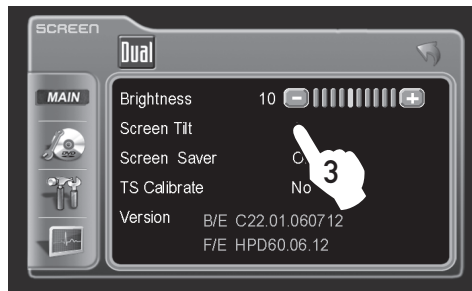

3) Touch a number displayed in SCREEN TILT row

Step 4



4) Touch desired angle for best viewing angle

1 - 6 is possible

Default = 4


Step 5

5) Touch RETURN to exit

# SCREEN Setup - Touch Screen Calibration


On occasion, the touch screen will have to be calibrated. Follow these steps as described.

Step 1

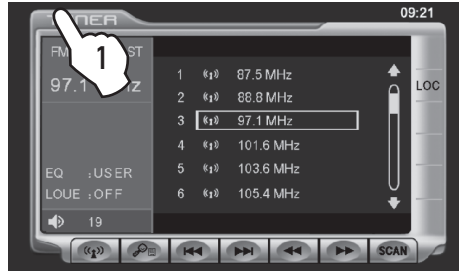


1) Touch top left corner of screen

Step 2

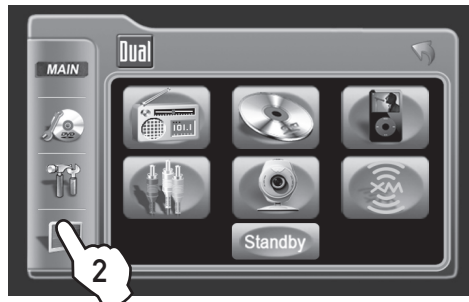


2) Touch SCREEN setup button

Step 3 & 4

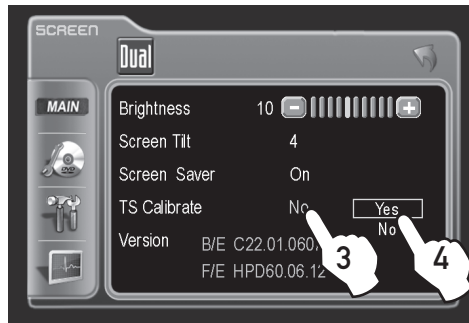

3) Touch No in TS Calibration row  
4) Then touch Yes

Step 5 & 6

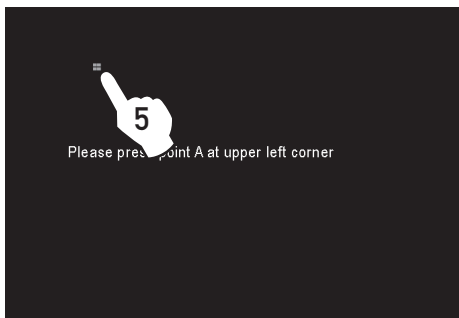


5) Touch and hold the pointers as indicated on the screen for 2 seconds each  
6) Screen will automatically return to MAIN MENU, touch RETURN to exit

**Note:** For proper calibration you must touch each pointer for 2 seconds. If pointers are not touched properly, the calibration sequence will start over until the calibration is done correctly.



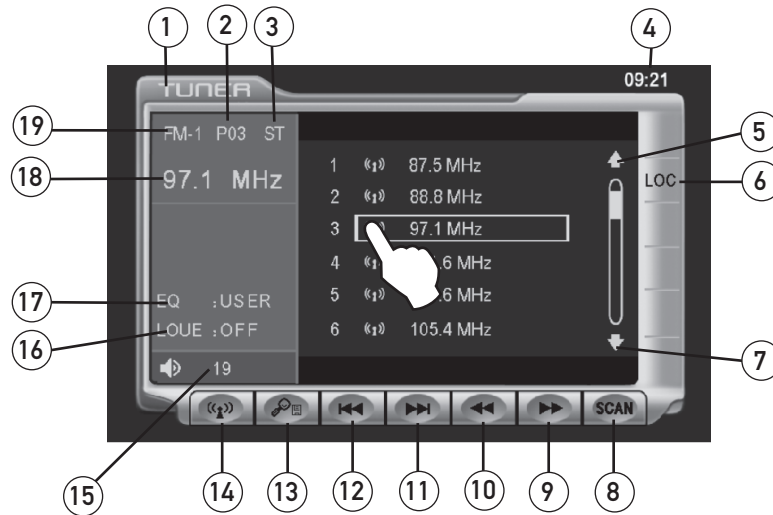

## AM/FM Tuner Operation


AM/FM Tuner TFT Display



- 1) Current **MODE** information, touch upper left area to return to **MAIN MENU**
- 2) Current **PRESET** station indicator
- 3) **STEREO** broadcast indicator
- 4) **Clock**
- 5) **PRESET** page up
- 6) **LOCAL/DISTANCE** selection
- 7) **PRESET** page down
- 8) Auto station **SCAN** button
- 9) **MANUAL TUNE** up
- 10) **MANUAL TUNE** down
- 11) **SEEK TUNE** up
- 12) **SEEK TUNE** down
- 13) **AS/PS (AUTO STORE/PRESET SCAN)**
- 14) **BAND** selection, FM1, FM2, FM3, AM
- 15) **VOLUME** indicator
- 16) **LOUD** indicator
- 17) Equalizer indicator, touch to access **AUDIO** Setup menu
- 18) Current radio frequency indicator
- 19) Current radio **BAND** indicator

## AM/ FM Tuner Operation

<b>Auto Seek Tuning</b>	<p>Press the  button to auto <b>SEEK</b> up the next strongest station.</p> <p>Press the  button to auto <b>SEEK</b> down the next strongest station.</p>
<b>Manual Tuning</b>	<p>Press the  button to manually tune up one step at a time.</p> <p>Press the  button to manually tune down one step at a time.</p>
<b>Auto Store (AS)</b>	<p>Press and hold <b>AS/PS</b> for more than 2 seconds to automatically store the twelve strongest stations in the current band. Automatic Local tuning is activated during the initial band scan, repeat for other bands.</p> <p>Note: All presets within the current band will be overwritten.</p>
<b>Program Scan (PS)</b>	<p>Press <b>AS/PS</b> for less than 2 seconds to scan presets 1-12 on the current band, pausing for 10 seconds at each. Press <b>AS/PS</b> again to cancel.</p>
<b>SCAN</b>	<p>Press <b>SCAN</b> to preview strong stations on the current band, pausing for 10 seconds at each station. Press <b>SCAN</b> again to cancel.</p>
<b>LOC/DX Radio Station</b>	<p>Touch <b>LOC</b> button on the TFT to activate <b>LOC/DX</b> tuning. When the <b>LOCAL</b> function is on, <b>LOC</b> will appear. Only radio stations with a strong signal are received. <b>DISTANCE (DX)</b> is for radio stations that are far away and/or have weak signals.</p>
<b>Storing Radio Stations PRESET</b>	<p>Up to 36 FM stations and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-12) for more than 2 seconds. When stored, the <b>PRESET</b> number will appear in the display. The station can be recalled anytime by pressing the corresponding preset button on the TFT.</p>
<b>Recalling a Radio Station PRESET</b>	<p>Touch a corresponding radio frequency for less than 2 seconds to recall.</p>
<b>PRESET Page Up/Down</b>	<p>Only 6 PRESETS can be display at one time, use PRESET page up/down to access next stored PRESETS accordingly.</p>

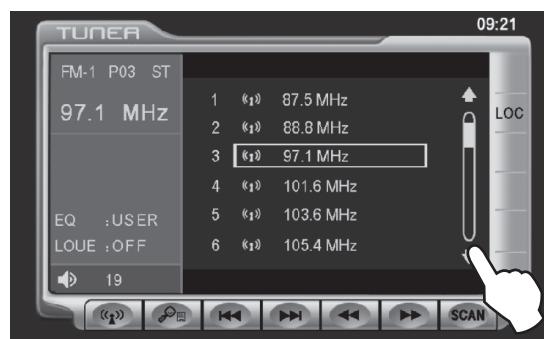



## **XDVD710 OPERATION**

---

### **⚠ WARNING ⚠**

**Upon installation of this Monitor/DVD player (“unit”) into a vehicle, the driver of the vehicle must not operate this unit by watching videos or playing video games while driving. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.**

**Several states prohibit the installation of monitors/DVD players if the screen is visible from the driver’s seat. If you reside in a jurisdiction which has enacted such a law, this unit must not be installed so that the screen is visible from the driver’s seat. When installing this unit in the front console/dashboard, the unit must be positioned so that it is facing the front passenger seat only. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.**

**This unit is designed so that it may be operated only when the vehicle is in “Park” and the parking brake is fully engaged. To this end, this unit includes a parking brake lock-out feature which prohibits the unit from operating if the vehicle is not in “Park” and/or the parking brake is not fully engaged. When installing this unit, the installer must connect the parking brake detect wire (“Yellow-Blue Lead”) to the parking brake mechanism in order to make the parking brake lock-out feature operable. DO NOT simply ground the parking brake detect wire to a metal portion of the vehicle. Failure to properly install the parking brake lock-out feature could lead to driver distraction which could result in serious injury or death to the driver’s occupants or persons outside the vehicle and/or property damage.**

**Once the parking brake lock-out feature is installed, the owner/user must not attempt to disrupt/neutralize the parking brake lock-out feature by (a) partially engaging the parking brake and/or (b) purchasing/using any device or unit designed to send necessary brake signals to the unit. Failure to follow these instructions could lead to driver distraction which could result in serious injury or death to the driver’s occupants or persons outside the vehicle and/or property damage.**

**When operating this unit, keep the unit’s volume level low enough so that the vehicle’s occupants can hear traffic-related sounds such as police and emergency vehicles. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle’s occupants or persons outside the vehicle and/or property damage.**



# DVD Operation - Parking Brake Initialization



**CAUTION !!!**  
IT'S UNLAWFUL TO OPERATE  
A VEHICLE WHILE VIDEO IS  
DISPLAY IN THE DRIVERS  
VIEWING AREA

ENGAGE EMERGENCY BRAKE  
TO ENJOY VIDEO

## SAFETY WARNING



- The video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash video functions will only operate when vehicle is in Park and the **PARKING BRAKE** is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion. Refer to local laws in your area.
- Audio can be heard while the monitor is closed.
- The vehicle must be in park and the parking brake applied to view video on the in-dash monitor.
- As a safety feature, "ENGAGE PARKING BRAKE" blue screen will show on the display when the vehicle's parking brake is not engaged. Video display on the front monitor isn't allowed until the **PARKING BRAKE** is engaged. By connecting the yellow/blue **PARKING BRAKE** wire to brake switch circuit as described below, DVD and AV1 audio can be heard while the vehicle is in motion without engaging the parking brake.

### Front TFT Video Initialization

Follow these two initialization procedures carefully to allow video playback on XDVD710 front panel TFT:

There are two situations that start the **PARKING BRAKE** sequence.

### Parking Brake Initialization Situation 1

#### First situation is while driving:

- 1) Stop vehicle, put in Park, make sure **PARKING BRAKE** is off/released
- 2) Depress **PARKING BRAKE** for 1 second
- 3) Release **PARKING BRAKE** for 1 second
- 4) Depress **PARKING BRAKE** permanently

#### Note:

Once above procedure 1-4 is completed, video will display in approx. 6 seconds.

### Parking Brake Initialization Situation 2

#### Second situation is while already parked and the **PARKING BRAKE** is already applied:

- 1) Keep vehicle in Park, **PARKING BRAKE** should be on
- 2) Release **PARKING BRAKE** for 1 second
- 3) Depress **PARKING BRAKE** for 1 second
- 4) Release **PARKING BRAKE** for 1 second
- 5) Depress **PARKING BRAKE** permanently

#### Notes:

Once 2nd procedure 1-5 is completed, video will display in approx. 6 seconds. The transition time must be less than 2 seconds between depress and release. This procedure will have to repeated if the IGN is turned off.



# XDVD710 OPERATION

## DVD Operation

### DVD Region Management

Some DVD discs can be played only in certain playback modes according to the intentions of the software. As the XDVD710 plays discs according to their intentions, some functions may not work as intended. Please be sure to read the instructions provided with each disc. This player has been designed to play back DVD software that has been encoded for specific region areas. It cannot play back DVD software encoded for other region areas than the region areas for which it has been designed.

The XDVD710 will play discs labeled "Region 1" or "All".

### DVD region codes:

- 1 - USA, Canada
- 2 - Japan, Europe, South Africa, Middle East
- 3 - Rep. of Korea, Taiwan, Hong Kong, Parts of Southeast Asia
- 4 - Australia, New Zealand, Mexico, South America
- 5 - Eastern Europe, Russia, India, Africa
- 6 - China



### DVD Disc Symbols


Symbol	12cm Disc Properties	Max Play Time
	Single side single layer (DVD-5) Single side double layer (DVD-9) Double side single layer (DVD-10) Double side double layer (DVD-18)	(MPEG 2 Method) 133 minutes 242 minutes 266 minutes 484 minutes
	Single side single layer (VCD)	(MPEG 1 Method) 74 minutes
	Single side single layer	74 minutes

Symbol	Meaning
	Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).
	Number of subtitle languages available on the disc (maximum of 32).
	Number of angles provided (maximum of 9).
	Aspect ratios available. "LB" stands for Letter Box and "PS" stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.
	Indicates the region code where the disc can be played. <ul style="list-style-type: none"> <li>· Region 1: USA, Canada, East Pacific Ocean Islands</li> <li>· Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East</li> <li>· Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia</li> <li>· Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands/ Oceania</li> <li>· Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia</li> </ul>

### Notes:

Some DVD discs can be played only in certain playback modes according to the intentions of the software. As the XDVD710 plays discs according to their intentions, some functions may not work as intended. Please be sure to read the instructions provided with each disc.

# DVD Operation - Inserting a Disc

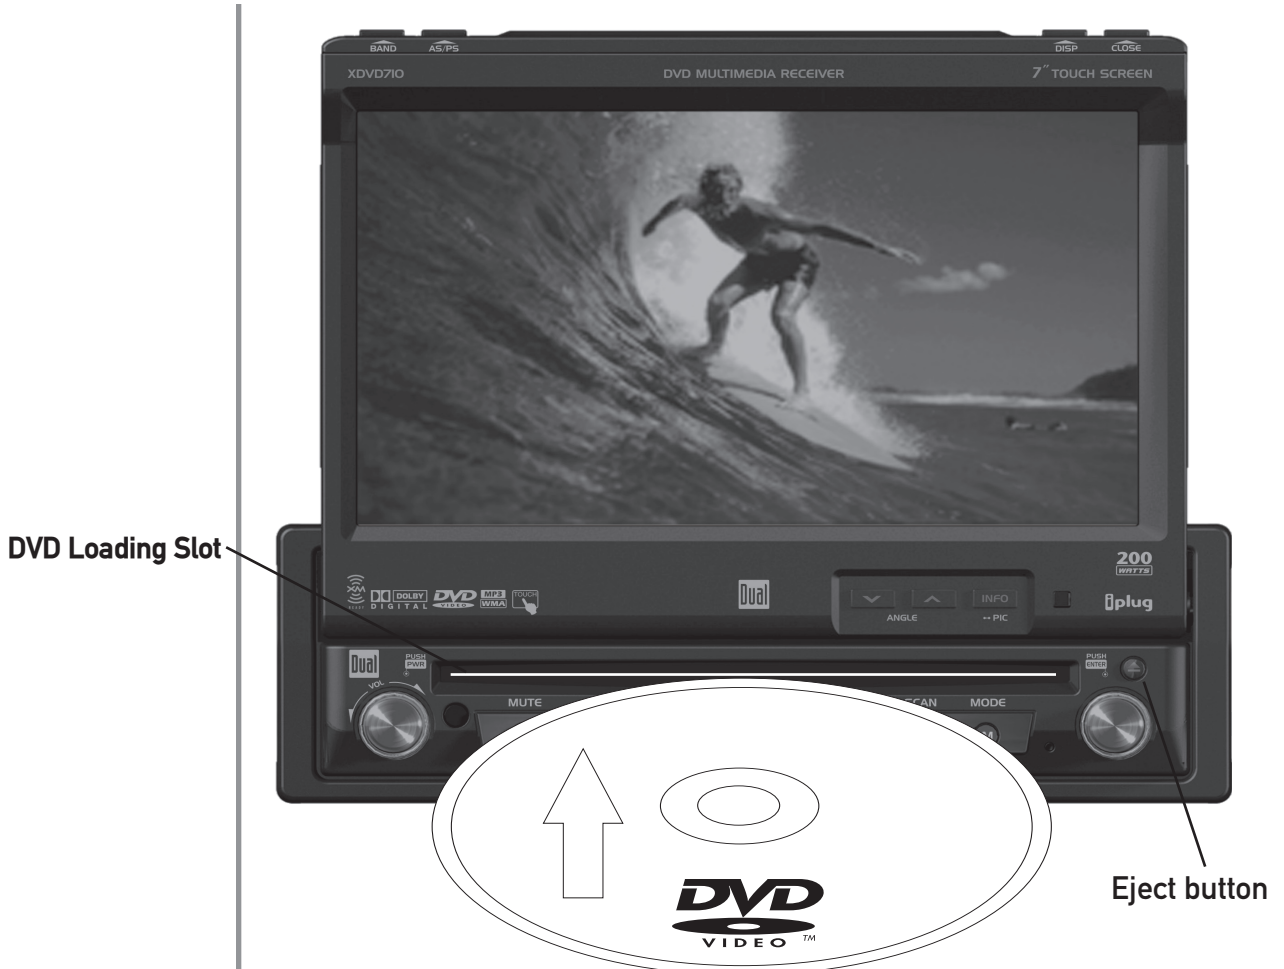

**Insert CD/DVD with label facing upwards**

### Inserting a Disc

When inserting a DVD disc, usually it will play automatically. Other sub-menus may have to be pressed to access the DVD movie/music content. Read the directions of your specific DVD disc for other features.

Note: If PARENTAL Lock is activated and the disc inserted is not authorized, a 4-digit code must be entered and/or the disc be authorized. See "RATING MENU" on page 42.

Note: Only one disc can be inserted at a time.

### Ejecting the Disc

Press the EJECT button.

### Resetting the Loading Mechanism

If the disc loads abnormally or an system error occurs, press and hold the eject button for 3 seconds to reset the loading mechanism. The disc will eject and normal operation should resume.

## DVD Operation - Touch Screen Controls

Hidden Touch Screen area while in TUNER mode

There are several hidden TOUCH SCREEN areas outlined below:

"A" area can be used in any mode to access MAIN menu



Hidden Touch Screen areas while in DVD mode

"A-F" areas can be used in DVD mode to access:

- A - Displays **MAIN** menu
- B - Displays **DVD** track information
- C - Selects **PREVIOUS** chapter
- D - Selects **NEXT** chapter
- E - Displays the full **DVD** transport controls
- F - **GOTO** search menu




# DVD Operation - Touch Screen Controls


## Using the hidden Touch Screen Controls

- A - Displays **MAIN** menu
- B - Displays **DVD** track information
- C - Selects **PREVIOUS** chapter
- D - Select **NEXT** chapter
- E - Displays the full **DVD** transport controls
- F - **GOTO** search menu


**Note:**  
A DVD disc must be inserted to access these functions and features.

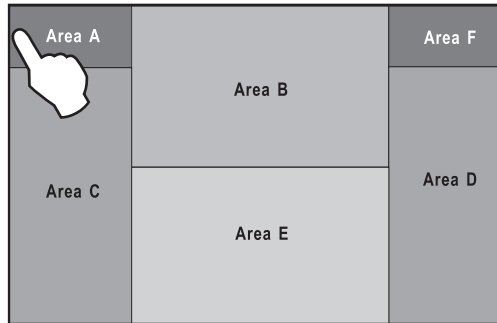


**AREA A**  
Access MAIN Menu

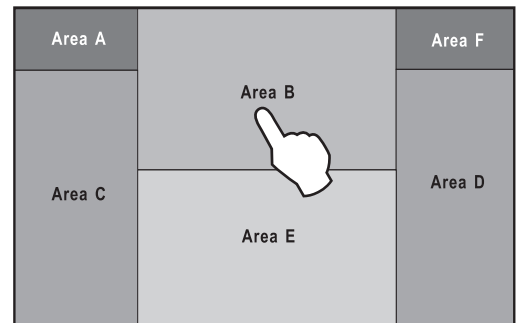


**AREA B**  
Displays Track Information

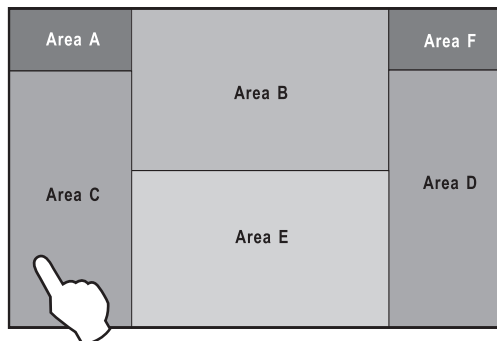


**AREA C**  
Selects PREVIOUS Track

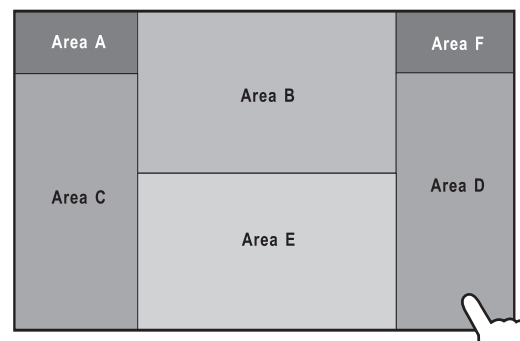

**AREA D**  
Selects NEXT Track

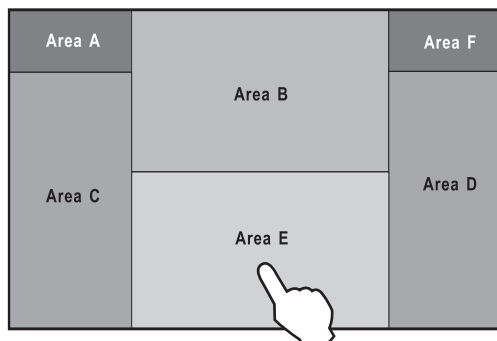

**AREA E**  
Full DVD Transport Controls

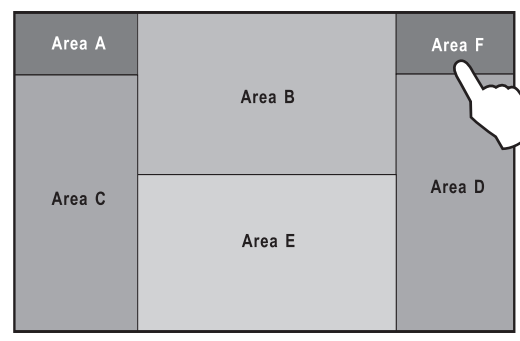


**AREA F**  
DVD Search


## DVD Operation - Touch Screen Controls

Using the hidden Touch Screen Controls

Touch AREA E

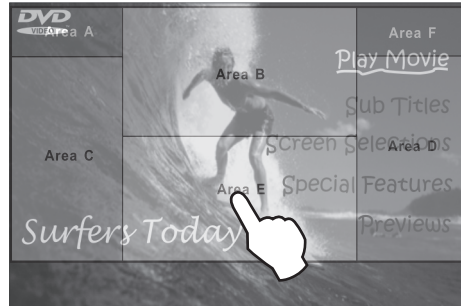

### DVD Transport Control OSD

 


- 1) Touch the **PLAY** button or on the front panel to resume disc playback
- 2) Touch the **PAUSE** button again to suspend the disc playback
- 3) Touch button to **STOP** playback, touch or ok on the remote to resume playback
- 4) Touch the **REVERSE** button to FAST REVERSE on DVD, 2x, 4x, 8x to 20x
- 5) Touch the **FORWARD** button to FAST FORWARD on DVD, 2x, 4x, 8x to 20x
- 6) Touch the **REPEAT** to scroll through the following:
  - DVD: Repeat Title, Repeat Chapter, Repeat Off
  - A) Use the A-B function to define a specific area of disc to repeat.  
Press the Repeat A-B button to set a start point of the (A) selection.
  - B) Press the A-B button again once you reach the desired end point (B) of the repeated section. The selected portion of the DVD will now repeat continuously.
  - C) Press A-B button once again to cancel the A-B selection and stop repeat playback.
- 7) Touch to change Audio language playback
- 8) Touch to change Subtitle of DVD
- 9) Touch to return to DVD MAIN menu

# DVD Operation - Searching a DVD

Searching a DVD

Searching by Time, Title or Chapter

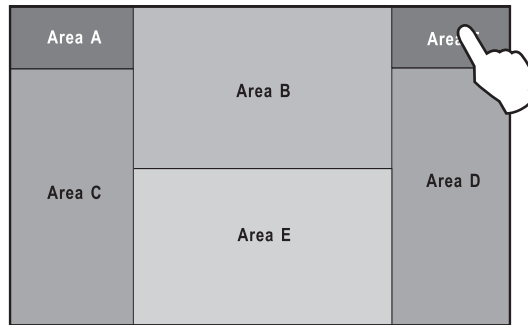

Touch the top right screen - AREA F

Search by TIME example

- 1) Touch the  in the TIME area
- 2) A touch keypad will now appear, enter your desired TIME to search
- 3) Press ok

Search	
Time	<input type="text" value="-- : -- : --"/>
Title/Chapter	<input type="text" value="--- / ---"/>



**Notes:**

Some DVD discs can be played only in certain playback modes according to the intentions of the software. As the XDVD710 plays discs according to their intentions, some functions may not work as intended. Please be sure to read the instructions provided with each disc.

## DVD Operation


### Direct Chapter / Track Selection

During DVD and CD playback, you can use the numeric keypad on the remote control to access tracks directly.


### Viewing an Alternate picture Angle (DVD only)

Some DVD's contain scenes that have been shot simultaneously from different angles. For discs recorded with multiple angles, press the ANGLE button on the remote control to toggle between available angles.

### Multi-Language Disc

If you are watching a disc recorded in multiple languages, press the AUDIO button on the remote control to choose your desired language. You can also touch AREA E and use the  button to change languages.

### Changing Subtitle Language

If you are watching a disc recorded in multiple languages with subtitles, press the SUB-T button on the remote control to choose your desired subtitle. You can also touch AREA E and use the  button to change subtitles.

### DVD Playback Information

During playback, press the INFO button on the remote control or touch AREA B to display the DVD playback information on screen.

The following information will be displayed:

### Playback Information

	②		⑤	⑦
①	③	④	⑥	
DVD VIDEO	T:4/16 C:1/20	00:01:35	USER ON	08:06

- 1) Indicates current source playing
- 2) Indicates the fourth of sixteen titles on the DVD is currently playing
- 3) Indicates the first of twenty chapters on the DVD is currently playing
- 4) Indicates the playback time of the current title
- 5) Indicates the USER defined EQ levels
- 6) Indicates the LOUD setting is on
- 7) Indicates the current time




# DVD Setup Menu - Language

## LANGUAGE Setup Menu

**Note:**  
A DVD disc must be inserted to access these functions and features.


With the monitor open in DVD mode, press the AREA A (top left screen) to display the MAIN menu. Press **DVD Setup** to access the DVD setup menu.

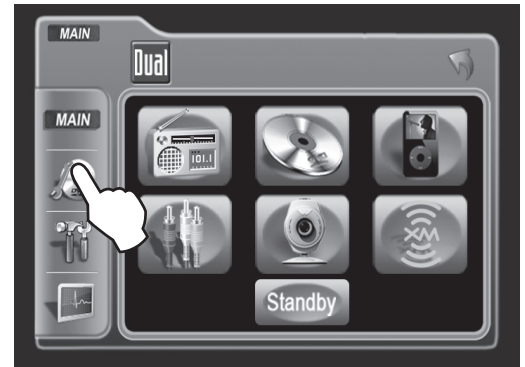

Press **LANGUAGE** icon to select **LANGUAGE** setup page

### Disc Subtitle


Press to select desired disc subtitle language

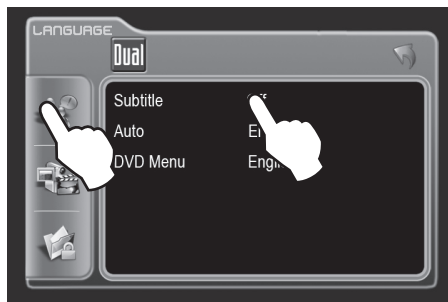

English  
French  
Spanish  
Auto  
Off = DEFAULT

### Audio Language


Press to select desired disc audio language

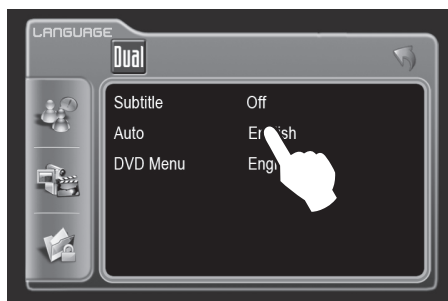

English = DEFAULT  
French  
Spanish

### DVD Menu

Press to select desired disc menu language

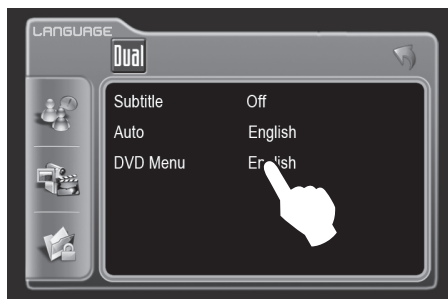

English = DEFAULT  
French  
Spanish


# DVD Setup Menu - Video

## Video Setup Menu

**Note:**

A DVD disc must be inserted to access these functions and features.


With the monitor open in DVD mode, press the AREA A (top left screen) to display the MAIN menu. Press **DVD Setup** to access the DVD setup menu.

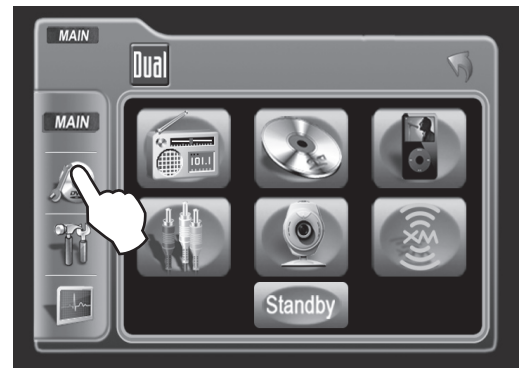


Press **VIDEO** icon to select from the following menus:

### TV Shape

Press to select desired TV shape

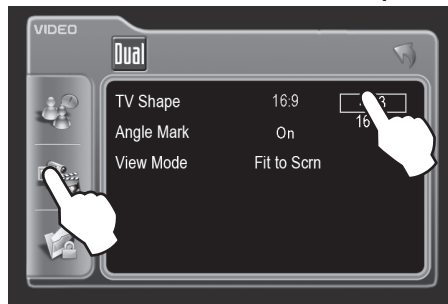


4:3  
16:9 = DEFAULT

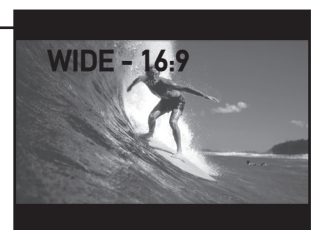

### Angle Mark


Select On to activate angle mark

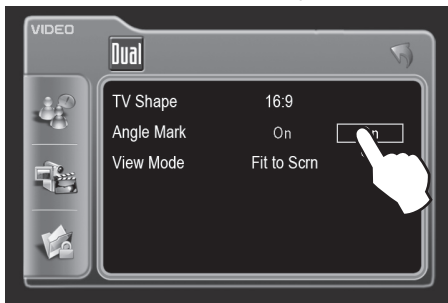

On = DEFAULT  
Off

### View Mode

Press to select desired view mode

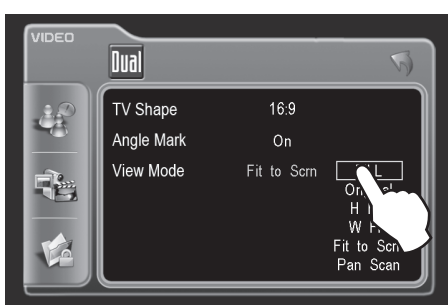

FILL  
Original  
H FIT  
W FIT  
FIT to Screen = DEFAULT  
Pan Scan

# DVD Setup Menu - Rating

## Rating Setup Menu

**Note:**  
A DVD disc must be inserted to access these functions and features.


With the monitor open in DVD mode, press the AREA A (top left screen) to display the MAIN menu. Press **DVD Setup** to access the DVD setup menu.



Press **RATING** icon to select from the following menus:

## Enable Parental Lock Password

Press ---- to enter a password, then press Ok

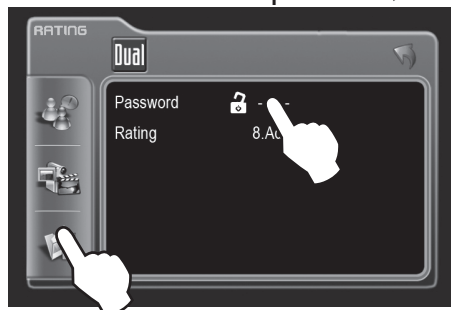


## Setting Parental Lock Password

1. Enter a 4-digit code
2. Write the code down
3. Save in a safe place

## Rating Setting

When unlock symbol is displayed, press current rating then select desired rating

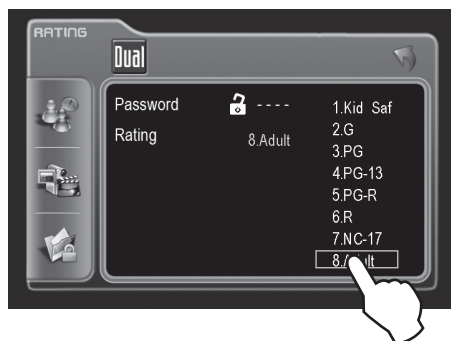


1. Kid Safe
2. G
3. PG
4. PG-13
5. PG-R
6. R
7. NC-17
8. Adult = DEFAULT

## Parental Password Override

In the event you forget or lose your PARENTAL LOCK password, enter 9991.

## CD Operation

### CD User Interface

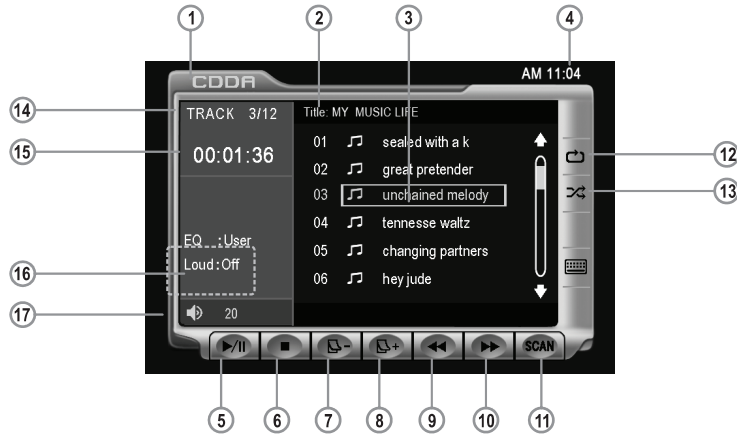

- 1) Current **MODE** information, touch upper left area to return to **MAIN MENU**
- 2) Disc title
- 3) Track title
- 4) Current **TIME**
- 5) Touch to **PLAY/PAUSE** disc playback
- 6) Touch to **STOP** disc playback
- 7) Touch to **PAGE** down
- 8) Touch to **PAGE** up
- 9) Touch to **FAST REVERSE** current track
- 10) Touch to **FAST FORWARD** current track
- 11) Touch to **SCAN** CD tracks for 10 seconds each track, touch again to deactivate
- 12) Touch to activate/deactivate **REPEAT**: Single mode
- 13) Touch to activate/deactivate **RANDOM** mode
- 14) Current track and total number of tracks on the disc
- 15) Elapsed playback time
- 16) Playback information
- 17) Volume indicator

# CD Operation

## Playing CD-DA discs

After inserting a CD disc, files will play in numerical order in the directory.



## Selecting by Keypad

Touch to display keypad. Enter desired track number and press ok.



## Selecting by Direct Track Access

Touch desired track for DIRECT TRACK access.




## Previous/Next Page

Touch to view UP/DOWN pages of available TRACKS.

## MP3/WMA Operation

### MP3/WMA User Interface

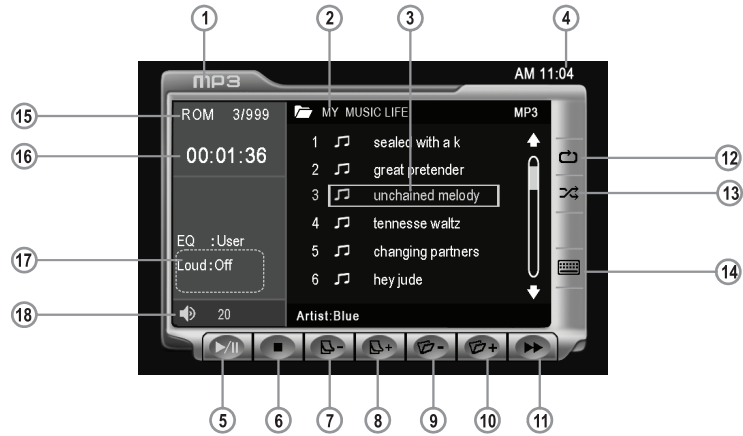

- 1) Current **MODE** information, touch upper left area to return to **MAIN MENU**
- 2) Disc title
- 3) Track title
- 4) Current **TIME**
- 5) Touch to **PLAY/PAUSE** disc playback
- 6) Touch to **STOP** disc playback
- 7) Touch to **PAGE** down
- 8) Touch to **PAGE** up
- 9) Touch to **PREVIOUS FOLDER**
- 10) Touch to **NEXT FOLDER**
- 11) Touch to **FAST FORWARD** MP3 tracks, touch **PLAY** to deactivate
- 12) Touch to activate/deactivate **REPEAT: Single** mode
- 13) Touch to activate/deactivate **RANDOM** mode
- 14) Touch to access the **DIRECT TRACK** access keypad
- 15) Current track and total number of tracks on the disc
- 16) Elapsed playback time
- 17) Playback information
- 18) Volume indicator

# MP3/WMA Operation

## Playing MP3/WMA files

After inserting an MP3/WMA disc, files will play in numerical order in the directory.



## Selecting by Single Track

Touch to display keypad. Enter desired track number and press ok.



## Selecting by Direct Track Access

Touch desired track for DIRECT TRACK access.



## Previous/Next Page

Touch to view UP/DOWN pages of available TRACKS.



## Media Compatibility

### Media Compatibility

The following types of discs/files are compatible:

- CD-ROM (ISO), CD-R, CD-RW, DVD+R/RW, DVD-R/RW
- CD-DA, DVD Video
- MP3 data
- WMA data

The following types of discs/files are not compatible:

- WMA files that are protected by DRM (Digital Rights Management)
- WMA lossless format
- Discs recorded with Track At Once or packet writing
- MP3 PRO format
- MP3 playlists
- WAV format
- WMV format
- JPG format
- DivX format
- AVI format
- MPG format

Some recordable DVDs and CDs may be incompatible with this unit, depending on media type and recording method.

### Playback Order

MP3/WMA playback sequence is based on recorded order of files and begins in the root folder of the disc. Any empty folders or folders that do not include MP3/WMA files are skipped. This unit may not play files in the order they were recorded in. Refer to your recording software's user's manual for more information.

### Compatible Recording Formats

- ISO9660 level 1
- ISO9660 level 2
- Yellow Book MODE 1
- Yellow Book MODE 2 FORM 1
- Multi session
- Maximum files - 1500
- Maximum folder levels - 8
- MPEG-1/2 Audio Layer-3

ISO9660 standards:

- Maximum nested folder depth is 8 (including the root folder).
- Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and “\_” (underscore). Some characters may not be displayed correctly, depending on the character type.
- This device can play back discs in Joliet and other standards that conform to ISO9660. MP3/WMA written in the formats other than the above may not play and/or their file names or folder names may not be displayed properly.



## Media Compatibility

### Additional MP3/WMA Information

An internal buffer provides ESP (Electronic Skip Protection) to virtually eliminate skipping.

When playing a disc recorded with regular audio files (CD-DA or .WAV) and MP3/WMA files, the unit will play the MP3/WMA files only.

Only MP3 files with filename extension (.mp3) can be played.  
Only WMA files with filename extension (.wma) can be played.

Do not attempt to play discs which contain non-MP3/WMA files with the MP3/WMA extension.

### Sampling Frequency Rates

**MP3** 32kHz ~ 48kHz

**WMA** 32kHz ~ 48kHz

### Transfer Bit rates

**MP3** 40kbps ~ 320kbps constant  
Variable bit rates

**WMA** 40kbps ~ 192kbps constant  
Variable bit rates

#### Note:

Some files may not play or be displayed correctly, depending on sampling rates and bit rates.


### Recommended Settings

For best results, use the following settings when burning an MP3 disc:  
128kbps or higher constant bit rate  
44.1kHz or higher sampling frequency

For best results, use the following settings when burning a WMA disc:  
64kbps or higher constant bit rate  
44kHz or higher sampling frequency

## iPod Operation (Optional)

### iPod User Interface

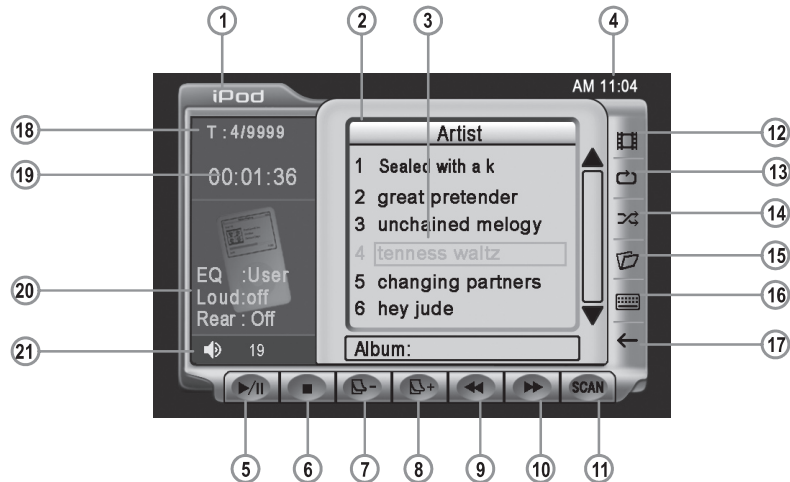

- 1) Current **MODE** information, touch upper left area to return to **MAIN MENU**
- 2) Artist name
- 3) Track title
- 4) Current **TIME**
- 5) Touch to **PLAY/PAUSE** iPod playback
- 6) Touch to **STOP** iPod playback
- 7) Touch to **PAGE** down
- 8) Touch to **PAGE** up
- 9) Touch to **FAST REVERSE** current song
- 10) Touch to **FAST FORWARD** current song
- 11) Touch to **SCAN SONGS** for 10 seconds each, touch again to deactivate
- 12) Touch to wait for iPod **VIDEO** or **PHOTO**, touch again to resume iPod music
- 13) Touch to activate/deactivate **REPEAT**: Single mode
- 14) Touch to activate/deactivate **SHUFFLE** mode
- 15) Touch to access main iPod directory
- 16) Touch to access **DIRECT SONG** access keypad
- 17) Touch to return to the previous menu page
- 18) Current song and total number of songs on the iPod
- 19) Elapsed playback time
- 20) Playback information
- 21) Volume indicator

# iPod Operation (Optional)

## Playing iPod files

To select iPod mode, press the **MODE** button on the front panel, remote control, or press the iPod icon on the **MAIN** menu.

After connecting an iPod, files will play in numerical order in the directory.



## Selecting by Keypad

Touch to display keypad. Enter desired song number and press ok.



## Selecting by Direct Song Access

Touch desired song for **DIRECT SONG** access.



## Previous/Next Page

Touch to view **UP/DOWN** pages of available **SONGS**.


## iPod Operation (Optional)

### Playing photo or video files from iPod


**Notes:**

**VIDEO/PHOTO FILES** are only compatible with G5 iPod.

The iPod photo/video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. iPod photo/video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.

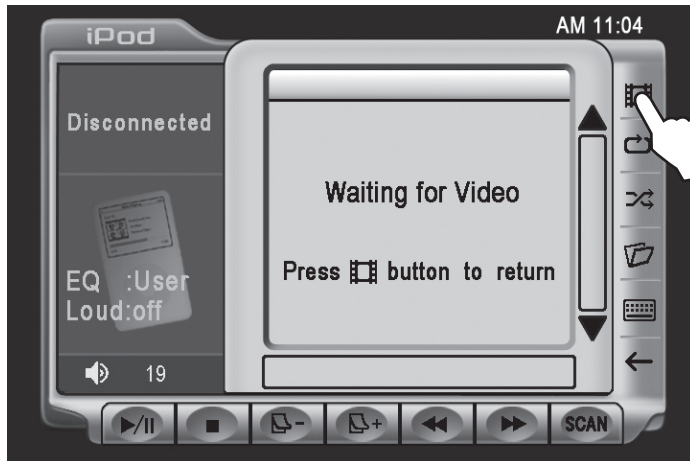

- Touch **VIDEO** icon, iPod is now disconnected and waiting for video signal.
- Make sure **VIDEO OUTPUT** is turned on in your iPod. Consult your iPod owner's manual for details
- Press **PLAY** on your iPod, photos or video should now appear on the TFT.

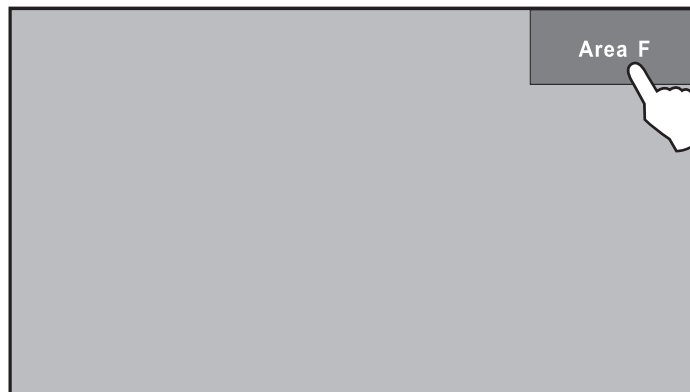

### Releasing Video control from iPod

- Touch **AREA F** (upper right screen) to reconnect iPod to play music again.

iPod will now reconnect



## iPod Operation (Optional)

### Selecting Music By:

Playlist  
Artist  
Album  
Genre  
Song




Touch desired Folder, music will begin to play after selection.

### Rapid Dial

**RAPID DIAL** can also control iPod touch screen functions

- Select desired item by rotating clockwise or counter-clockwise
- Item will be outlined in blue
- Press to confirm/ENTER

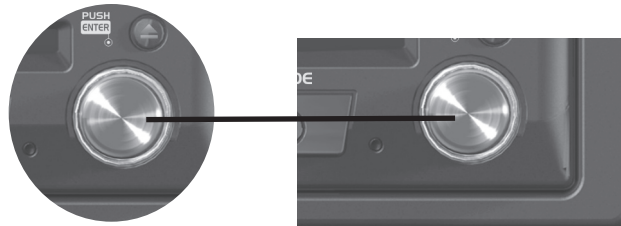

### Character Support

Only alphanumeric characters can be displayed (ASCII type).

Artist Name and Album name will only be displayed if included with the song.

### iPod Compatibility

The following models are supported:

- Third generation iPod - Version 2.3
- Fourth generation iPod - Version 3.1.1
- Fifth generation iPod - Version 1.1.2
- iPod Photo - Version 1.2.1
- iPod Mini - Version 1.4.1
- iPod Nano - Version 1.2.0

Refer to your iPod instruction manual for details on how to obtain the latest software.

## XM Activation (Optional)

### Activating Your XM Tuner (when connected)

1. Press **MODE** to select XM Radio.
2. Verify channel 1 (XM Preview Channel) is playing.
3. Select Channel 0. The XM tuners' eight character Radio ID number will appear on the XDVD710 display.
4. Record the number here for future reference:

--	--	--	--	--	--	--	--

5. Activate your XM Satellite Radio service by logging on to <http://www.xmradio.com/activation> or call 1-800-967-2346.

**Note:** You will need to keep your XDVD710 turned on for at least one hour after requesting activation to receive the full channel line-up.

## XM Radio Operation





- 1) XM Mode indicator
- 2) XM Antenna signal strength meter
- 3) Song Name
- 4) **PRESET** page up button
- 5) **DIRECT Channel** entry keypad
- 6) **PRESET** page down button
- 7) XM Station **SCAN**
- 8) **CATEGORY** Channel up
- 9) **CATEGORY** Channel down
- 10) Increment **Channel** up
- 11) Increment **Channel** down
- 12) **CATEGORY** selection
- 13) XM band selection
- 14) Song Title
- 15) Volume Indicator
- 16) **CATEGORY** Name
- 17) Station Name
- 18) **XM** Band indicator

# XM Radio Operation (Optional)

## Tuning Modes


Touch  to select between XM, XM1, XM2 and XM3 bands.

## Channel Selection


Touch   momentarily to select the next available channel.


## Storing and Recalling Preset Channels

Up to 48 XM channels can be stored. To store a channel, select XM1, XM2 or XM3 band and the desired channel. Press and hold the desired channel name for more than 2 seconds. When stored, the channel name will be highlighted by a box and the channel information will appear on the TFT display. The preset channel can be recalled anytime by pressing the corresponding channel name.

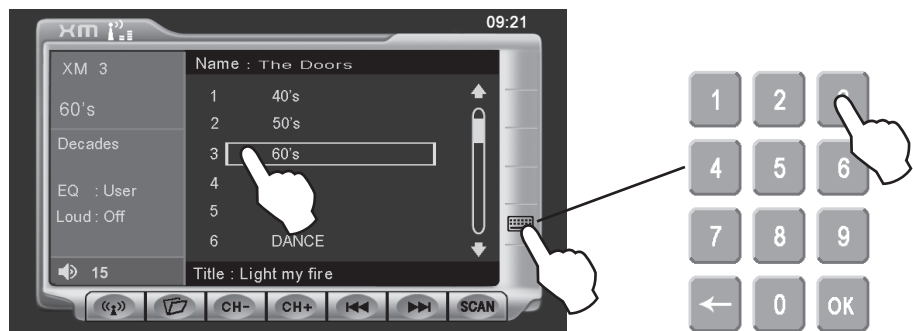

## Direct Channel Selection

Touch  to select XM DIRECT channel entry. Enter the desired channel using the keypad buttons 1-0, then press ok to confirm the selected channel. If the channel is not available, the current channel will be retained.

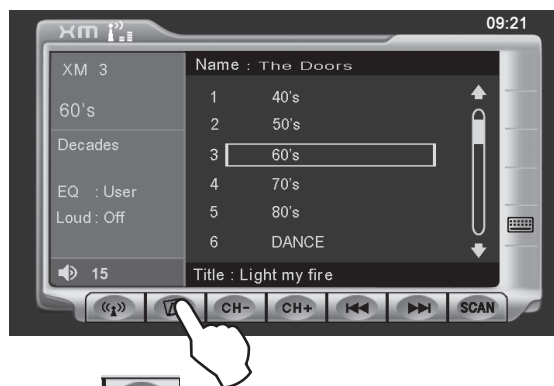



## Channel Search by Category

Touch  once to display the category list.

Touch desired **CATEGORY**.

## Quick Select of Category

Touch   momentarily to select the next available channel within the selected **CATEGORY**.

To exit **CATEGORY** mode, touch the  button to resume normal **XM CHANNEL** selections.



## XDVD710 WARRANTY

# Limited One Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

**Who is covered?** This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A.

**What is covered?** This warranty covers all defects in material and workmanship in this product. The following are not covered: installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

### What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
  - Call us toll-free at 1-866-382-5476
  - E-mail us at [cs@dualav.com](mailto:cs@dualav.com)

**Exclusion of Certain Damages:** This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.



# Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuse	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
Unit has audio (but no video)	Parking brake safety circuit not connected Parking brake not applied	Check connections at parking brake Apply parking brake
	No video display (when in reverse)	Reverse circuit not connected Vehicle is not in reverse
DVD does not start playback	Physical defect in media Wrong region	Check media for scratches Use discs labeled "Region 1" or "All" only.
IR remote does not work	Dead battery	Replace battery
Excessive skipping	Unit is not mounted correctly	Check mounting sleeve
	Physical defect in media	Check media for scratches
Bad Disc appears on display	Focus error or disc is in upside down	Press eject or RESET
Incorrect Region Code appears on display	Region code error	Use only DVDs labeled "Region 1" or "All" only.
Front panel will not open/close	Front panel obstructed	Remove the obstacle and press <b>OPEN</b> again to resume the monitor open/close sequence.

## XM Radio

Problem	Cause	Action
You can not receive any XM channels	Your XM Radio receiver is not activated	Contact XM as described on page 53
You can not tune into a specific XM channel	You may not be authorized to receive that channel	Verify your subscription with XM Contact XM as described on page 53
No Signal appears on display	The XM signal is blocked	Move vehicle from obstructed area (such as inside a tunnel or a garage)
	This message may appear when driving inside a tunnel or under obstacles	Make sure the antenna has a clear view of the sky
Check Antenna appears on display	The XM antenna is not connected The antenna cable is damaged	Check XM antenna connection Check for pinched or cut antenna cable
OFF AIR appears on display	The selected channel is not in service	Try another channel
No song title or artist name is displayed	This information may not be available for some music channels, news channels, or when there is no song playing	This condition is normal, there is nothing wrong with your receiver

## Specifications

<b>DVD Player</b>	Frequency response: <b>10Hz-20kHz</b> Channel separation @ 1kHz: <b>&gt;65dB</b> D/A converter: <b>24 Bit</b>
<b>FM Tuner</b>	Tuning range: <b>87.5MHz-107.9MHz</b> Usable sensitivity: <b>8.5dBf</b> 50dB quieting sensitivity: <b>10dBf</b> Stereo separation @ 1kHz: <b>40dB</b> Frequency response: <b>30Hz-13kHz</b>
<b>AM Tuner</b>	Tuning range: <b>530kHz-1710kHz</b> Usable sensitivity: <b>22uV</b> Frequency response: <b>30Hz-2.2kHz</b>
<b>Monitor</b>	Panel size: <b>7" (177.8 mm) diagonal measurement</b> View angle (up/down/left/right): <b>30/60/60/60</b> Resolution: <b>480 W x 234 H</b> Brightness (cd/m <sup>2</sup> ): <b>350</b> Contrast ratio: <b>300:1</b> Elements: <b>336,960</b>
<b>General</b>	Operating voltage: <b>11-16 VDC, negative ground</b> Speaker output impedance: <b>4~8 ohms</b> Line output voltage: <b>2 Volts</b> Line output impedance: <b>200 ohms</b> Chassis dimensions: <b>7" x 7" x 2"</b> <b>(178 x 178 x 51 mm)</b>

Design and specifications subject to change without notice.



CEA-2006 Power Standard Specifications  
(reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)

Power Output: 17 Watts RMS x 4 channels at 4 ohms and  $\leq 1\%$  THD+N  
Signal to Noise Ratio: 80dBA (reference: 1 watt into 4 ohms)



Dual Electronics Corp.  
Toll Free: 1-866-382-5476

[www.dualav.com](http://www.dualav.com)  
©2006 Dual Electronics Corp. All rights reserved.  
NSA1106-V02.5  
Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>