

Thank you for choosing a COBY MP3 player!



- ~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.
- ~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)


If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website

www.microsoft.com/windows/windowsmedia/player/download/download.aspx

AUDIO TRANSFER – Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

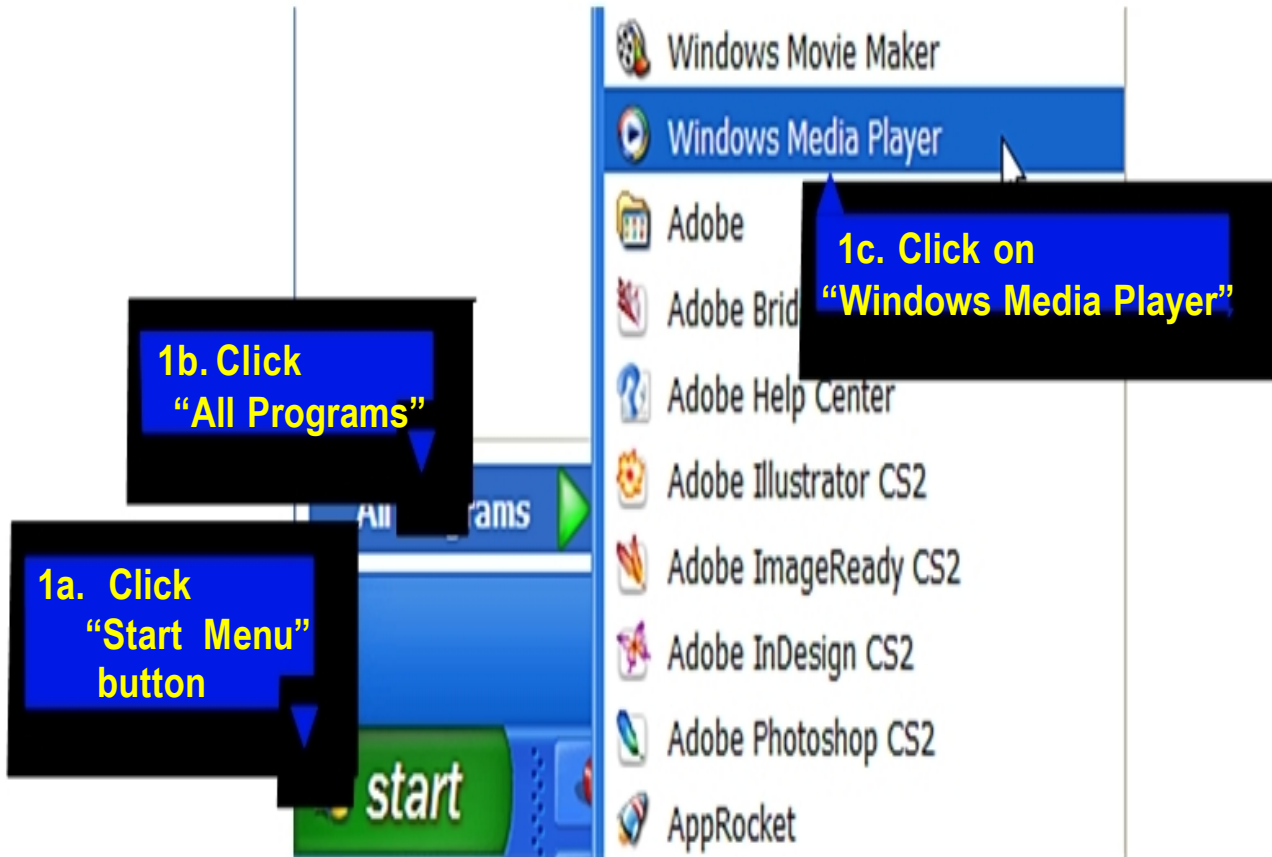

2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the **“Rip”** tab and select which “Title” to rip.
To rip the entire album, check all of the check



The screenshot shows the Windows Media Player interface with the 'Rip' tab selected. The album 'Coming Home (D:)' is displayed, and a list of 11 songs is shown with checkboxes for selection. The 'Rip Status' for all songs is 'Stopped'.

Album	Title	Length	Rip Status	Contributing Artist	Composer		
Coming Home (D:)							
Audio CD (D:)							
	Coming Home	1	I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	2	Sweet Vacation	3:54	Lionel Richie	Lionel Ri...		
Soul and R&B	3	Why	4:01	Lionel Richie	Chuckii ...		
2006	4	What You Are	4:12	Lionel Richie	Jermain...		
☆☆☆☆☆	5	Up All Night	3:36	Lionel Richie	Chuckii ...		
	6	I'm Coming Home	4:18	Lionel Richie	Chuckii ...		
	7	All Around the World	3:34	Lionel Richie	Lionel Ri...		
	8	Out of My Head	3:15	Lionel Richie	Lionel Ri...		
	9	Reason to Believe	4:46	Lionel Richie	Dallas A...		
	10	Stand Down	4:02	Lionel Richie	Dallas A...		
	11	I Love You	4:12	Lionel Richie	Lionel Ri...		

3) Set the Rip Options (optional).

Click the **Rip** button to set the Rip options. The recommended Rip settings are:


- ✧ Select "Format > mp3"
- ✧ Select "Bit Rate > 128 Kbps"
- ✧ Select "More Options" to change the directory to which WMP saves your ripped music files. WMP will save your music to your "My Documents > My Music" folder by default.



4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA

- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > My Music” folder by default.

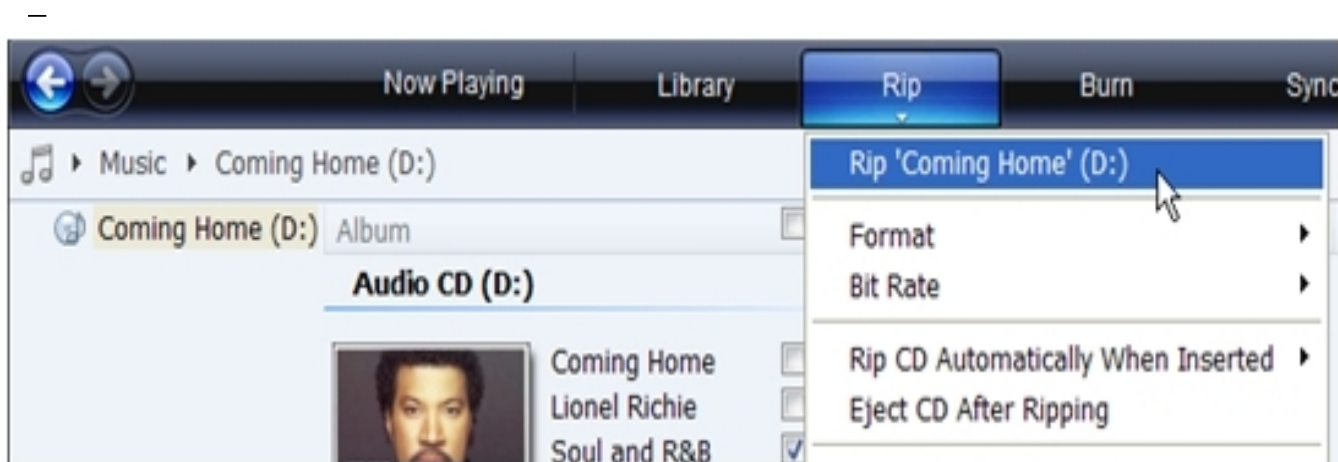

Transfer MP3/WMA Files to Your COBY Player




Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

✦ WMP11 will detect your COBY player automatically.

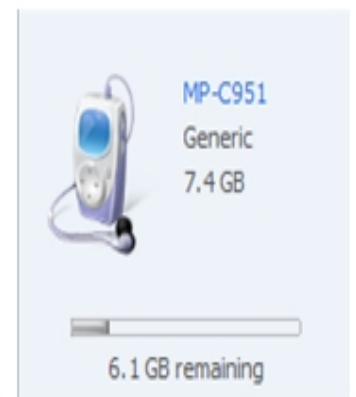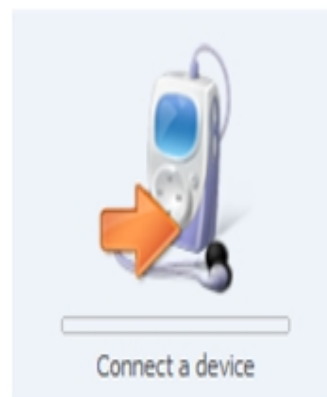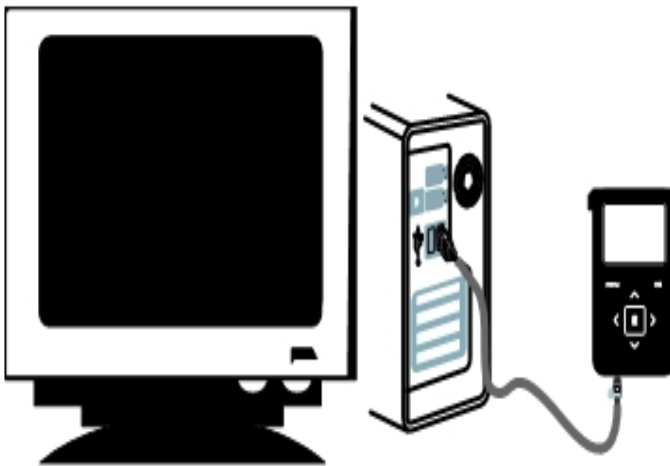

3) Browse your music library to choose songs to sync.

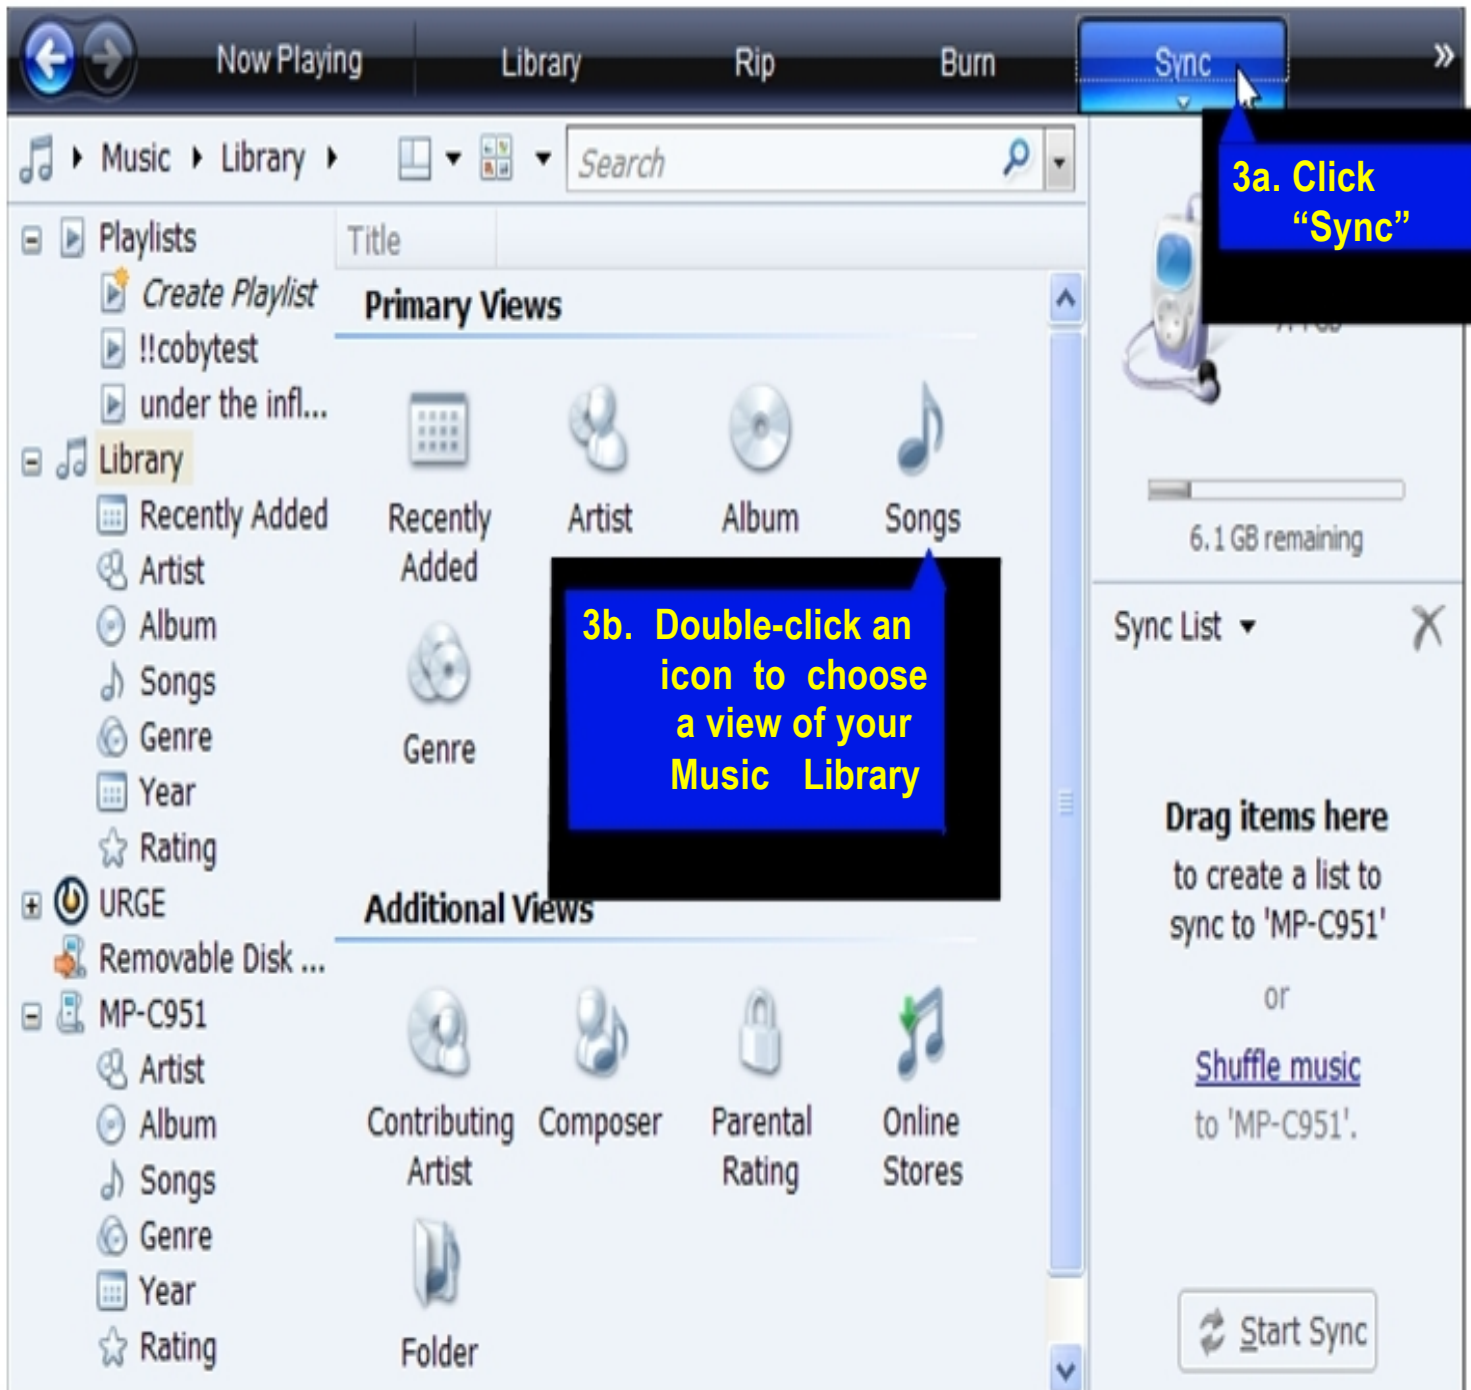

4) Select songs to sync to your COBY player.

The screenshot shows the iTunes 'Sync' window. At the top, there are tabs for 'Library', 'Rip', 'Burn', and 'Sync'. The search bar contains the text 'lion'. Below the search bar, there are sections for 'Albums' (listing 'Germes', 'Media Bl...', 'Germes', 'Punk') and 'Lionel Richie' (listing 'Coming Home', 'Lionel Richie', 'Soul And R&B'). A list of songs is displayed, with several tracks selected: 'Sweet Vacation', 'Why', 'What You Are', 'Up All Night', 'I'm Coming Home', 'All Around the World', 'Out of My Head', 'Reason to Believe', and 'Stand Down'. On the right side, a device 'MP-C951' is shown with '7.4 GB' of space. Below the device is a 'Sync List' containing tracks like 'Many Rivers To Cross', 'Homeland and Hip Hop', 'Damaged Goods', 'Two-Headed Boy', '05 - 53rd & 3rd - Ram...', 'The Illest (ft. Jean Gra...', 'Hater's Anthem - Jean ...', 'Hustler's Ambition', 'Holla (Ft. Dr.Dre)', 'Mos Def & Talib Kwel', 'Revolution 909 - Daft', and 'Daft Punk Is Playing A'. At the bottom right, there is a 'Start Sync' button with a circular arrow icon.

4a. Type in the Search bar to quickly find a song.


4b. Click on a track to select it for synchronization. To select multiple tracks, hold the CTRL or SHIFT and click on the tracks.

4c. Drag the selected tracks here to add them to the Sync List.

4d. Click "Start Sync" to transfer the Sync List to your COBY player.

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

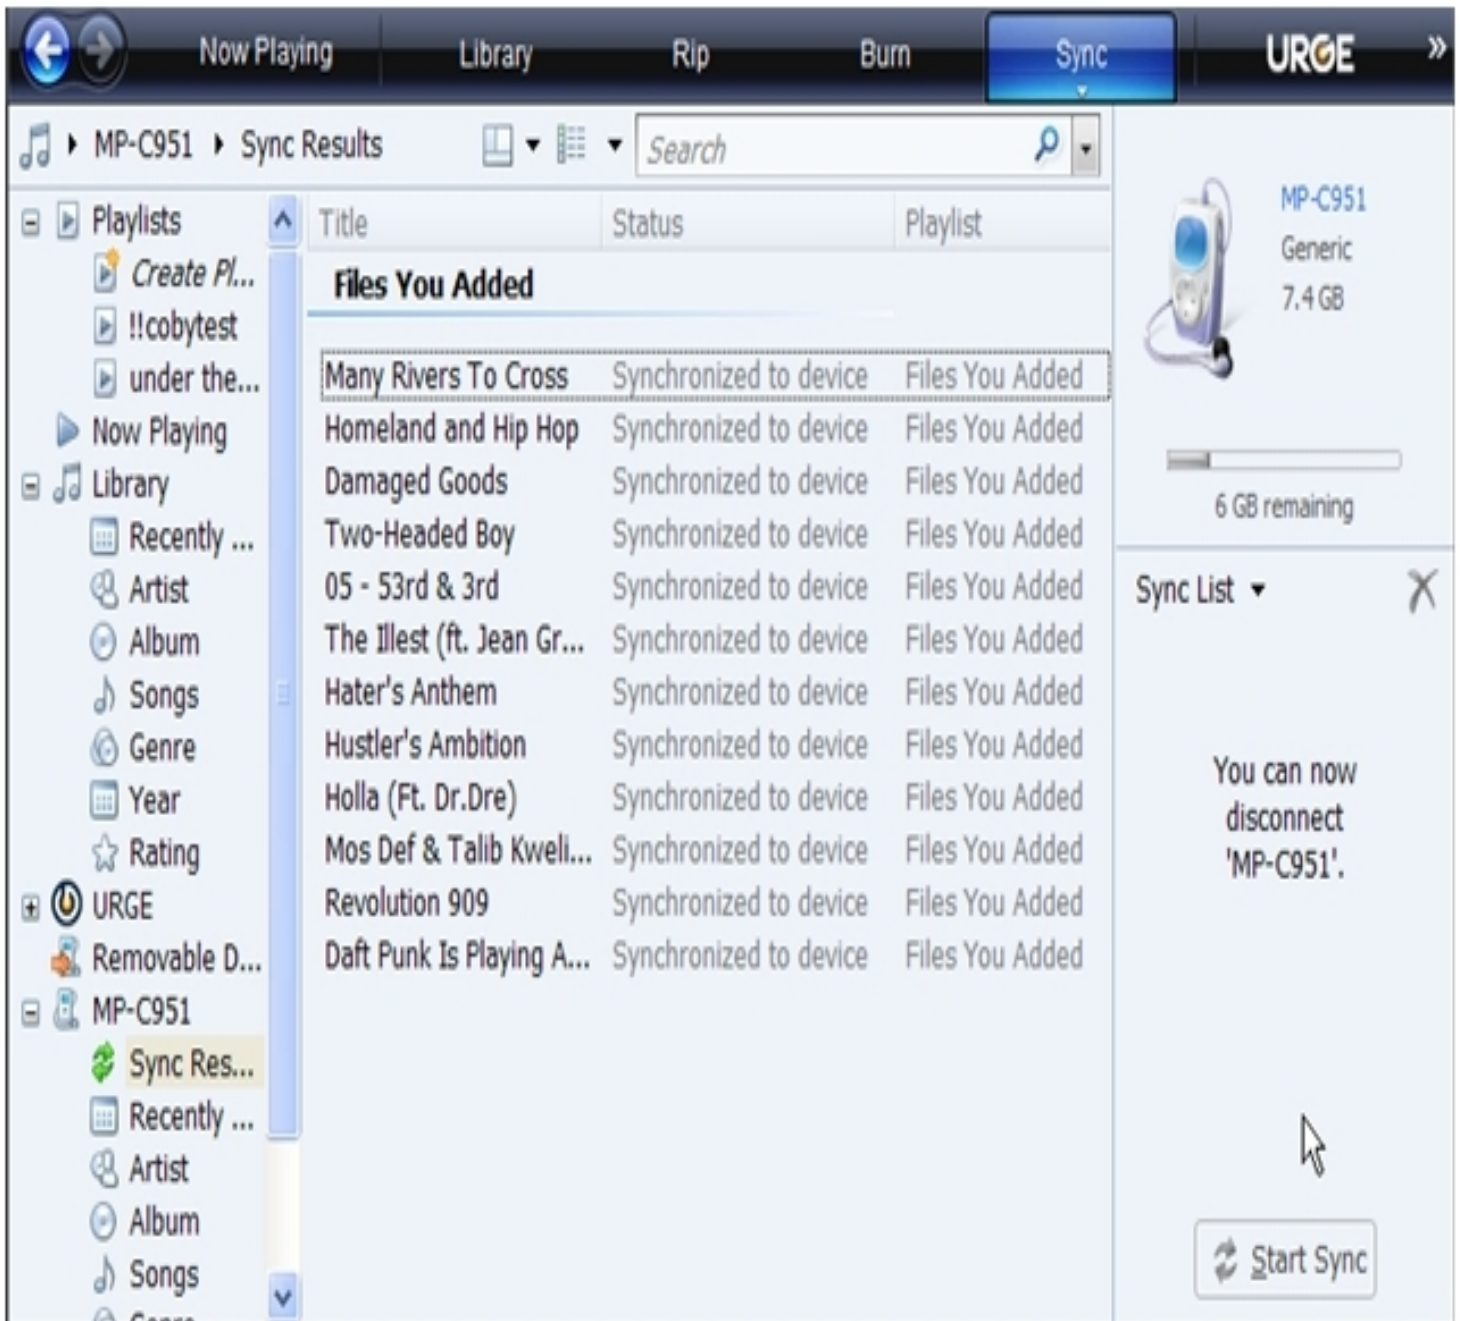

The screenshot shows the iTunes interface during a sync process. The top navigation bar includes 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync' (which is highlighted). The main window title is 'MP-C951 Sync Results'. On the left, a sidebar shows a tree view with 'MP-C951' selected, containing sub-items like 'Sync Res...' and 'Recently ...'. The central pane displays a table of 'Files You Added' with columns for Title, Status, and Playlist. The right pane shows a device icon for 'MP-C951', a 'Generic' device with '7.4 GB' capacity, a progress bar, and a '6 GB remaining' indicator. Below this, there is a 'Sync List' section with a close button (X) and a message: 'You can now disconnect 'MP-C951''. At the bottom right, there is a 'Start Sync' button.

Title	Status	Playlist
Files You Added		
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

VIDEO TRANSFER – Getting Started

Converting your VIDEO files and transferring it into your player.

Install the Conversion Utility

1. Insert the driver CD
2. Copy the “MTVVideoConverter_Ver1.12.11.3” folder.
3. Paste the “MTVVideoConverter_Ver1.12.11.3” folder on your desktop.

Run the Conversion Utility

1. On your desktop, open the MTVVideoConverter_Ver1.12.11.3 folder.
2. Double click on the “VideoConvert” camera icon.
3. The program will initialize.

Converting Video (see diagram below)

- 1.a** Find and Select the video files to convert in the INPUT Video field.
- 1.b** Select the directory where you want to save the converted file.
- 1.c** Start the conversion process

When the conversion is completed, copy and paste or drag and drop the converted files to your MP3 player MOVIE DIR folder.


Done!!

0 min: 0 sec 3 min: 36 sec

Time Selection to Convert

Volume


→ 0 min 0 sec ← 3 min 36 sec Mute

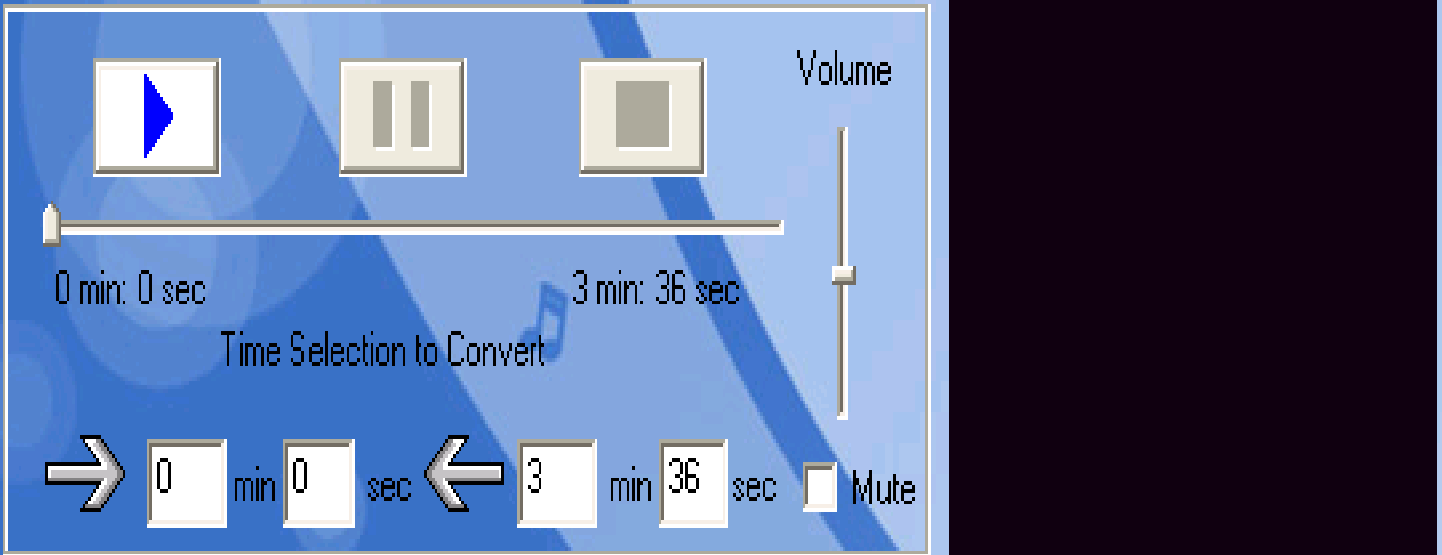

Help Video Input: C:\Documents and Settings\Mike\Desktop\FOX\Shakira Feat Wycle

Input Video **1.a** Music Input

Video Output: C:\Documents and Settings\Mike\Desktop\FOX\ **1.b**

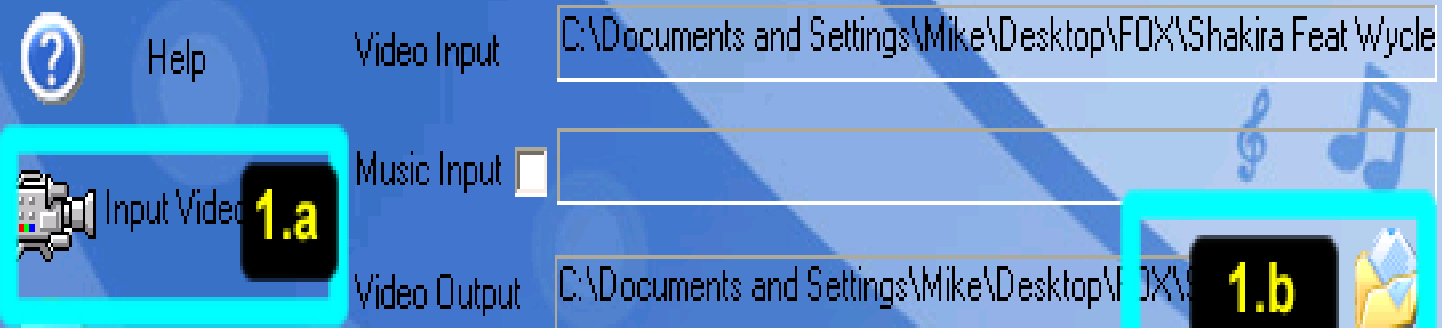

Input Music

MTV Preview

Start Conversion **1.c**

Cancel Conversion

Conversion Status: 0%

Output Frame Size


- 96X64
- 128X96
- 128X128
- 160X112
- 160X128
- 176X144
- 208X176
- Cut Image

Output Frame Rate

- Sports Video
- Animated Video
- Quick Slide Show (5fps)
- Photo Slide Show (1fps)
- Enhanced

Output Audio Quality

- Good
- Normal

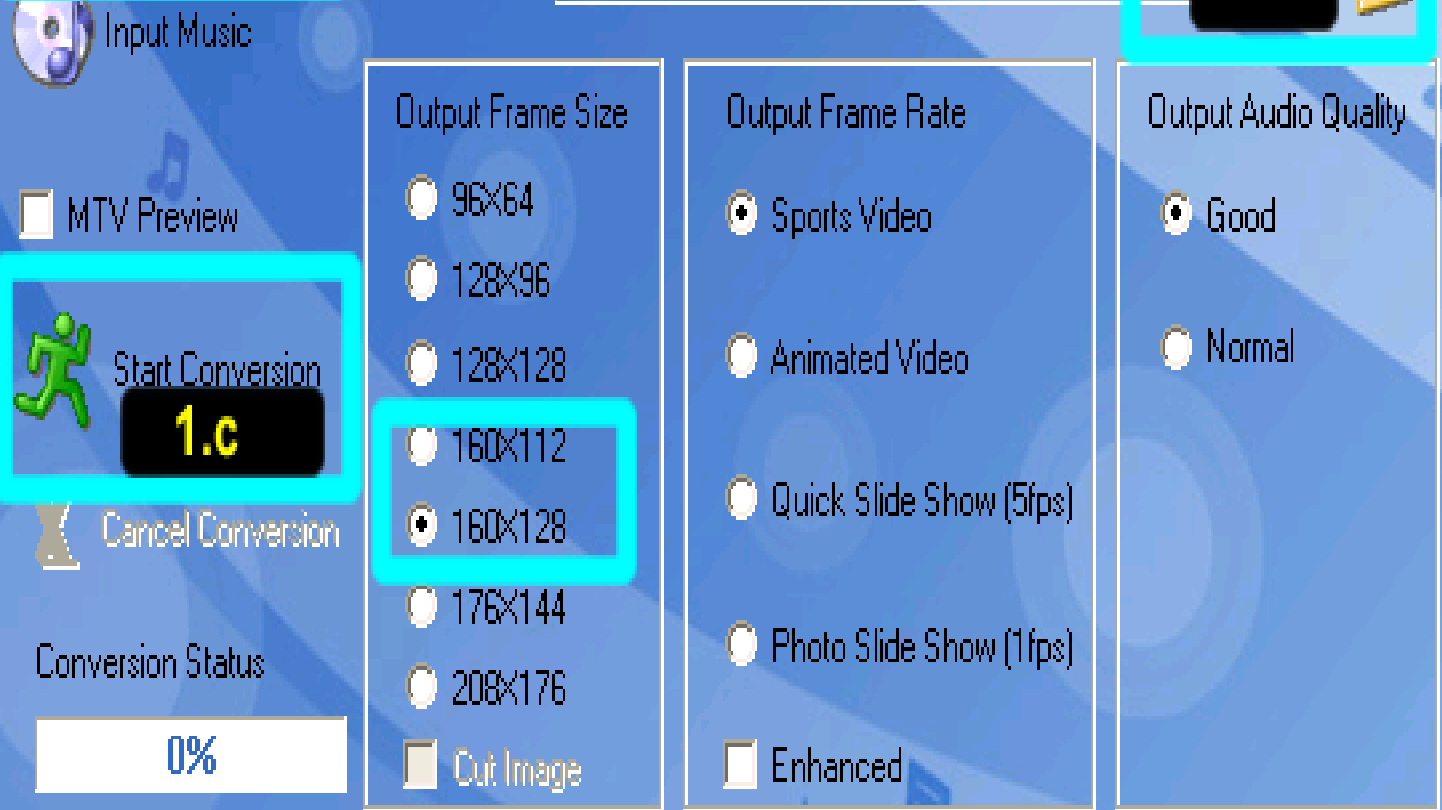

Common Troubleshooting

Problems	Possible Solutions
No Power	<ul style="list-style-type: none"> *Ensure that the "HOLD" button is turned off. *The Battery level may be too low. Charge the unit. *Reset the unit by inserting a pin on the back of the unit "Reset" hole.
Music does NOT Play or Freezes	<ul style="list-style-type: none"> *Unknown Format (WMA with DRM). *The file(s) are corrupted or damaged. *Unsupported file format (ACC, WAV, M4A...Etc.)
No Sound after file transfer	<ul style="list-style-type: none"> *Ensure that the original file plays on your computer. If not, then you will need to obtain the codec for that file. *Unsupported format.
Video Conversion Error	<ul style="list-style-type: none"> *Ensure that the original file plays on your computer. If not, then you will need to obtain the codec for that file. *Unsupported format.
Video Issues	<ul style="list-style-type: none"> *Make sure that you are using the correct output frame size and the correct output frame rate. *For the best output frame size, set the MTV Video Converter to 160X128 or 160X112 @ 15fps (sports Video).
Computer does NOT recognized the MP3 player	<ul style="list-style-type: none"> *Check the connections. *Switch USB ports or DO NOT use a USB extension cable. *Go into the player "Setup" and change the USB mode to either MTP to MSC or MSC to MTP.

If you are still having difficulty with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at

customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>