

**The
Weather
Channel**

TM

Power Failure Flashlight

User's Manual



www.ExcaliburElectronics.com

Model No.: H639S-WC

Download from Www.Somanuals.com. All Manuals Search And Download.

Congratulations on your purchase of The Weather Channel® Power Failure Flashlight. Plug this unit into the wall and when you need it most, it is charged and ready to work for you.

Please read this manual thoroughly, especially noting safety and care instructions.

Keep this manual for reference.

Charging the Unit

1. Slide the pivoting handle 90 degrees to expose the polarized plug.
2. Plug the flashlight into an electrical outlet to begin charging.

Note: After a 24-hour charging period the flashlight will provide approximately 40 minutes of power.

Using the Flashlight

- Slide the ON switch up to turn the light on.

Note: The Weather Channel® Power Failure Flashlight will activate on its own while charging in the event of a power failure.

Replacing the Bulb

1. Remove screw from side of light housing.
2. Turn the light housing counter-clockwise to remove.
3. Replace the bulb inside with a new bulb, making sure that the new bulb is same type and wattage as old bulb (See Important Safety Warnings for bulb information).
4. Replace light housing and screw in tightly.

Replacing the Rechargeable Batteries


1. Remove screw from side of light housing.

2. Turn the light housing counter-clockwise to remove.
3. Remove screw on the inside of the unit and take out the battery compartment. Replace batteries with AA 1.2V 600mAh NiCd batteries.
4. Replace battery compartment and screw in tightly.
5. Replace light housing and screw in tightly.

Note: See diagram on following page for further help on replacing the bulb or rechargeable batteries.

Safety and Care

- Avoid rough handling such as bumping or dropping.
- Do not submerge the unit in water or other liquids.
- Avoid excessive humidity, moisture, and extreme temperatures. For best results, store the unit between the temperatures of 39° F and 100° F (4° C and 38° C).
- Clean using only a damp cloth. Do not use any chemicals or solvents.
- To maintain a bright beam of light, use a damp cloth with mild soap and water to clean the transparent bulb cover.

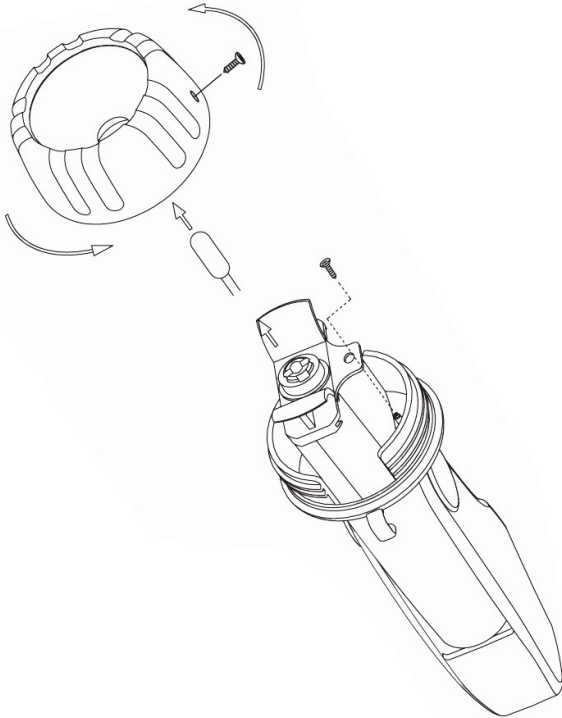

Important Safety Warnings

When using this electric appliance, basic precautions should always be followed, including the following:

- This unit is intended for household use only.
- To reduce risk of injury, do not allow children to plug or unplug the unit without adult supervision.
- To reduce risk of electric shock, do not place or store the unit where it can fall or be pulled into a tub or sink.
- Always unplug before replacing the bulb or batteries.
- Replace bulb with same type rated 1.73 watts (2.4V 0.72A).

Excalibur Electronics, Inc. reserves the right to make technical changes without notice in the interest of progress.

90-DAY LIMITED WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or

consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516
www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

**Excalibur Electronics, Inc.
13755 SW 119th Avenue
Miami, Florida 33186**

**Phone: 305.477.8080
Fax: 305.477.9516**

**Please Visit Us At:
www.ExcaliburElectronics.com**

H639S-WC PowFailFlash 050107 v2

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>