




Snuggle-Kins™

Parts

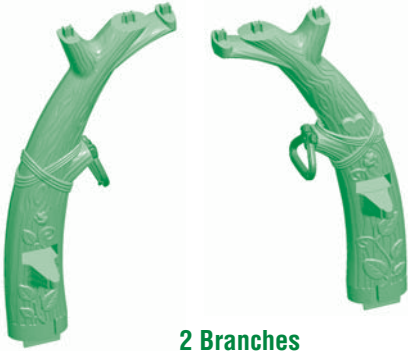

2 Branches



Baby Monkey
(with removable diaper and headband)



2 Bases



Base Connector



Treetop



 
Soft Cradle



2 Trays



Pacifier






**#6 x 1/2" Screw - 6
Shown Actual Size**

Note: Tighten or loosen all screws
with a Phillips screwdriver.
Do not over-tighten the screws.

Battery Installation

Hint: When sounds, lights or motion become faint or stop, it's time for an adult to change the batteries. We recommend using **alkaline** batteries for longer battery life.

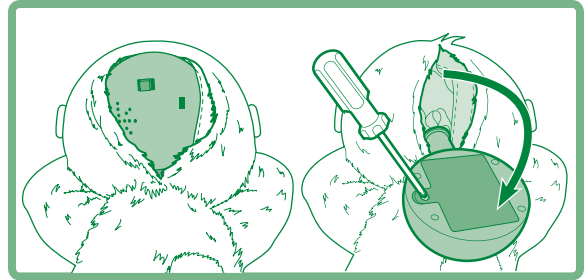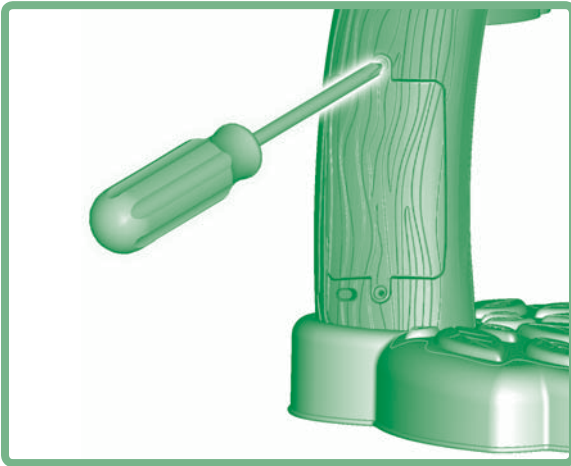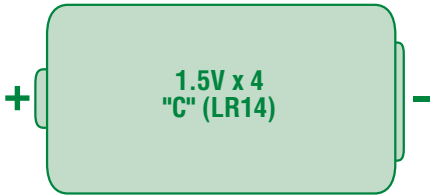

- Locate the battery compartment on the back.
- Loosen the screws in the battery compartment door. Remove the battery compartment door.
- Insert four "C" (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.

- Open the fasteners on the back of the toy.
- Rotate the sound box out of the toy to access the battery compartment.
- Loosen the screw in the battery compartment door. Remove the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- Fit the sound box back into the toy and close the fasteners.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).


Assembly

CAUTION


This product contains small parts in its unassembled state. Adult assembly is required. Take extra care during unpacking and assembly.

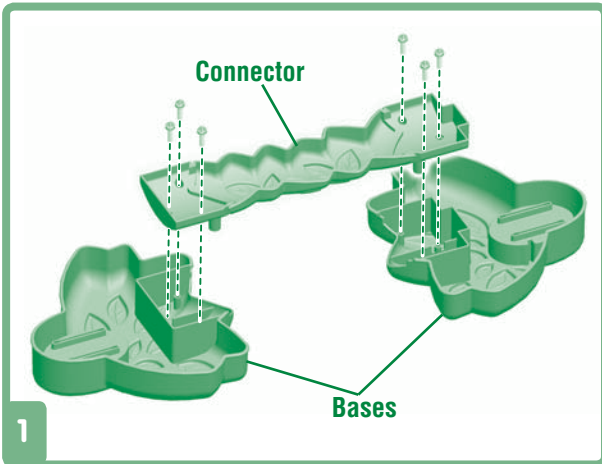

- Set the bases on a flat surface with the open sides facing up.
- Fit the connector, open side up, onto the bases.
- Insert six screws into the connector and tighten.

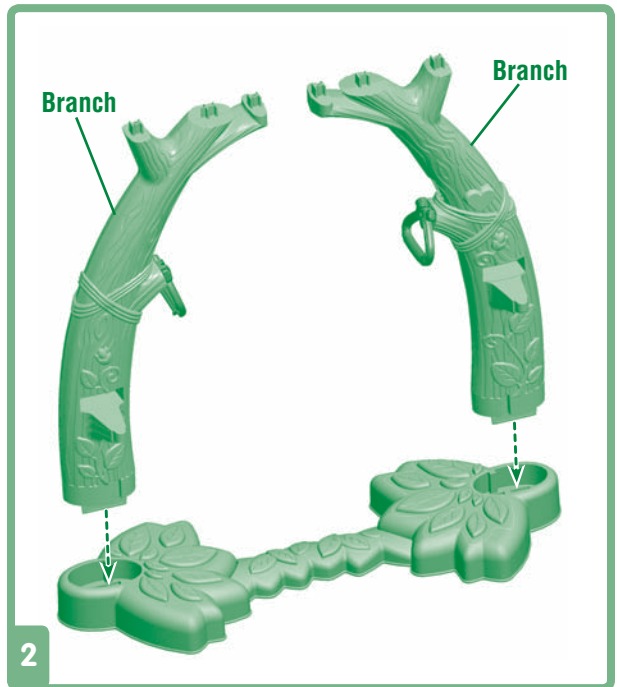

- "Snap" the branches into the base.

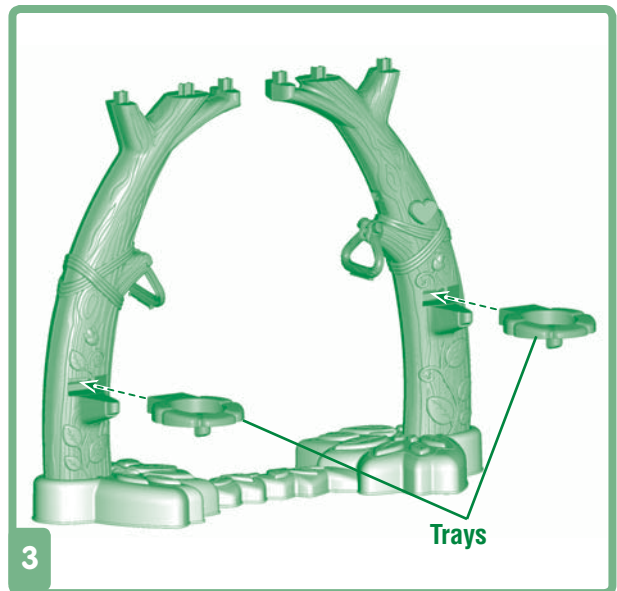

- "Snap" the trays into the slots in the branches.

Assembly



- Position the treetop so that the Fisher-Price® logo is above the trays.
- Press the treetop onto the branches to **"snap"** in place.



- Wrap the straps on the ends of the soft cradle through and around the handles on the branches. Press the straps to fasten.

Rock Baby to Sleep with Music, Sounds and Lights!



- Open the fasteners on the back of the baby monkey to access the sound box.
- Slide the power switch **on** ● and then close the fasteners.
- Slide the power switch on the branch **on** ● .
- Place baby monkey in the soft cradle and watch her eyes close as she coos.
- Give baby monkey the pacifier to hear realistic sounds.
- Rock the cradle and the mobile flower opens while lights twinkle and music plays.
- Press the heart button on the branch for music only.
- When you are finished playing with this toy, slide both power switches off ○ .

Consumer Information

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Requires four "C" (LR14) **alkaline** batteries and three "AAA" (LR03) **alkaline** batteries required for operation (batteries not included).
- Tool required for assembly: Phillips screwdriver (not included).

Visit us on line at
www.service.fisher-price.com

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 9 AM - 7 PM Monday through Friday and 11 AM - 5 PM Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

For countries outside the United States:

CANADA Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

© 2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Care

Soft Cradle, Diaper and Headband

- Machine wash inside a pillow case in cold water on the gentle cycle. Do not use bleach. Line dry.

Monkey, Pacifier and Tree Assembly

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

K9703pr-0920

PRINTED IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>