

# Muskoka®



## ELECTRIC FIREPLACE MANTEL

with hidden storage  
compartments

## MANTEAU DU FOYER ÉLECTRIQUE

avec compartiments de  
rangement cachés

## REPISA DEL HOGAR ELÉCTRICO

compartimientos escond  
dos para almacenaje




Model / Modèle / Modelo: MM284SOK / MM284SCH

## Assembly Instructions Instructions d'assemblage Instrucciones de ensamblado

## TIPS FOR ASSEMBLY OF YOUR NEW MANTEL

- Before you begin assembly, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.
- A helping hand is always good: assemble your mantel with an adult assistant if possible. Some pieces are heavy and will need to be held by a helper. Assembly time will be approximately 30-60 minutes.
- Locate a good Phillips-head screwdriver. You may also use an electric screwdriver but be careful not to strip the head of the screw by over tightening them.
- After you assemble your mantel, if you find you have interference between the door and the hearth please see Step 6 of these installation instructions for the solution.


**NOTE: 284SOK = Oak Finish, 284SCH = Cherry Finish**

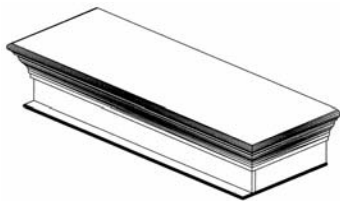

**TOP 1PC**  
284SOK.14/284SCH.14



 **BASE 1PC**  
284SOK.01/284SCH.01



**LEFT SIDE PANEL (EXTERIOR) 1PC**  
284SOK.02/284SCH.02



 
**RIGHT SIDE PANEL (EXTERIOR) 1PC**  
284SOK.03/284SCH.03




**LEFT SIDE PANEL (INTERIOR) 1PC**  
284SOK.03/284SCH.03



**RIGHT SIDE PANEL (INTERIOR) 1PC**  
284SOK.05/284SCH.05



 **TOP SHELF 2PCS**  
284SOK.06/284SCH.06




**BASE SHELF 2PCS**  
284SOK.07/284SCH.07



**CENTER PANEL 1PC**  
284SOK.09/284SCH.09



 **LOWER CENTER PANEL 1PC**  
284SOK.10/284SCH.10



**FIREBOX SHELF 1PC**  
284SOK.11/284SCH.11




**BACK PANEL 2PCS**  
284SOK.08/  
284SCH.08




**LEFT DOOR 1PC**  
284SOK.12/  
284SCH.12



**RIGHT DOOR 1PC**  
284SOK.13/  
284SCH.13

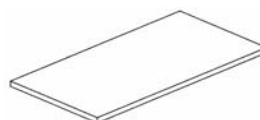

**SHELF 8PCS**  
284SOK.15/284SCH.15

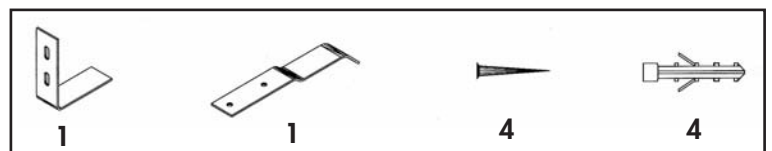


**ANTI-TIP DEVICE 2 SETS**

# GET READY TO START

Before assembly, use scissors to unwrap the parts from the packaging. DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware bag which is red and located inside the packaging taped to the top box. Be sure you DO NOT discard any pieces.


## Step 1

Locate the hearth and place it on the floor. Do not put it up against the wall at this point in the assembly as you need to get in behind the mantel to insert several screws.

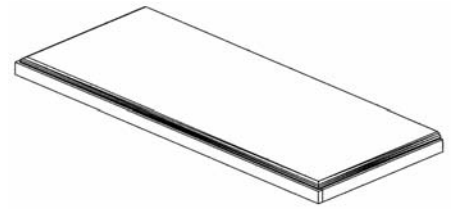

## Step 2

Locate the 2 base shelves. Standing in front of the hearth, place them with the finished side up on the bottom of the left and right side hidden storage compartments.

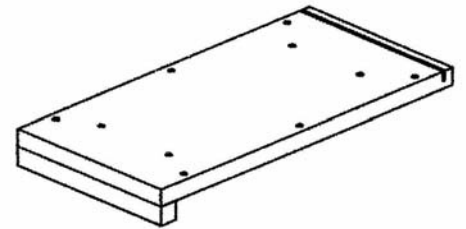

## Step 3

Locate the left inside and left outside wall panels, the back panel and the top panel for the left hidden storage compartment.

Locate the bag of plastic shelf supports. Insert 8 supports into the holes on the inside of both the inside and outside wall panels.

NOTE: It is much easier to do this step before you have built the hidden storage compartments.

Now position both the inside and outside wall panels so that the bottom fits underneath the base shelf. Slide the back panel (finished side inside the compartment) between the side panels ensuring that the back panel stays in position within the grooves on both side panels. Get your helper to hold the panels snugly in place while you insert the 6 bottom screws which will hold the sides and back in position.



Position the top shelf in place. Ensure the compartment back is fitted into the groove on the top shelf. Get your helper to apply pressure to the side to eliminate any gaps while you insert and tighten the top 6 screws. You are now ready to insert the 4 shelves onto the shelf supports to complete the storage compartment.

## Step 4

Repeat Step 3, but with the right inside and right outside wall panels.



## Step 5

Locate the center panel that will be attached to the left and right storage compartments and will sit above the firebox. Position it with the finished side facing the front of the mantel. Insert and tighten the 4 screws which will hold the center panel in place. Locate the lower center panel and place it on the hearth with the finished side facing the front. Insert the 2 screws which will hold it into place.

### CAUTION

DO NOT USE AN ELECTRIC DRILL TO INSERT THESE SCREWS. A POWER DRILL CAN DRIVE THE SCREWS THROUGH THE FACE OF THIS PANEL THIS SHOULD NOT HAPPEN WITH A MANUAL SCREWDRIVER. BE CAREFUL..

## Step 6


Place the firebox shelf between the storage compartments and slide it into position so that it sits flush with the lower center panel.

## Step 7

You are now ready to install the doors on the right and left side storage compartments. Locate the left door. The hinge bracket for this door is already attached to the hinge located inside the left compartment (it came installed). Get your helper to hold the door in position while you insert and tighten the 2 screws in each of the hinges. Repeat for the right side door. You can level the doors by releasing or tightening the tension on the leveling screw on each hinge (see picture for location) and realigning the door so it is level from the front.

## Step 8

Get your helper and locate the top of your mantel. This top is very heavy. It will take 2 people to lift and position it in place. Ensure the top goes over the positioning guide located on the header. The top must go over this guide to be positioned correctly. Once the top is in place insert and tighten the 6 screws.

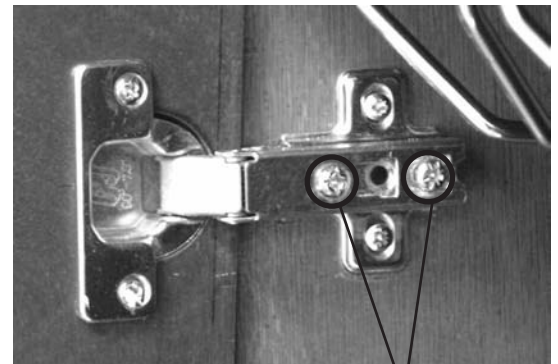

Leveling screws



## Step 9

Take your electric firebox out of its packaging and position it between the 2 legs of the mantel.

The firebox comes with 3 metal brackets and 20 black screws. These metal brackets must be attached to both the sides of the firebox and the mantel to ensure that your firebox does not move around as you use it. Two of the brackets have 2 large holes on one side. These large holes line up with 2 screws on the side of the firebox. The other screws provided must be inserted into the holes at the other end of the bracket and into the firebox. The other side of each bracket attaches to the mantel.

The third bracket has no holes on one side. That side should go up against the firebox but should not be attached as the heater sits right underneath the bracket. Only the mantel side should be attached. Once you are close to the wall, plug the firebox into the nearest outlet.

If you have any questions about the firebox please reference the installation instructions that come with the unit. Please reference the Quick Tips section of that instruction manual.



## Step 10

You are now ready to position your mantel against the wall. This step requires 2 people to move the unit.

### Anti-tipping device

At this point you must attach the anti-tipping device to your mantel and your wall. This device is a safety feature that will prevent your mantel from tipping over if a weight is applied which can unbalance the unit (like a child climbing onto it).



# WARRANTY

Greenway Home Products is pleased to offer in home warranty repairs.

## DO NOT RETURN THIS PRODUCT TO THE STORE:

Please contact Customer Service at: **1-866-253-0447**

web: **www.greenwayhp.com**

email: **support@greenwayhp.com**

**Canada:** 400 Southgate Dr., Guelph, Ontario, Canada, N1G 4P5

**USA:** 6507 Fairfield Dr., Northwood, Ohio, USA, 43619

## Limited Warranty Definitions:

|                                       |  |
|---------------------------------------|--|
| Greenway Home Products:<br>(Greenway) | Manufacturer.  |
| Mantel:                               | Mantel manufactured by Greenway Home Products.   |
| Purchaser:                            | Purchaser of the Mantel  |
| Distributor:                          | Facility authorized to sell Greenway Home Products.  |
| Warranty Card                         | Greenway Home Products Limited Warranty Registration Card identifying the Purchaser and product model. |

## Greenway Limited Warranty:

Greenway warrants to the Purchaser that the Mantel is free from defects in material and workmanship, under normal use and service, for 1 year (1 year limited parts) from the date of purchase.

All warranty repairs must be preauthorized by Greenway Home Products. Greenway will, at its option, replace or repair free of charge any defective part, which the Purchaser shall notify their Distributor or Greenway Home Products within the warranty period. The obligation of Greenway Home Products under this warranty, is expressly limited to such replacement or repairs.

## The provisions of this limited warranty shall not apply to the following:

1. Accidents.
2. Unauthorized repairs or alterations.
3. Normal maintenance.
4. Changes made to other units manufactured after this mantel was manufactured.
5. Incidental damages caused by failure of the mantel such as inconvenience or loss of use.
6. Improper installation.

The provisions of this limited warranty shall not apply to deterioration due to wear and exposure beyond the following limitations:

1. For 180 days from the date of purchase for exterior finished surfaces.

Due to the properties of natural wood, Greenway Home Products makes no warranty against mineraling of wood components.

**Greenway Limited Warranty is void unless the following conditions are adhered to:**

1. Warranty registration must be completed and returned to Greenway Home Products.
2. All warranty repairs must be preauthorized by Greenway repair facility.
3. Greenway reserves the right to inspect defective parts that have been replaced under warranty. Dealer is expected to hold defective parts for 60 days.
4. Only parts and accessories and other material, available through Greenway Home Products are to be used in the performance of warranty service.
5. Purchasers are responsible for presenting/notifying their Distributor as soon a problem exists. The warranty repairs should be completed in a reasonable amount of time from the date of authorization. Not to exceed 30 days past notification.

This limited warranty is expressly in lieu of any other expressed or implied warranty, including any implied warranty or merchantability or fitness for a particular purpose and of any obligations or liabilities on Greenway Home Products which neither assumes nor authorizes any other person to assume for it any other liability in connection with the Mantel manufactured by it.

The warranty is null and void if used in commercial or industrial applications.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>