

# Wireless Multi-Function Access Point

A02-AP-W54



## Quick Start Guide

A02-AP-W54\_GE01



## Wireless Multi-Function Access Point

### ENGLISH

This product is covered by Atlantis Land 3 years **Fast-Swap** warranty. For more detailed informations please refer to the web site [www.atlantis-land.com](http://www.atlantis-land.com).

For more detailed instructions on configuring and using the Switch , please refer to the online manual.

### ITALIANO

Questo prodotto è coperto da garanzia Atlantis Land **Fast-Swap** della durata di 3 anni. Per maggiori dettagli in merito o per accedere alla documentazione completa in Italiano fare riferimento al CD Rom o al sito [www.atlantis-land.com](http://www.atlantis-land.com).

### FRANCAIS

Ce produit est couvert par une garantie Atlantis Land **Fast-Swap** de 3 ans. Pour des informations plus détaillées, référez-vous svp au site Web [www.atlantis-land.com](http://www.atlantis-land.com).

Le manuel complet en Francais est disponible dans le CD Rom ou sur le WEB.

### DEUTSCH

Dieses Produkt ist durch die Atlantis Land 3 Jahre **Fast-Swap** Garantie gedeckt. Für weitere Informationen, beziehen Sie sich bitte auf Web Site [www.atlantis-land.com](http://www.atlantis-land.com).

### ESPAÑOL

Este producto está cubierto de garantía Atlantis Land **Fast-Swap** por 3 años. Para una información más detallada, se refiera por favor al Web site [www.atlantis-land.com](http://www.atlantis-land.com).



## Wireless Multi-Function Access Point



where solutions begin

**Register your product!**

**[www.atlantis-land.com](http://www.atlantis-land.com)**

Registration on the web site **[www.atlantis-land.com](http://www.atlantis-land.com)** within 15 days from the purchase of the product dismiss the customer from showing a valid proof of purchase (Sale Receipt or Invoice) in case of the request of intervention. For further information we invite you to look at our web site at the section **WARRANTY**.



## Wireless Multi-Function Access Point

Congratulations on your purchase of this IEEE 802.11g Wireless Multi-Function Access Point.

For more detailed instructions on configuring and using the Wireless Multi-Function Access Point, please refer to the online manual.

### **1.1 An Overview**

The device for a total freedom of movement without losing the connection. Easy to be installed and fast and flexible, with Wireless Multi-Function Access Point there is no more obligation for a fixed working place: you can easily work or navigate for fun from your own garden or in different rooms of your office, always in wireless connection.

The Roaming function gives you a complete freedom of movement and two or more Wireless Multi-Function Access Point can serve wireless also large headquarters.

A pair of Wireless Multi-Function APs operating under Bridge mode to act as the bridge that connect two Ethernet networks or Ethernet enabled clients together. Repeat Mode is able to extend the effective range and coverage of the wireless network.

Thanks to advanced security functions which are integrated and thanks to the throughput of the protocol IEEE802.11G you are going to have a fast and flexible wireless net, hacker safe.

The chipsets fully support Wi-Fi Protected Access (WPA) and the IEEE 802.11i draft security standards in hardware and high-speed encryption engines with no performance degradation.

Last, but not least, this product implements Intersil Nitro GT™ capabilities to deliver up to a 3x improvement in throughput for 802.11g clients operating in mixed-mode wireless networks, and up to 50 percent greater throughput performance in 802.11g only networks.



## Wireless Multi-Function Access Point

### 1.2 System Requirements

Before installing the Adapter, your PC should meet the following:

- Intel® Pentium®III 600Mhz or compatible processor with TCP/IP stack
- Internet Explorer V6.0 on Netscape V6.0
- CD Rom

### 1.3 Package Contents

Unpack the package and check all the items carefully. If any item contained is damaged or missing, please contact your local dealer as soon as possible. Also, keep the box and packing materials in case you need to ship the unit in the future. The package should contain the following items:

- Wireless Multi-Function Access Point
- CD Rom with Manuals (English, Italian and French) and Quick Start Guide
- Quick Start Guide (English)
- Cable CAT5 LAN
- AC-DC Adapter (5V DC@1,2A)
- 2 x 2.2 dBi Antennas
- Warranty Card

### 1.4 Setup


The setup of the Wireless Multi-Function Access Point can be performed using the following steps:

- Visually inspect the Ethernet RJ45 port connector and make sure that it is fully plugged in to the system's Ethernet switch/hub port.
- Fix the direction of the antennas. Try to place the AP in a position that can best cover your wireless network. Normally, the higher you place the antenna, the better the performance will be.



## Wireless Multi-Function Access Point

- The antenna's position enhances the receiving sensitivity.
- Visually inspect if the Power Adapter was fully plugged to the device power jack (Connect the Power Adapter DC plug to the AP's power jack **DC-IN**).

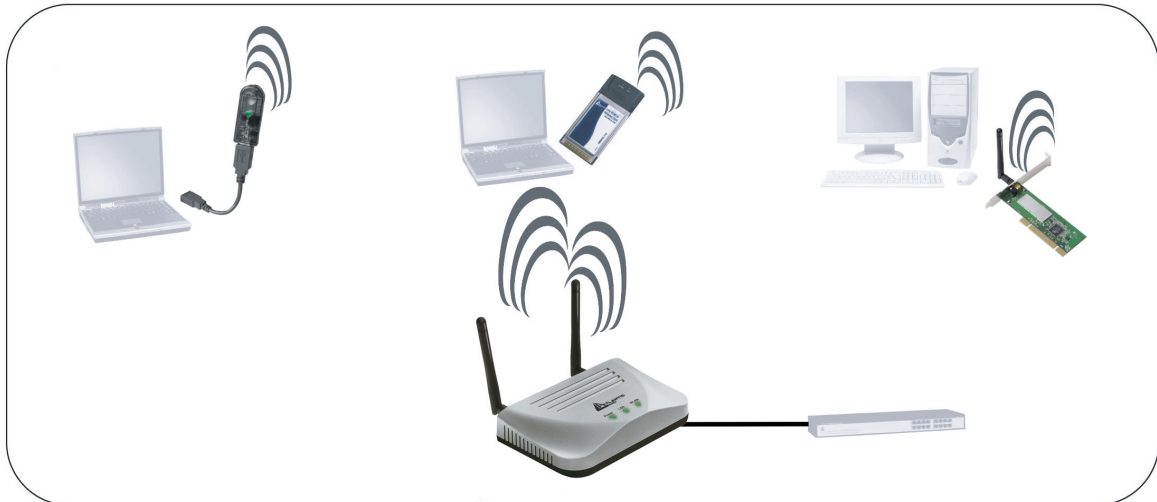

### 1.5 Location

Locate an optimum location for the Wireless LAN Access Point (AP). The best place for your AP is usually the center of your wireless network, with line of sight to all of your mobile stations.

Try to place the AP in a position that can best cover your wireless network. Normally, the higher you place the antenna, the better the performance will be. The antenna's position enhances the receiving sensitivity.



## Wireless Multi-Function Access Point

### 1.6 Using Wireless Access Point

#### 1.6.1 The Front LEDs

The table below shows the LED Indicator of the Wireless Multi-Function Access Point.

LED	Meaning
<b>POWER</b>	This indicator lights green when the Access Point receives power. Otherwise, it turns off.
<b>LAN</b>	The indicator lights green when the LAN port is connected to a 100Mbps Ethernet station, the indicator blinks green while transmitting or receiving data on the 100Mbps Ethernet network.
<b>WLAN</b>	The indicator always blinks green while the wireless AP is always broadcasting packets.

#### 1.6.2 The Rear Ports

The figure below shows the rear panel of the Wireless Multi-Function Access Point.





## Wireless Multi-Function Access Point

Port	Meaning
<b>Reverse SMA Connectors</b>	There are two antennas in the rear panel, when you need to connect extended Antenna, connect to Antenna 2 for the extended antenna. When you are using one antenna model, connect the extended antenna directly to the antenna screw in the rear panel.
<b>LAN</b>	Ethernet uplink port with 10/100Mbps Fast Ethernet connections, connect this port to switch/hub.
<b>Reset</b>	<p>The Reset function is to reset the setting back to factory default setting, once you press the “<b>RESET</b>” button within 10 seconds, the LED of the WLAN will turn off. And when the Access Point is ready, the WLAN LED will start blinking.</p> <p>And the other function is when the AP is locked, press the reset button to unlock it.</p>
<b>POWER (DC-IN)</b>	Connect the Power Adapter DC plug to the AP's power jack.

### 1.7 TCP/IP

The Wireless Multi-Function Access Point can be configured with your Web browser. The web browser is included as a standard application in the following operation systems, UNIX, Linux, Mac OS, Windows 95/98/NT/2000/Me, and etc. The product provides a very easy and user-friendly interface for configuration.





## Wireless Multi-Function Access Point

### 1.7.1 IP Address

This section describes the configuration required by LAN-attached PCs that communicate with the Wireless Multi-Function Access Point, either to configure the device or for network access. These PCs must have an Ethernet interface (or wireless adapter) installed properly, be connected to the Wireless Multi-Function Access Point either directly or through an external repeater hub or by wireless, and have TCP/IP installed and configured to obtain an IP address through a DHCP server or a fixed IP address that must be in the same subnet of the Wireless Multi-Function Access Point. The default IP address of the Wireless Multi-Function Access Point is 192.168.1.100 and subnet mask is 255.255.255.0.

Please follow the steps below for PC's network environment installation. First of all, please check your PC's network components. The TCP/IP protocol stack and Ethernet network adapter must be installed. If not, please refer to MS Windows related manuals.

### 1.8 Default Settings

Before configuring this Wireless Multi-Function Access Point, you need to know the following default settings.

- User:
- Password:
- IP address (**192.168.1.100**)
- Subnet Mask(**255.255.255.0**)
- Wireless: **Access Point**
- SSSID: **default**
- Channel:**6**




Wireless Multi-Function Access Point

## 1.9 Accessing the Access Point Web Configurator

Before you configure this device, note that when the AP is configured through an Ethernet connection, make sure the manager PC must be set on same the **IP network**.

Open Internet Explorer 5.0 or above Web browser.

Enter IP address **http://192.168.1.100** (the factory-default IP address setting) to the address location.

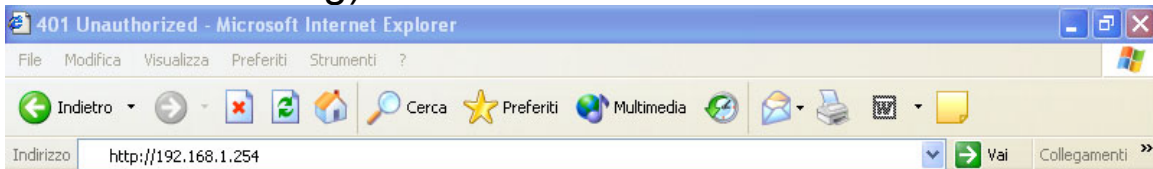

Click **OK**.

The screen will show the station summary of the AP when you login to the AP.

There is no need to enter any password when you first login the AP, the default setting is without password. When there is a screen needs to enter the Network password, it means that there is a password settle, type in the password you entered before.



Type a name or leave the username dialog box empty to login, the system will check only the password that was set in the system before.

### 1.9.1 Navigating the Access Point Web Configurator

There are six main functions included in the left side of the main screen: Network, Security, Status, Clients, Tools and Configuration. Point the selections in the left side of the menu screen.



# Wireless Multi-Function Access Point

**ATLANTIS<sup>®</sup>**  
AND

- Network
  - LAN setup
  - Wireless settings
  - WDS Links
- Security
  - Wireless security
- Status
  - Station
  - Wireless statistics
  - Event reporting
- Clients
  - Wireless clients
  - Access Points
- Tools
  - Upgrade firmware
- Configuration
  - Password

Wireless Access Point

**Local Area Network (LAN)**

**Primary Address Selection**

DHCP

Static IP

IP Address

Subnet mask

Gateway

**For more advance configuration, please refer to User's Manual in the CD.**

**Atlantis Land S.p.A.**  
Viale De Gasperi, 122  
Mazzo di Rho – MI – Italy  
**info@atlantis-land.com**  
**sales@atlantis-land.com**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>