



# PORTABLE GENERATOR

## Illustrated Parts List

# EXL8000

**13500 STARTING WATTS**

Questions? Help is just a moment away!

Preguntas? La ayuda es justa un momento lejos!


Call: **Generator Helpline**

Llame: **Línea Directa del Generador**

**1-800-743-4115 M-F 8-5 CT**

web: [www.briggsandstratton.com](http://www.briggsandstratton.com)

**Models / Modelos**  
**030254**

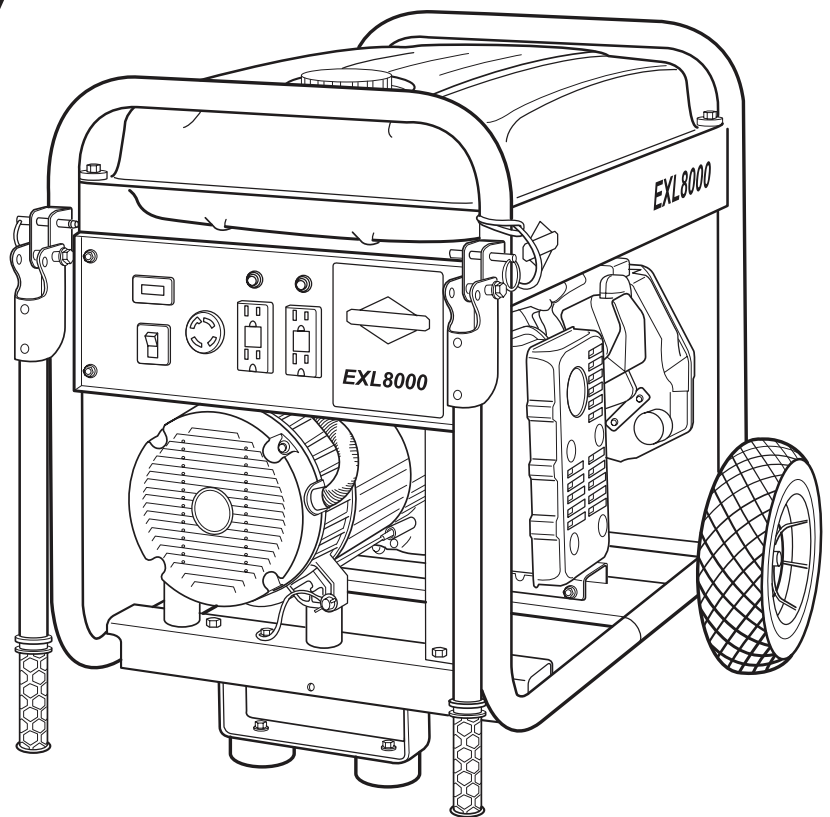


**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC**  
**JEFFERSON, WISCONSIN, U.S.A.**

Manual No. 200309A  
Revision - (05/23/2006)

# EXPLODED VIEW

## EXPLODED VIEW - MAIN UNIT

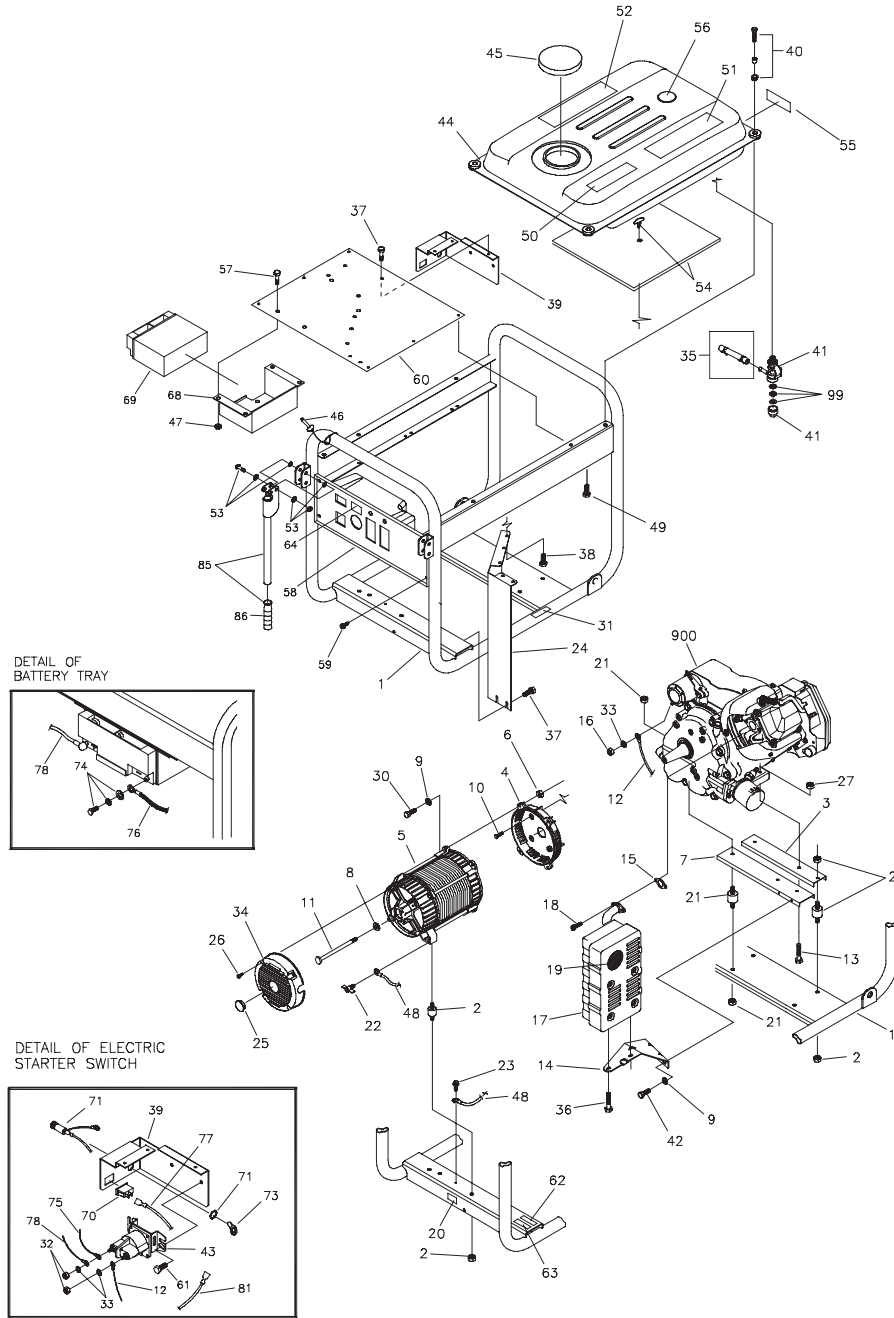

Copyright © 2006 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

## PARTS LIST

### EXPLODED VIEW - PARTS LIST

Item	Part #	Description	Item	Part #	Description
1	B194898GS	KIT, Cradle	49	192376GS	SCREW, 12-24 x 1/2, Thread Forming
2	194155GS	KIT, Vibration Mount	50	188333GS	DECAL, Instruction Fuel Level
3	B92531GS	BRACKET, Support Engine	51	194984GS	DECAL, Warning
4	190220GS	ADAPTER, Engine	52	94480GS	DECAL, Start Instructions
5	NSP	ASSY, Alternator (see page 5)	53	194034GS	KIT, Folddown Handle Hardware
6	*	NUT, Hex M8 - 1.25	54	194448GS	KIT, Insulation w/ Clip
7	B92731GS	BRACKET, Support Eng/Muffler	55	197797GS	DECAL, Fuel Shutoff
8	96796GS	WASHER	56	192724GS	GAUGE, Fuel
9	*	WASHER, Lock M8	57	*	HHCS, M6 - 1.0 x 12
10	190274BGS	SBHC, 3/8-16 x 1"	58	198238GS	ASSY, Control Panel (see page 4)
11	47481GS	HHCS, 5/16 - 24 x 10.62	59	198611GS	PPHS, 1/4 - 20 x 0.5
12	189302LGS	ASSY, Wire, #16, Red	60	195537GS	HEATSHEILD
13	*	HHCS, M8 1.25 x 45	61	B4300GS	HHS, 1/4 - 20 x 1/2, Trilobular
14	92532GS	BRACKET, Muffler	62	195940GS	DECAL, Neutral, Grnd, Neutral
15	90239GS	GASKET, Exhaust	63	195459GS	DECAL, Grnd, Neutral
16	*	NUT, Hex M6 1.0	64	200311GS	DECAL, Neutral Bonded, Frnch
17	A7433GS	MUFFLER	68	195680GS	TRAY, Battery
18	*	SHCS, M8 - 1.25 x 20	69	193463GS	BATTERY
19	83083GS	SCREEN, Spark Arrest	70	87799GS	SWITCH, Rocker On/Off
20	B4986GS	DECAL, Ground	71	196626GS	ASSY, Jack, Coax, DC
21	198222GS	KIT, Vibration Mount	73	192351GS	LUG, 1/4, #22/18
22	86494GS	SCREW, Wing M6 - 1.0 x 16	74	193347GS	KIT, Hardware Battery
23	86292GS	SCREW, 10 - 16 x 3/4, Self Drill	75	196627AGS	ASSY, Wire, #13, Red
24	194390GS	ASSY, Heat Shield	76	185939KGS	ASSY, Wire, #55 Blk
25	191190GS	CAP	77	196627BGS	ASSY, Wire, #13B, Red
26	74908GS	TAPTITE, M5 - 0.8 x 10	78	189302MGS	ASSY, Wire, #13 Red
27	67989GS	NUT, M8 Flange Serrated	81	196627EGS	ASSY, Wire, #0, Blk
30	*	HHCS, M8 - 1.25 x 25	85	B193200GS	ASSY, Fold Down Handle (Includes Item 86)
31	200310GS	DECAL, Caution Hot Muffler	86	198669GS	GRIP, Handle
32	*	NUT, 1/4 - 20	99	189759GS	KIT, Fuel Valve Repair
33	*	WASHER, 1/4 Lock	900	§	ENGINE
34	195422GS	COVER, RBC, Plastic w/ Cap			
35	791745	KIT, Fuel Hose (cut to fit)			
36	*	HHCS, M6 1.0 x 12			
37	56893GS	CRIMPTITE, 10-24 x 1/2			
38	B2153GS	SCREW, Self Driller, 12-14 x 7/8			
39	B196810GS	BRACKET, Starter			
40	198221GS	KIT, Fuel Tank Hardware (Includes Qty of 4)			
41	189133GS	VALVE, Fuel			
42	*	HHCS, 5/16 - 18 x 3/4			
43	691656	SOLENOID			
44	200590GS	ASSY, Tank Fuel (Includes Items 41, 50, 51, 52 & 55)			
45	189135GS	CAP, Tank Fuel			
46	B4135GS	PIN, Handle Release			
47	77395GS	NUT, M6 Flange Lock			
48	195373GS	WIRE, Ground			

#### Parts Not Illustrated


200309GS	MANUAL, Operator's
BB3061GS	BOTTLE, Oil
B4177GS	CHARGER, Battery
195236GS	FUSE (5 Pack)
195237GS	CAP, Fuse (4 Pack)
191895DGS	SET, Cord
199384GS	DECAL, Family, CA EVP
I0003I	STABILIZER, Fuel
198220GS	KIT, Decal Srv

\* - Items without part numbers are common fasteners and are available at your local hardware store.

§ - Contact Engine Manufacturer

## EXPLODED VIEW AND PARTS LIST

### EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

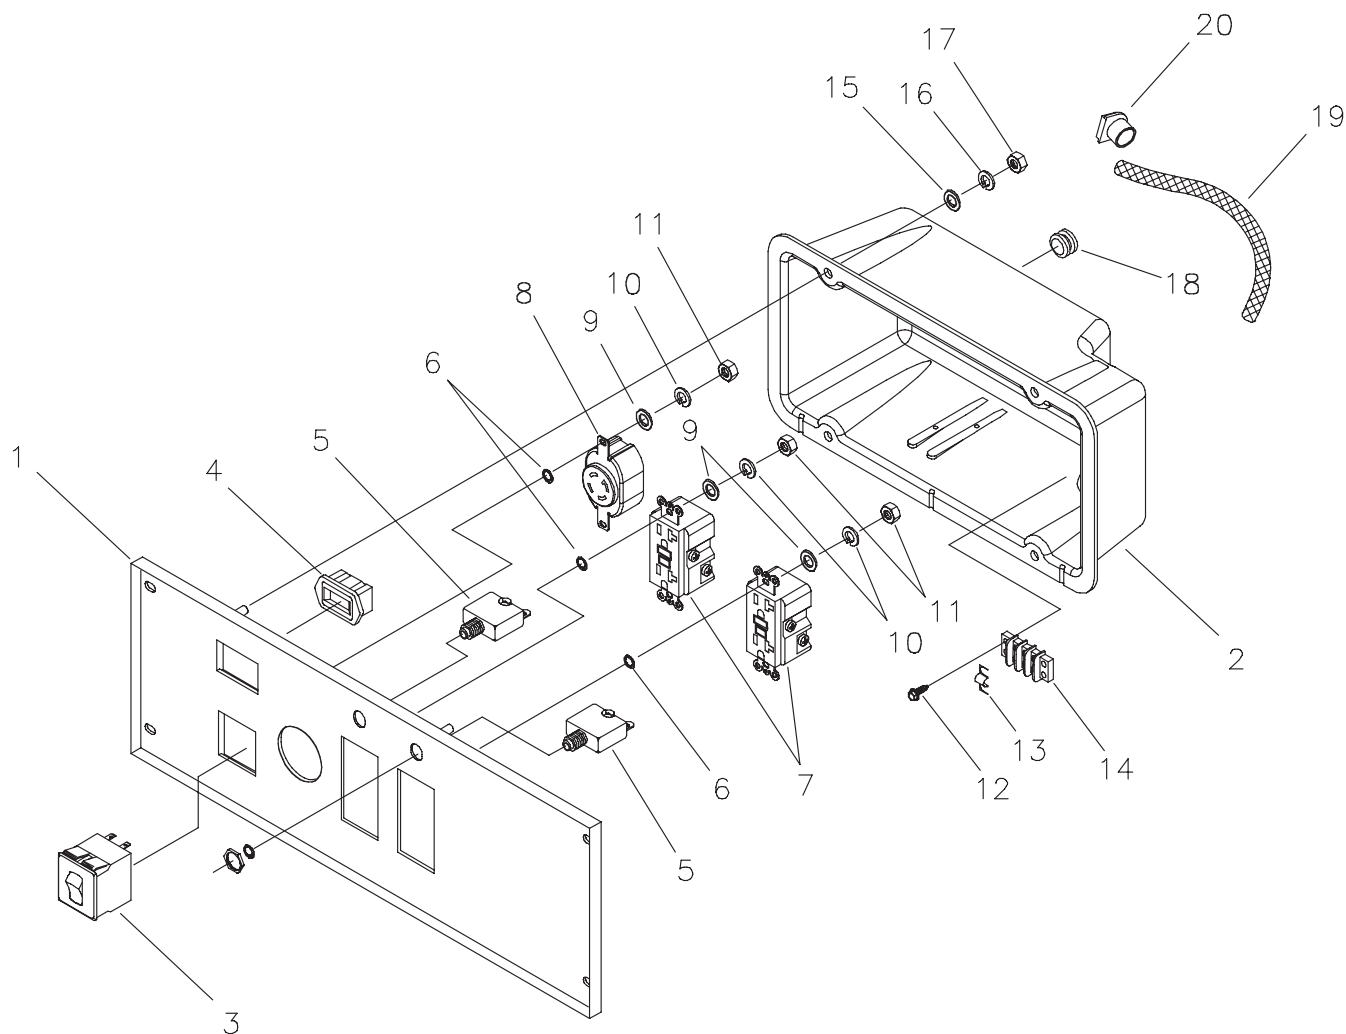


Item	Part #	Description
1	198237GS	PANEL, Control
2	198239GS	BOX, Control Panel
3	192785GS	BREAKER, Circuit, 30A
4	198245GS	METER, Hour
5	75207DGS	BREAKER, Circuit, 15A
6	*	WASHER, Shakeproof, Int. #8
7	94373GS	OUTLET, 120V, 15A Duplex
8	43437GS	OUTLET, 120/240V, 30A
9	*	WASHER, Flat, M4
10	*	WASHER, Lock, M4
11	*	NUT, M4 - 0.7
12	198495GS	SCREW, 4 x 18, Tapping

Item	Part #	Description
13	193095GS	JUMPER, Terminal Block
14	193427GS	STRIP, Terminal, 3 Pole
15	*	WASHER, Flat, M5
16	*	WASHER, Lock, M5
17	*	NUT, M5 - 0.8
18	38057GS	GROMMET
19	77043BGS	CONDUIT, Flex Tubing
20	188632GS	BOOT, Wire Outlet, Rubber

\* - Items without part numbers are common fasteners and are available at your local hardware store.

## EXPLODED VIEW AND PARTS LIST


### EXPLODED VIEW AND PARTS LIST - ALTERNATOR

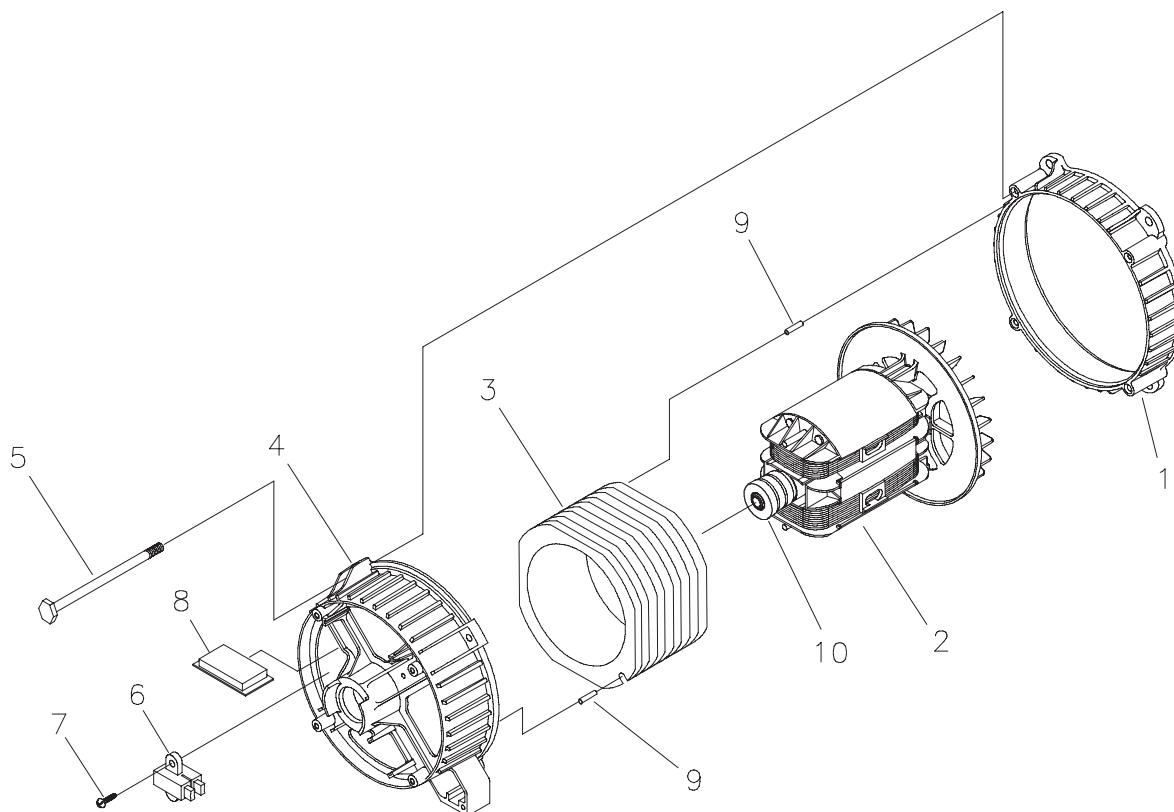

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	194773GS	ASSY, Rotor (Includes Item 10)
3	198498AGS	STATOR
4	193336GS	RBC, (with O-Ring p/n 189197GS)
5	86308KGS	HHCS, M6 - 1.0 x 175 SEMS
6	66386GS	ASSY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	189769GS	BOARD, Circuit, System Control
9	81917GS	PIN, Roll, 4mm x 10
10	65791GS	BEARING

## EXPLODED VIEW AND PARTS LIST

### EXPLODED VIEW AND PARTS LIST - WHEEL KIT

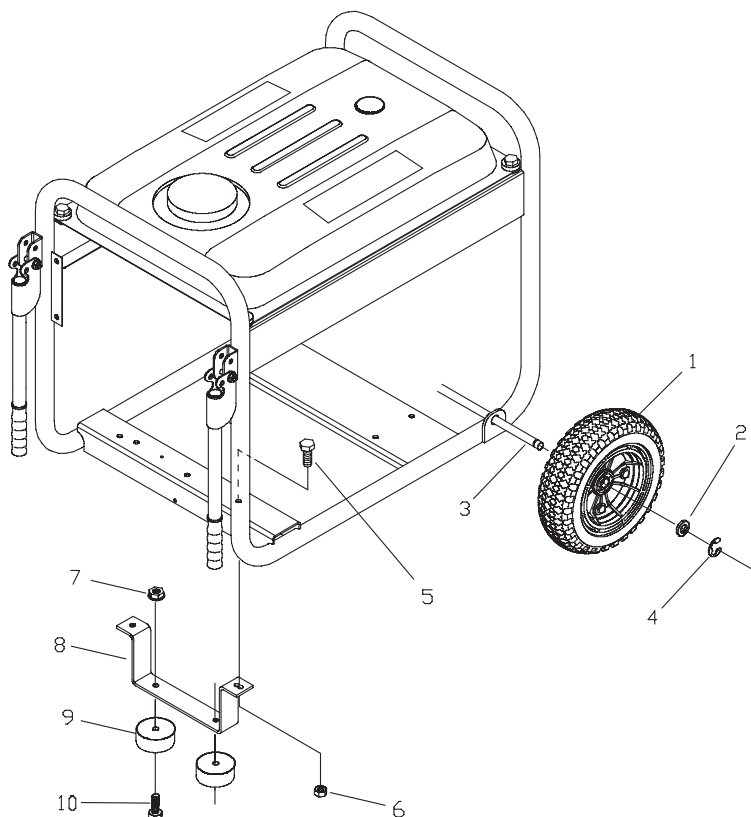

Item	Part #	Description
1	196517GS	WHEEL
2	*	WASHER, 5/8"
3	191267RGS	AXLE, 5/8"
4	191265GS	E-RING
5	*	HHCS, M8 1.25 x 20
6	67989GS	NUT, M8, Flange Serrated
7	194005GS	NUT, 1/4 - 20 Flange, Nylok
8	B186927GS	SUPPORT, Wheel Kit
9	191413GS	MOUNT, Vibration
10	*	HHCS, 1/4 - 20 x 1

\* - Items without part numbers are common fasteners and are available at your local hardware store.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>