



# Dakota® 10 and 20 owner's manual



Garmin International, Inc. 1200 East 151st Street, Olathe, Kansas 66062, USA Tel. (913) 397.8200 or (800) 800.1020 Fax (913) 397.8282	Garmin (Europe) Ltd. Liberty House Hounslow Business Park, Southampton, Hampshire, SO40 9LR UK Tel. +44 (0) 870.8501241 (outside the UK) 0808 2380000 (within the UK) Fax +44 (0) 870.8501251	Garmin Corporation No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan Tel. 886/2.2642.9199 Fax 886/2.2642.9099
--	--	---

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, Dakota®, BlueChart® g2 are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. myGarmin™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.










The Geocaching 4-box logo and the Wherigo logo are registered trademarks of Groundspeak Inc., in the United States and other countries. Use with permission. Use of [geocaching.com](http://geocaching.com) data is subject to the Geocaching.com Terms of Use Agreement located at [www.geocaching.com/about/termsfuse.aspx](http://www.geocaching.com/about/termsfuse.aspx). The Wherigo application is covered by patent 6,691,032 and US and foreign patents pending. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. Mac® OS is a registered trademarks of Apple Computer, Inc. microSD™ is a trademark of SanDisk or its subsidiaries.



See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Introduction

### Tips and Shortcuts

- Touch  or  to scroll and see more choices.
- Touch  to return to the previous screen.
- Touch  to return to the Main menu.
- Touch  or  on the Map page to zoom in or zoom out.
- Touch  to accept a change.
- Touch  to search near a location.
- Touch  to view the keyboard.

## Manual Conventions

When you are instructed to “touch” something, use your finger to touch that item on the screen.

The small arrows (>) used in the text indicate that you should touch a series of items in order. For example, if you see, “Touch **Where To?** > **Tracks**,” you should touch the **Where To?** button on the screen, and then touch **Tracks**.

## Table of Contents

<b>Introduction</b> .....	<b>i</b>
Tips and Shortcuts.....	i
Manual Conventions.....	i
<b>Getting Started</b> .....	<b>1</b>
Product Registration.....	1
Contact Garmin.....	1
Optional Accessories.....	1
Caring for the Dakota.....	1
Battery Information.....	2
Turning On and Off the Dakota..	2
Adjusting the Backlight Level....	3
Locking the Screen.....	3
Acquiring GPS Satellite Signals.....	3
<b>Basic Navigation</b> .....	<b>4</b>
Accessing Applications from the Main Menu.....	4
Creating Waypoints.....	4
Navigating to a Destination.....	5
Stop Navigating.....	7
Using the Map.....	7
Using the Compass.....	9

Bearing and Course Pointers .. 10

<b>Managing Waypoints, Routes, and Tracks</b> .....	<b>12</b>
Modifying Waypoints.....	12
Creating Routes.....	13
Viewing Stored Routes.....	13
Editing and Deleting Routes....	13
Viewing the Active Route.....	14
Managing Tracks.....	14
<b>Additional Tools</b> .....	<b>16</b>
Elevation Plot.....	16
Sharing Information Wirelessly.....	17
Calculating the Size of an Area.....	17
Other Tools.....	17
Monitoring Satellite Reception.....	18
Trip Computer.....	19
<b>GPS Games</b> .....	<b>20</b>
Geocaches.....	20
<b>Customizing the Dakota</b> ..	<b>21</b>

Changing the Profile .....	21	Transferring Files to Your Computer .....	34
Setting Up Profiles .....	21	Loading and Deleting Files .....	35
Using System Setup .....	22	Optimizing Battery Life .....	36
Customizing the Display .....	22	Restoring Factory Default Settings .....	36
Map Setup .....	23	Attaching a Carabiner, Lanyard, Mount, or Other Optional Accessory .....	37
Track Setup .....	24	Calibrating the Touchscreen .....	37
Customizing the Main Menu .....	24	Software License Agreement... ..	38
Changing Marine Settings .....	25	Declaration of Conformity (DoC) .....	38
Changing Time Settings .....	26	<b>Index .....</b>	<b>39</b>
Changing Measurement Units .....	26		
Position Format .....	27		
Modifying the Compass .....	27		
Altimeter Setup .....	28		
Pairing the Dakota .....	29		
Reset .....	30		
Viewing Your Dakota Information .....	30		
<b>Appendix .....</b>	<b>31</b>		
Specifications .....	31		
Using Demo Mode .....	32		
Connecting Your Dakota to a Computer .....	33		
Installing a microSD™ Card .....	33		



## Getting Started

### Product Registration

Help us better support you by completing our online registration today. Connect to our Web site at <http://my.garmin.com>. Keep the original sales receipt, or a photocopy, in a safe place.

### Contact Garmin

Contact Garmin Product Support if you have any questions while using your Dakota®. In the USA, go to [www.garmin.com/support](http://www.garmin.com/support), or contact

Garmin USA by phone at (913) 397.8200 or (800) 800.1020.

In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to [www.garmin.com/support](http://www.garmin.com/support) and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

If needed, the serial number of your Dakota is located in the battery compartment. Remove batteries as indicated on [page 2](#).

### Optional Accessories

For a list of available accessories and maps, refer to the Garmin Web site at <http://buy.garmin.com>.

### Caring for the Dakota

#### Cleaning the screen

Use a soft, clean, lint-free cloth. Use water, isopropyl alcohol, or eyeglass lens cleaner. Apply the liquid to the cloth and then gently wipe the screen with the cloth.

## Battery Information

Dakota units operate on two AA batteries. Use alkaline, NiMH, or lithium batteries. Use precharged NiMH or lithium batteries for best results.

### To install the batteries:

1. Slide the latch and remove the battery cover.



2. Insert the battery. Align the + (positive) and - (negative) markings on the device with the battery.
3. Replace the battery cover.



### To select the battery type:

1. Touch **Setup** > **System** > **Battery Type**.
2. Touch **Alkaline**, **Lithium**, or **Rechargeable NiMH**.

### Long-Term Storage

Remove batteries when you do not plan to use the Dakota for several months. Stored data is not lost when batteries are removed.

## Turning On and Off the Dakota



1. To turn on the Dakota, press .
2. To turn off the Dakota, press and hold .



## Adjusting the Backlight Level

1. While the Dakota is on, press and quickly release .




2. Touch  or  to adjust the brightness levels.

See [page 22](#) to change the backlight timeout.

## Locking the Screen

Lock the screen to prevent inadvertent screen touches.

1. Press and quickly release .
2. Touch **Lock Screen** (or **Unlock Screen**).

## Acquiring GPS Satellite Signals

Before the Dakota can find your current location and navigate a route, you must acquire GPS signals.


1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on the Dakota. Acquiring satellite signals can take a few minutes.

The  bars on the Main menu indicate satellite strength. When the bars are green, the Dakota has acquired satellite signals.

## Basic Navigation

### Accessing Applications from the Main Menu

You can access all Dakota applications from the Main menu.

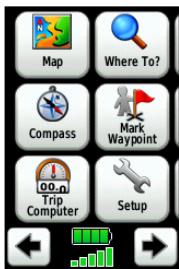



Main menu

Touch  or  to access additional applications.

## Creating Waypoints

Waypoints are locations you record and store in the Dakota.

**To mark your current location as a waypoint:**

1. Touch **Mark Waypoint**.
2. Touch **Save and Edit**.
3. Touch an item from the list to change.
  - Touch letters, numbers, or symbols to make the changes.
  - Touch  (except when changing a symbol). Change other attributes, if necessary.
  - Touch  to discard the changes.


To edit or delete a waypoint, see [page 12](#).

## Navigating to a Destination



You can use **Where To?** or choose a point on the map to navigate to a destination with the Dakota.


### To navigate to a destination using **Where To?**:

1. Touch **Where To?**.
2. Touch a category.
3. Touch one of the items listed below. This list may vary depending on the type of maps loaded on your Dakota.
  - **Recent Finds**—items you have recently found.
  - **Waypoints**—a list of waypoints (page 4).
  - **Tracks**—a list of tracks (page 14).
  - **Routes**—a list of routes (page 13).

- **All POI** (Points of Interest)—if supported by the preloaded or optional mapping, various POIs may be listed.
  - **Coordinates**—enter the coordinates of a location.
  - **Cities**—a list of the 50 closest cities to your current location.
  - **Tides**—a list of the closest tide stations.
4. Touch **Go**. A colored line indicates your course.
  5. Touch  > **Compass**.
  6. Use the compass to navigate to your destination.

### To find a destination by spelling the name:

1. On the Main menu, touch **Where To?** > **All POI**.
2. Touch .
3. Touch characters to spell a part of the name of your destination.
4. Touch .


5. Touch the destination.
6. Touch **Go**. A colored line indicates your course.
7. Touch  > **Compass**.
8. Use the compass to navigate to your destination as indicated on [page 9](#).

### To navigate to a point on the map:

1. Touch **Map**.
2. Touch a point on the map.
3. Touch the information button at the top of the screen.





*Information  
button*


4. Touch **Go** >  > **Compass**.
5. Use the compass to navigate to your destination as indicated on [page 9](#).


### To navigate to a destination near a waypoint or a recent find:

1. Touch **Where To?**.

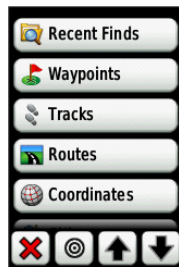

2. Touch .
3. Select from the following options:
  - **A Recent Find**
  - **A Waypoint**
  - **My Current Location**
  - **A Map Point**

4. Touch the location you want to search near.
  5. Touch a category. Items are listed in order of distance from the location you selected.
  6. Touch a destination.
  7. Touch **Go**. A colored line indicates your course.
  8. Touch  > **Compass**.
  9. Use the compass to navigate to your destination as indicated on [page 9](#).
3. Touch and drag the screen to pan the map.

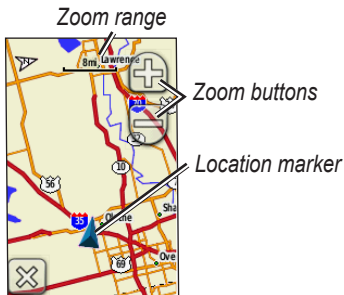




## Stop Navigating

To stop navigating, touch **Where To?** > **Stop Navigation**.

## Using the Map

**To use the map:**

1. Touch **Map**. Your current location is indicated by a location marker .
2. Touch  or  to zoom.

**To review detailed information about a point on the map:**

1. If necessary, pan to the location you want to review.
2. Touch the location.
3. Touch the information button at the top of the screen for additional information.




Information  
button

### To save a waypoint on the Map page:

1. On the Map page, touch the point you want to save.
2. Touch the information button at the top of the screen.



3. Touch  to save the waypoint.

### To show or hide data fields at the top of the screen:

1. Touch **Setup > Map > Show Data Fields**.
2. Touch **Never, When Navigating, or Always**.

### To change the Map page data fields:

1. On the Map page, touch one of the data fields.
2. Touch a data type.

## Using the Compass

The Compass page guides you to your destination by displaying a compass and a bearing pointer.

It also provides navigation data such as current speed, distance to the next point on the route, and estimated arrival time.

The electronic compass is similar to a magnetic compass when you are stationary or walking. If you maintain a higher speed, such as traveling in an automobile, the compass uses GPS signals to determine your direction. To turn the electronic compass off, see [page 28](#).

### To open the Compass page:

Touch **Compass**.

## Calibrating the Compass



**NOTE:** The electronic compass is unavailable with the Dakota 10.

Calibrate the electronic compass outdoors. Do not stand near objects that influence magnetic fields, such as cars, buildings, or overhead power lines.

Calibrate the compass after moving long distances, experiencing temperature changes greater than 20°F (11°C), or changing the batteries.

### To calibrate the electronic compass:

1. Touch **Setup** > **Heading** > **Press To Begin Compass Calibration.**

OR

From the Compass page, touch and hold the middle of the compass.


2. Touch **Start** and follow the on-screen directions.

If “Calibration Failed” appears, touch **OK**, and repeat the process.

## Bearing and Course Pointers

The Dakota can use either a bearing or course pointer on the compass.

The bearing pointer indicates the direction to your destination, and the course pointer indicates your relationship to a course line leading to the destination. To select a bearing or course pointer, see [page 27](#).

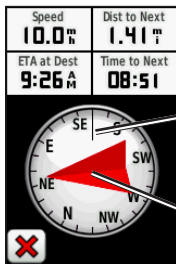


*Direction you are currently traveling*

*Bearing to destination*

**Bearing Pointer**



The bearing pointer points to your destination, regardless of the direction you are moving. If the bearing pointer points toward the top of the compass, you are traveling directly toward your destination. If it points any other direction, turn toward that direction until the arrow is pointing toward the top of the compass.

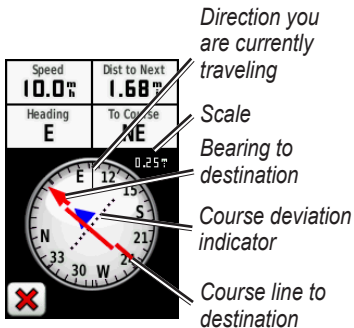

The course pointer provides an indication of drift (right or left) according to the scale shown at the edge of the compass ring. The scale refers to the distance between dots on the course deviation indicator. The course line to your destination is based on your original starting point.

Move back to the “course line to destination” to compensate for deviation and to get back on course. This is most useful if you are navigating on water or where there are no major obstacles in your path. It also helps you avoid hazards to either side of the course, such as shoals or submerged rocks.

### To change the Compass page data fields:

1. On the Compass page, touch a data field.
2. Touch a data type.


# Managing Waypoints, Routes, and Tracks


## Modifying Waypoints

You can edit waypoints to change the name, symbol, comment, location, elevation, and depth of the waypoint.

You can also use the Waypoint Manager to relocate a waypoint to your current location, and to delete waypoints.

### To edit a waypoint:

1. Touch **Waypoint Manager**.
2. Touch the waypoint.
3. Touch the attribute.
4. Touch letters, numbers, or symbols to make the changes.
5. Touch  (except when changing a symbol). Change other attributes, if necessary.

6. Touch  to discard the changes.

### To reposition a waypoint to your current location:

1. Touch **Waypoint Manager**.
2. Touch the waypoint you want to reposition.
3. Touch **Reposition Here**.

### To delete a waypoint:



1. Touch **Waypoint Manager**.
2. Touch the waypoint you want to delete.
3. Touch **Delete Waypoint**.

To delete all waypoints, touch **Setup** > **Reset** > **Delete All Waypoints** > **Yes**.

## Creating Routes

You can create and store up to 50 routes.

### To create and navigate a new route:

1. Touch **Route Planner** > **<Create Route>** > **<Select First Point>** to select a starting point.
2. Touch a category.
3. Touch the first item on the route.
4. Touch **Use** > **<Select Next Point>**.
5. Repeat until the route is complete.
6. Touch  to save the route.
7. Touch  > **Where To?** > **Routes** to navigate the route.

## Viewing Stored Routes

### To view a route on the map:

1. Touch **Route Planner**.
2. Touch the route you want to view > **View Map**.

## Editing and Deleting Routes

You can edit any of your stored routes.

### To edit a route:

1. Touch **Route Planner**.
2. Touch the route you want to edit > **Edit Route**.
3. Touch the point you want to edit and select from the following options:
  - **Review**—shows the point on the map.
  - **Move Down (or Up)**—changes the order of the point on the route.

- **Insert**—adds an additional point on the route. The additional point is inserted before the point you are editing.
- **Remove**—removes the point from the route.

### To reverse the order of points on a route:

1. Touch **Route Planner**.
2. Touch the route you want to reverse > **Reverse Route**.

### To delete a route:

1. Touch **Route Planner**.
2. Touch the route you want to delete > **Delete Route**.

## Viewing the Active Route

1. Touch **Active Route**. The points on your current route are shown.
2. Touch a point for additional details.

## Managing Tracks

A track is a recording of the path you have traveled.

### To record your tracks:

1. Touch **Setup > Tracks > Track Log**.
2. Touch **Do Not Record; Record, Do Not Show; or Record, Show On Map**.

If you select **Record, Show On Map**, a line on the Map page indicates your track.

For more information on Tracks setup, see [page 24](#).

**To save and view your current track:**

Touch **Track Manager > Current Track**.

- **View Map**—shows your current track on the map.
- **Elevation Plot**—shows the elevation plot [page 16](#) for your current track.
- **Save Track**—saves your current route.
- **Save Portion**—allows you to select a portion of your current track to save.

**To clear your current track:**

Touch **Setup > Reset > Clear Current Track > Yes**.

**To open a saved track:**

1. Touch **Where To? > Tracks**.
2. Touch a saved track.

Archived or loaded tracks are listed on the Track Manager page. You can view the tracks on the map, view elevation plots, or navigate the track.



## Additional Tools


### Elevation Plot



**NOTE:** Elevation plot is unavailable on the Dakota 10.

The Dakota can record elevation changes over distance or time, or pressure (barometric or ambient) changes over time. To set which changes are recorded, see [page 28](#).

1. Touch **Elevation Plot** to open the Elevation Plot page.
2. To adjust the distance or time scale, touch the scale and then touch  or .
3. To display elevation data, touch a point on the plot. The time, date, and elevation recorded at that point are shown.

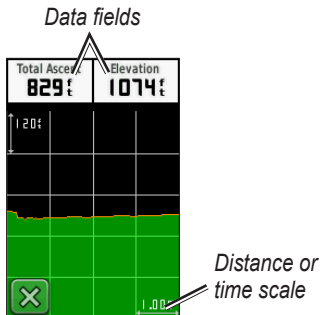

### Elevation Plot Page

#### Changing the Elevation Plot Data Fields

1. Touch **Elevation Plot**.
2. Touch a data type at the top of the screen.
3. Select from the options listed to replace the data type on the screen.

## Sharing Information Wirelessly



**NOTE:** Sharing information wirelessly is unavailable with the Dakota 10.

The Dakota can wirelessly share waypoints, routes, tracks, and geocaches with another wireless-enabled Garmin recreational handheld.

1. Place the units within 10 feet (3 meters) of each other.
2. On the Main menu of both units, touch **Share Wirelessly**.
3. On the receiving unit, touch **Receive**. The receiving unit indicates when it is ready to receive data.
4. On the sending unit, touch **Send**.
5. On the sending unit, touch the category of data to send.
6. On the sending unit, touch an item to send and touch **Send**.

7. Both units indicate that the transfer is complete.
8. Touch **OK** on both units.

## Calculating the Size of an Area

1. Touch **Area Calculation** > **Start**.
2. Walk around the perimeter of the area you want to calculate.
3. Touch **Calculate** when finished.

## Other Tools

Select from the following options on the Main menu to access additional tools:

- **Calendar**—use a calendar.
- **Calculator**—use a calculator.
- **Sun and Moon**—view sunrise and sunset times along with the moon phase.

- **Alarm Clock**—set your Dakota to sound an alarm. You can also set the unit to turn on at a specific time.



---

**NOTE:** The alarm clock is unavailable with the Dakota 10.

---

- **Hunt and Fish**—view the predicted best dates and times for hunting and fishing at your current location.
- **Stopwatch**—use a timer, mark a lap, and time laps.
- **Man Overboard**—mark a man overboard position and start navigation. Follow the on-screen instructions.
- **Waypoint Averaging**—refine a waypoint location with multiple samples to achieve the most accurate location possible. Follow the on-screen instructions. For more information, refer to [Trail Tech](#) at [www.garmin.com](http://www.garmin.com).

- **Sight N' Go**—point the unit at an object to lock in the direction and navigate to it. Follow the on-screen instructions.



---


**NOTE:** Sight N' Go is unavailable with the Dakota 10.

---


## Monitoring Satellite Reception

The Satellite page shows your current location, the GPS accuracy, your current elevation, satellite locations, and signal strength.

### To view the Satellite page:

Touch  at the bottom of the Main menu.



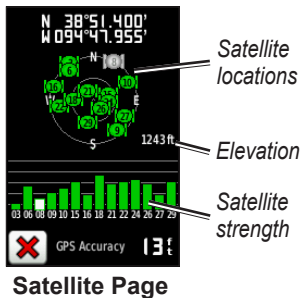


The green bars indicate GPS satellite strength. White bars indicate that the Dakota is still collecting data.

## Trip Computer


The Trip Computer displays your current speed, average speed, maximum speed, trip odometer, and other helpful statistics.

Touch a field to change what is shown in that field.

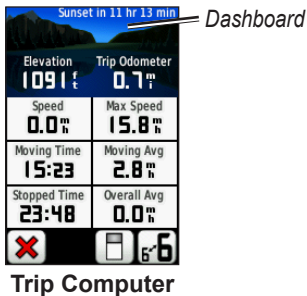


To reset trip data, touch **Setup > Reset > Reset Trip Data > Yes**.

**To change the dashboard background:**

1. Touch  at the bottom of the screen.
2. Touch **Default, Automotive, Geocaching, Small Data Fields,** or **Large Data Fields**.

**To display two larger data fields:**

Touch  to toggle between two larger data fields and the default view.

## GPS Games


### Geocaches

Geocaching is a type of treasure hunting in which geocachers seek hidden treasures using GPS coordinates posted on the Internet by those hiding the geocache.

You can download Geocache sites from [www.geocaching.com](http://www.geocaching.com). The Web site supports the transfer of geocache sites to your Dakota, and, after registering and installing the Garmin Communicator plug-in from [www.garmin.com/products/communicator](http://www.garmin.com/products/communicator), you can download geocaches directly to your Dakota.

#### To navigate to a geocache using Geocaches:

1. Touch **Geocaches** > **Find a Geocache**.
2. Touch a geocache location.

3. Touch **Go**. A colored line indicates your course.
4. Touch  > **Compass**.
5. Use the compass to navigate to your destination as indicated on [page 9](#).

For more information on geocaching, visit [www.geocaching.com](http://www.geocaching.com).

# Customizing the Dakota

## Changing the Profile

Profiles are a collection of settings that allow you to optimize your Dakota from one type of use to another, such as moving from recreational use to automotive use.


When you are in a profile and change settings such as data fields, units of measurement, or position settings, they are saved automatically as part of your current profile.

## Setting Up Profiles

### To change a profile

1. On the Main menu, touch **Profile Change**. Your current profile is indicated on the screen.
2. Touch the profile you want to use.

### To change the name of a profile:

1. Touch **Setup > Profiles**.
2. Touch a profile > **Edit Name**.
3. Touch letters, numbers, or symbols to make the changes.
4. Touch .

### To change the order of the profiles:

1. Touch **Setup > Profiles**.
2. Touch the profile you want to move.
3. Touch **Move Up** or **Move Down**.

### To delete a profile:

It is not possible to delete your current profile.

1. Touch **Setup > Profiles**.
2. Touch a profile > **Delete**.

### To add a new profile:

Touch **Setup > Profiles > <Create New Profile>**. This profile is a copy of your current profile. The new profile becomes your current profile.

## Using System Setup

Touch **Setup > System**.

**GPS**—select **Normal**, **WAAS** (Wide Area Augmentation System), or **Demo Mode** (GPS off). For information about WAAS, go to [www.garmin.com/aboutGPS/waas.html](http://www.garmin.com/aboutGPS/waas.html).

**Language**—select the text language on the Dakota. Changing the text language does not change the language of user-entered data or map data, such as street names.

**Battery Type**—select the type of battery you are using.

**Tones**—turn audible tones **On** or **Off**.



**NOTE:** Tones are unavailable with the Dakota 10.


---

## Customizing the Display

Touch **Setup > Display**.

**Backlight Timeout**—select the amount of time you would like the backlight to remain on after you touch the screen.

### To capture screen shots:

1. On the Main menu, touch **Setup > Display > Screen Capture > On**.
2. Go to the screen you want to capture.
3. Press and quickly release .

4. Connect the Dakota to your computer with the included USB cable. The bitmap file is saved in the Garmin\scrn folder on the Dakota drive.

## Map Setup

On the Main menu, touch **Setup** > **Map**.

**Orientation**—select how the map is shown on the page. **North Up** shows north at the top of the page. **Track Up** shows your current direction of travel toward the top of the page. **Automotive Mode** shows an automotive perspective with next-turn information to use while driving.

**Auto Zoom**—automatically selects the appropriate zoom level for optimal use on your map. When **Off** is selected, you must zoom in or out manually.

**Show Data Fields**—hide or show data fields on the Map page.

**Advanced Map Setup**—set the zoom levels, the text size, and the detail level of the map.

- **Zoom Levels**—select the zoom level for map items.
- **Text Size**—select the text size for map items.
- **Detail**—select the amount of detail shown on the map. Showing more detail may cause the map to redraw more slowly.
- **Shaded Relief**—turn on shaded relief maps if available.

**Map Information**—touch the check box to display a map. This can be helpful if several maps are loaded on the Dakota.

## Track Setup

A track is a recording of your path. On the Main menu, touch **Setup > Tracks**.

**Track Log**—turn track recording on or off.

**Record Method**—select a track recording method. Touch **Distance**, **Time**, or **Auto**. If your record method is time or distance, enter the specific time or distance interval. Touch **Auto** to record the tracks at a variable rate to create an optimum representation of your tracks.

**Interval**—select a track log recording rate. Recording points more frequently creates a more-detailed track, but fills the track log faster.


## Customizing the Main Menu

You can rearrange applications on the Main menu.

**To change the order of applications on the Main menu:**

1. Touch **Setup > Main Menu**.
2. Touch the application you want to move.
3. Touch another application to switch places.

**To deactivate an application and move it to the end of the list:**

1. Touch **Setup > Main Menu**.
2. Touch the application.
3. Touch .



**NOTE:** To reactivate an application, select the application and select another application to switch places.

---

## Route Setup

Touch **Setup** > **Routing**.

**Guidance Method**—select a guidance method for calculating your route

- **Off Road**—calculates point-to-point routes.
- **On Road For Time**—calculates on-road routes that require minimal time to drive.
- **On Road For Distance**—calculates on-road routes that are shorter in distance.

**Calculate Routes for**—select a transportation method for which to optimize your routes.

**Lock On Road**—lock the current location marker on the nearest road, compensating for variances in map position accuracy (requires routable maps).

**Off Road Transitions**—select a transition method for routing off roads.

- **Auto**—automatically routes you to the next point.
- **Manual**—allows you to select the next point on the route by touching the point on the active route page.
- **Distance**—routes you to the next point on the route when you are within a specified distance of your current point.

**Avoidance Setup**—touch the road type you want to avoid.

## Changing Marine Settings

Touch **Setup** > **Marine**.

**Marine Chart Mode**—select the chart type.

**Spot Soundings**—turn spot soundings that indicate depth locations on or off.

**Light Sectors**—turn the navigational light on or off for specific sectors. Selecting **Auto** causes some light sectors to not be shown when the density of light sectors in an area is high.

**Symbol Set**—select the set of marine navaid symbols.

**Marine Alarm Setup**—turn marine alarms on or off.

- **Anchor Drag Alarm**—set an alarm to sound when you drift more than a specified distance.
- **Off Course Alarm**—set an alarm to sound when you are a specified distance off course.
- **Deep Water**—set an alarm to sound when you enter an area of water that is too deep.

- **Shallow Water**—set an alarm to sound when you enter an area that is too shallow.

## Changing Time Settings

Touch **Setup** > **Time**.

**Time Format**—select a 12-hour or 24-hour format.

**Time Zone**—select the time zone for your location.

## Changing Measurement Units

Touch **Setup** > **Units**.

**Distance/Speed**—select distance and speed units.

**Elevation (Vert. Speed)**—select elevation and vertical speed units.

**Depth**—select depth units in feet, fathoms, or meters for marine use.



**Temperature**—select water temperature in degrees Celsius or degrees Fahrenheit.

**Pressure**—select barometric pressure units in inches (Hg), millibars, or hectopascals.

## Position Format

Use the default settings unless you are using a map or chart that specifies a different position format.

**To change the position format:**  
Touch **Setup** > **Position Format**.

## Modifying the Compass

Touch **Setup** > **Heading**.

**Display**—select the type of directional heading shown on the compass:

- **Directional Letters**—sets the Compass page reading to directional letters (N, S, E, W).

- **Numeric Degrees**—sets the Compass page reading to degrees ( $0^{\circ}$ – $359^{\circ}$ ).
- **Mils**—sets the Compass page reading to mils (0 mils–1000 mils).

**North Reference**—select the north reference of the compass:

- **True**—sets true north as the heading reference.
- **Magnetic**—automatically sets the magnetic declination for your location.
- **Grid**—sets grid north as the heading reference ( $0^{\circ}$ ).
- **User**—allows you to set the magnetic variation value.

**Go To Line/Pointer** (depending on your unit)—select **Bearing** to show the Bearing Pointer, which indicates the direction to your destination. Touch **Course** to select the Course

Pointer, which indicates your relationship to a course line leading to the destination (page 10).

**Compass**—select **Auto** to switch from an electronic compass to a GPS compass when you are traveling at a higher rate of speed for a set period of time. Select **Off** to turn the electronic compass off and use the GPS compass.



---

**NOTE:** The compass auto setting is unavailable for the Dakota 10.

---

## Altimeter Setup

---



**NOTE:** Altimeter Setup is unavailable with the Dakota 10.

---

Touch **Setup** > **Altimeter**.

**Auto Calibration**—allow the altimeter to self-calibrate each time you turn the Dakota on.

**Barometer Mode**—select **Variable**

**Elevation** (used when moving) or **Fixed Elevation** (used when stationary, allowing the altimeter to function as a standard barometer).

**Pressure Trending**—select when the pressure data is recorded. Touch **Save Always** to record pressure data every 15 minutes, even when the Dakota is turned off. Touch **Save When Power On** to record data only when the Dakota is turned on. This can be useful when you are watching for pressure fronts.


**Plot Type**—select the elevation plot type:

- **Elevation/Time**—records elevation changes over a period of time.
- **Elevation/Distance**—records elevation changes over a distance.
- **Barometric Pressure**—records barometric pressure over a period

of time.

- **Ambient Pressure**—records ambient pressure changes over a period of time.

### To manually calibrate the altimeter:

1. Go to a location where you know the elevation or the barometric pressure.
2. Touch **Setup > Altimeter > Press To Begin Altimeter Calibration**.
3. Touch **Yes** if you know the elevation, touch **No > Yes** if you know the barometric pressure.
4. Enter the elevation or barometric pressure, and then touch .

## Pairing the Dakota



**NOTE:** Connecting to wireless sensors is unavailable with the Dakota 10.

The Dakota can be used with an optional Garmin heart rate monitor

to display your heart rate. It can also be used with an optional Garmin cadence bike sensor to display your pedaling cadence. When connected to the appropriate Garmin device, the heart rate and bike cadence values are listed as data-field options on the Map page, the Compass page, and the Trip Computer.

Pairing is connecting your Dakota with wireless sensors, such as a heart rate monitor or a cadence bike sensor. After you pair the first time, your Dakota automatically recognizes the wireless sensor whenever they are turned on and within range of each other.

### To pair the Dakota with a wireless sensor:

1. Place the Dakota within 10 feet (3 meters) of the wireless sensor (heart rate monitor or speed/cadence bike sensor).

2. Turn the wireless sensor on.
3. On the Main menu, touch **Setup** > **Fitness** > **Heart Rate Monitor** or **Bike Cadence Sensor**.
4. Touch **Search for new**.
5. A “Connected” message appears.



---

**NOTE:** To prevent your Dakota from communicating with wireless sensors, touch **Setup** > **Fitness** > **Heart Rate Monitor** (or **Bike Cadence Sensor**) > **Off**.

---

## Viewing Your Dakota Information

On the Main menu, touch **Setup** > **About...** to view the Dakota software version, unit ID number, GPS software version, and legal information.

## Reset

1. Touch **Setup** > **Reset**.
2. Touch an item to reset it.

# Appendix

## Specifications

### Physical

**Size:** 3.9 in. H × 2.2 in. W × 1.3 in. D (100 × 55 × 33 mm)

**Weight:** 3.5 oz. (100 g) without batteries  
5.25 oz (148.8 g) with batteries

**Display:** 2.6 in. diagonal (66 mm) backlit 65K color TFT display (160 × 240 pixels)

**Case:** Rugged plastic, water resistant to IPX7

**Temperature Range:** From 5°F to 158°F (from -15 to 70°C)\*

\*The temperature rating of the Dakota may exceed the usable range of some batteries. Some batteries can rupture at high temperatures.

### Power

**Source:** Two AA batteries (alkaline, NiMH, or lithium)

**Battery Life:** Up to 20 hours

### Accuracy

**GPS:** < 33 ft. (10 m) 95% typical\*

\*Subject to accuracy degradation to 100 m 2DRMS under the U.S. DoD imposed Selective Availability (SA) Program when activated.

**DGPS:** From 10 to 16 ft. (from 3 to 5 m) 95% typical (WAAS accuracy in North America)

**Velocity:** 0.328 ft./sec. (0.1 m/sec) steady state

**Interfaces:** USB mass storage device

**Data Storage Life:** Indefinite; no memory battery required

**Map Storage:** Internal or  
microSD™ Card

to 30,000 ft. (from -610  
to 9144 m)

## Performance

**Receiver:** more than 12 channel  
WAAS enabled/High  
sensitivity

**Acquisition Times:** < 1 second  
(warm start)  
< 33 seconds (cold  
start)  
< 36 seconds  
(autolocate)

**Update Rate:** 1/second,  
continuous

**Compass:** Accuracy:  $\pm 2$  degrees  
( $\pm 5$  degrees in extreme  
Northern and Southern  
latitudes)\*  
Resolution: 1 degree

**Altimeter:** Accuracy:  $\pm 10$  ft. ( $\pm 3$   
m)\*  
Resolution: 1 ft. (.3 m)  
Range: from -2,000 ft.

\*Subject to proper user calibration.

## Using Demo Mode

Demo mode turns the GPS receiver off for use indoors or for practice. The unit does not track satellites in Demo mode.



**CAUTION:** Do not try to navigate using Demo mode because the GPS receiver is turned off. Any satellite signal-strength bars shown are only simulations and do not represent the strength of actual satellite signals.

---

To turn Demo Mode on, touch **Setup**  
> **System** > **GPS** > **Demo Mode**.

## Connecting Your Dakota to a Computer

You can connect the Dakota to your computer using the supplied USB cable.

### To connect your Dakota to your computer:

1. Lift the weather cap on the top of the Dakota.
2. Insert the smaller connector on the USB cable into the USB mini-B jack.
3. Connect the other end of the cable to a USB port on your computer.

## Installing a microSD™ Card




**NOTE:** The microSD option is unavailable with the Dakota 10.

The Dakota microSD data card tray is located beneath the AA batteries. You can purchase microSD memory cards from an electronics supplier, or purchase preloaded detailed map data cards from your Garmin dealer. In addition to map and data storage, the memory cards can be used to store files such as images, cartridges, geocaches, routes, waypoints, and custom POIs. Go to <http://buy.garmin.com> for compatible map products.

### To install or remove a microSD card:

1. Slide the latch on the back of the Dakota ([page 2](#)) and remove the battery cover and the batteries.
2. Lift the metal cover.

3. Push the card into the microSD card tray and close the metal cover.

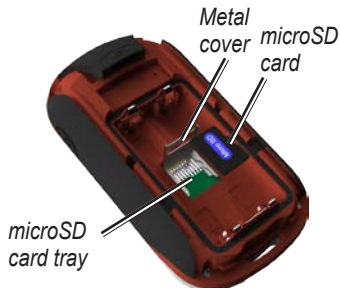

4. To remove the microSD card, lift the metal cover and remove the card from the microSD card tray.
5. Replace the batteries and the battery cover.

In addition to map and data storage, the microSD card can be used to store files such as images, cartridges, geocaches, routes, waypoints, and custom POIs.

## Transferring Files to Your Computer

After you have connected the device to your computer, you can copy and paste files from your computer into the device drives/volumes.

1. Browse your computer for the file.
2. Select the file.
3. Select **Edit > Copy**.
4. Open the "Garmin" or memory card drive/volume.
5. Select **Edit > Paste**.



Before transferring data to or from a Web site directly to the Dakota, install the Garmin Communicator plug-in from [www.garmin.com/products/communicator](http://www.garmin.com/products/communicator).

## Loading and Deleting Files

You can use the Dakota as a USB mass storage device, and you can purchase a separate microSD card for additional external memory.



---

**NOTE:** The Dakota is not compatible with Windows® 95, 98, Me, or NT. It is also not compatible with Mac® OS 10.3 or earlier.

---

### To load a file onto the Dakota or microSD card:

1. Remove the battery cover and insert a microSD card ([page 33](#)).
2. Connect the USB cable to the Dakota and your computer.
3. Copy the file from your computer.
4. Paste the file into the Garmin or the microSD card/volume.

### To delete a file from the Dakota or microSD card:

1. Open the Garmin or SD card drive/volume.
2. Highlight the file and press the **Delete** key on your computer keyboard.



---

**NOTE:** When deleting files, do not delete pre-programmed map data (files that end with “.img”). It is not recoverable.

---

## Optimizing Battery Life

Use premium batteries for optimal performance and maximum battery life. The best performance is provided by lithium batteries, precharged (ready-to-use) NiMH batteries, and NiMH rechargeable batteries less than one year old with a capacity greater than 2500 mAh.

Consider the following suggestions to maximize battery life:

- Do not adjust the backlight more than is necessary ([page 3](#)). Using a backlight level above 50% of maximum level for a prolonged period of time will significantly decrease battery life.
- Select a shorter backlight timeout ([page 22](#)).
- Turn tones off if not needed ([page 22](#)).
- Turn the electronic compass off if not needed ([page 28](#)).
- If you plan on using the Dakota extensively in your automobile, consider purchasing a vehicle power cable (<http://buy.garmin.com>).


## Restoring Factory Default Settings

You can restore your Dakota to the original factory settings. Changes you have made using Setup are restored to the default settings.

To restore factory settings, touch **Setup > Reset > Restore Defaults to Factory Settings > Yes**.

## Attaching a Carabiner, Lanyard, Mount, or Other Optional Accessory

1. Position the accessory in the slots on the mounting spine of the Dakota.

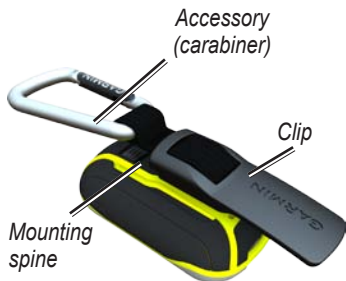


2. Slide the clip up until it locks in place.

To remove the clip, lift the bottom of the clip and slide the clip off the mounting spine.

## Calibrating the Touchscreen

The Dakota screen does not normally require calibration. However, if the buttons do not seem to be responding properly, use the following process.

### To calibrate the touchscreen:

1. While the unit is turned off, press and hold  for approximately 30 seconds.
2. Follow the instructions on the screen until "Calibration is complete" is displayed.

## Software License Agreement

BY USING THE Dakota, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.

You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade secret of Garmin. You agree not to decompile,

disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

## Declaration of Conformity (DoC)

Hereby, Garmin, declares that this Dakota is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

To view the full Declaration of Conformity, see the Garmin Web site for your Garmin product:  
[www.garmin.com](http://www.garmin.com)



# Index

## A

- accessories 1
- active route 14
- advanced map setup 23
- alarm clock 18
- alarms, marine 26
- altimeter
  - calibration 29
  - setup 28
- ambient pressure 28
- automotive mode 23
- auto zoom 23
- avoidance setup 25

## B

- background
  - dashboard 19
- backlight 3
  - timeout 22
- barometer mode 28
- battery 2
  - optimal battery type 36
  - replacing 2
- bearing 27

## C

- cadence sensor 29
- calculator 17
- calendar 17
- calibration
  - altimeter 29
  - compass 9
- carabiner 37
- Communicator
  - Garmin 20

- compass
  - calibration 9
  - north reference 27
- course 27

## D

- data fields
  - changing 8, 11, 16, 23
  - show or hide 8
- default settings 36
- demo mode 32
- directional letters 27

## E

- edit
  - routes 13
- elevation
  - fixed or variable 28
- elevation/distance 28
- elevation/time 28
- elevation plot 16
  - customizing 28

**F**

factory settings 36  
fitness setup 29  
fixed elevation 28

**G**

geocaches 20  
GPS setting 22  
grid north 27  
guidance method 24

**H**

heart rate monitor 29  
hunt and fish 18

**L**

language 22  
light sectors 25  
lock on road 25  
lock screen 3

**M**

magnetic north 27  
man overboard 18  
map information 7  
marine 25  
mark waypoint 4  
microSD card  
    installing 33  
    loading files 35  
mils 27

**N**

navigation 5  
    stop 7  
north reference, compass 27  
north up 23  
numeric degrees 27

**O**

off road 24  
off road transitions 25  
on road for distance 25  
on road for time 24  
orientation, map 23

**P**

pairing 29  
plot type 28  
POI 5  
points of interest 5  
position format 27  
pressure  
    ambient 28  
    barometric 28  
    trending 28  
    unit of measurement 26  
profiles 21

**R**

recent finds 5  
record method, tracks 24  
reverse  
    route points 14  
routes  
    calculate 25  
    edit 13  
    reverse 14  
    setup 24  
    view 14

**S**

satellite signals 3  
SD card 33  
sensors 29  
serial number 1  
share wirelessly 17  
sight N go 18  
size of an area  
    calculating 17  
spot soundings 25  
stop navigating 7  
stopwatch 18  
sun and moon 17

**T**

text size, maps 23  
timeout, backlight 22  
time zone 26  
tones 22  
tracks  
    clearing current 15  
    recording 24  
    setup 24  
    viewing 15  
track up 23  
trip computer 19  
true north 27

**U**

unlock screen 3

**V**

variable elevation 28  
view  
    tracks 15

**W**

WAAS 22  
waypoint averaging 18  
waypoints  
    creating 4  
wireless sharing 17

**Z**

zoom 23

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at [www.garmin.com](http://www.garmin.com).



© 2009–2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151<sup>st</sup> Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.  
Liberty House, Hounslow Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation  
No. 68, Jangshu 2<sup>nd</sup> Road, Sijhih, Taipei County, Taiwan

[www.garmin.com](http://www.garmin.com)

October 2010

Part Number 190-01069-00 Rev. B

Printed in Taiwan

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>